


LEQ

LEQ268..

LEQ268D..


LEQ269..

LEQ269R..

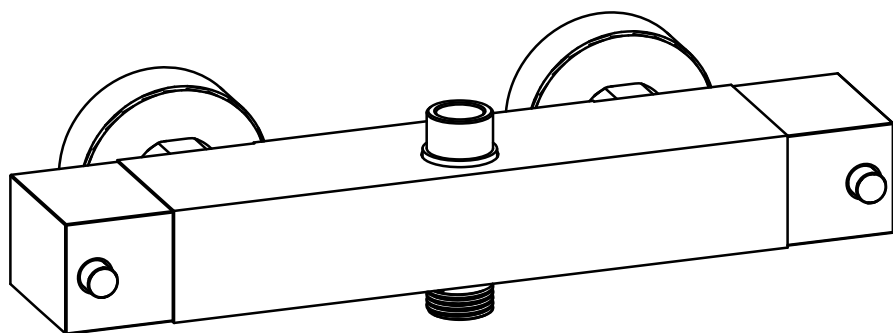

IST099
Rev.2017.00


1

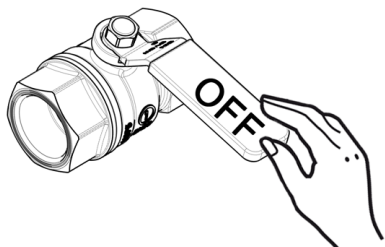

$65 \pm 5^{\circ}\text{C}$




$15 \pm 5^{\circ}\text{C}$

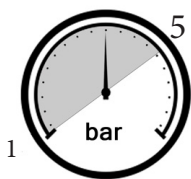

MIN - MAX




OK

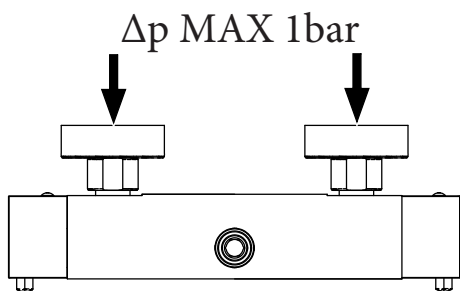


Δp : differenza pressione in entrata
different inlet water pressure

2

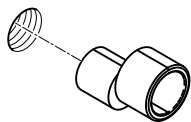

CALDO
HOT


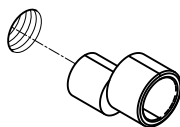


FREDDO
COLD






268
268D
269
269R


a

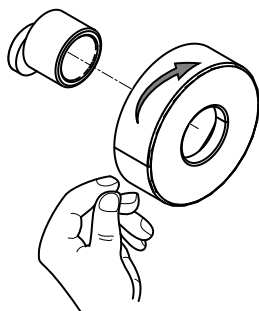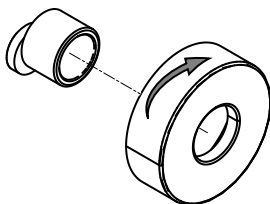

b

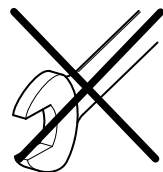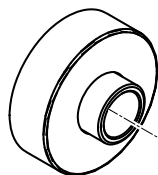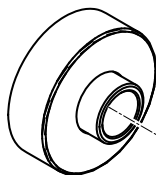


c

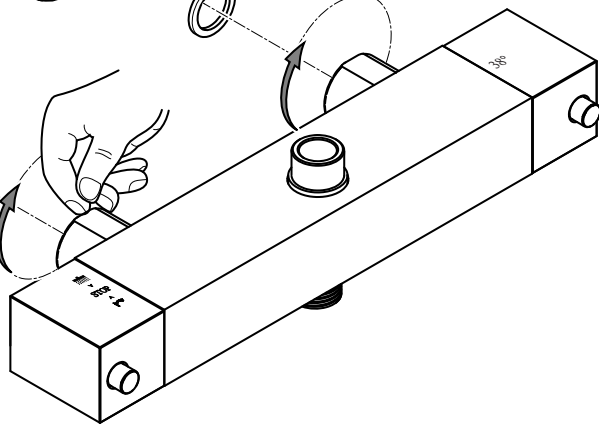


3

a

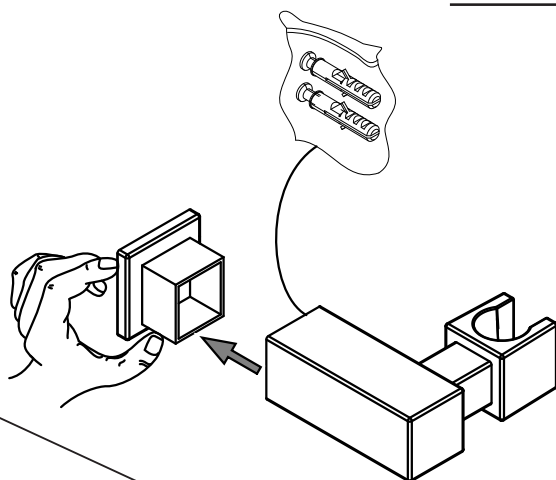


268
268D
269
269R


b

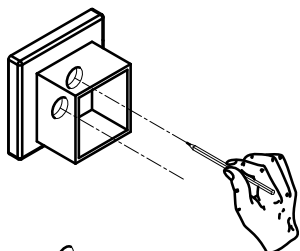


c

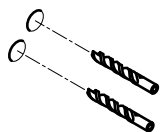

d

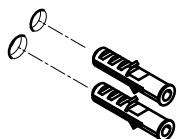


e

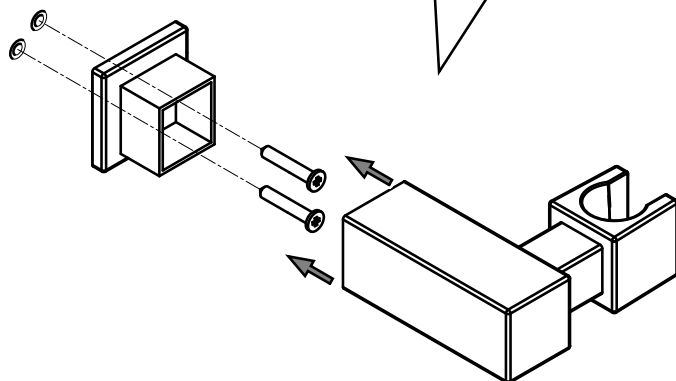

D


Deviatore Diverter

a

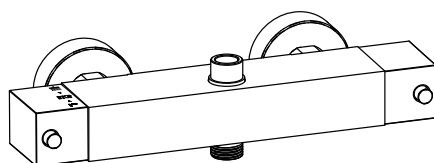


STOP

b

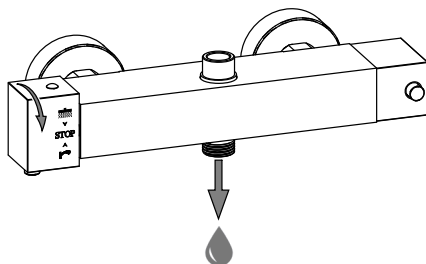


c


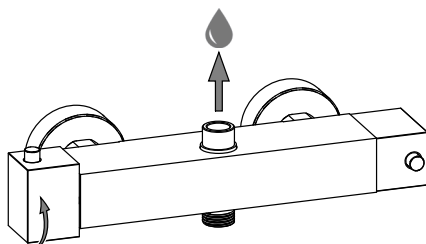



F

Funzionamento cartuccia termostatica Thermostatic Cartridge Working

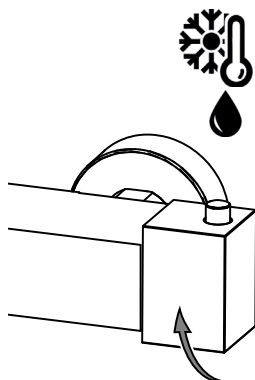


STOP 38°

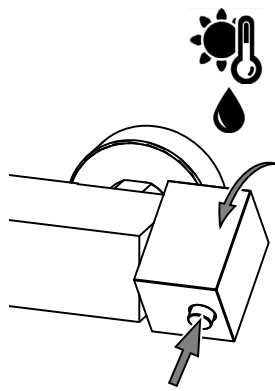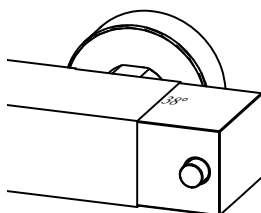


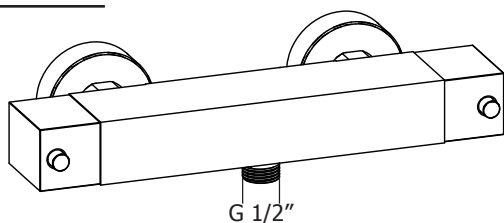

268
268D






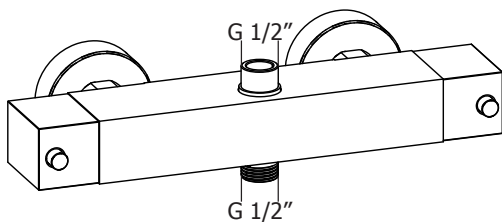


269

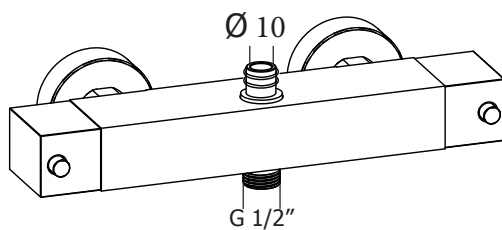

269R

M Manutenzione Service

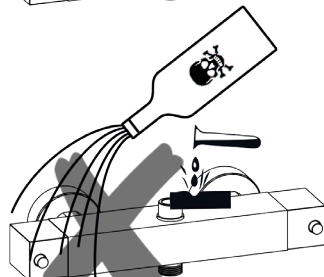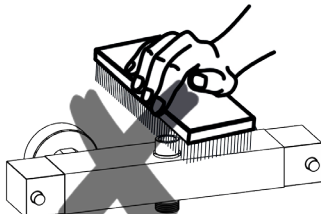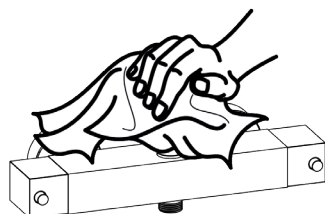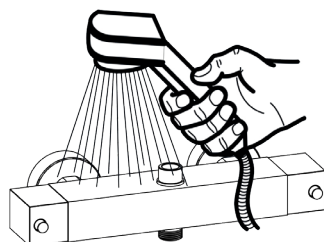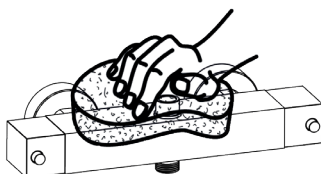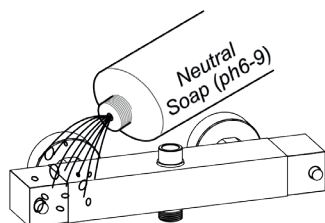




Sostituzione Cartuccia Termostatica

How to replace Thermostatic Cartridge

268
268D
269
269R

a

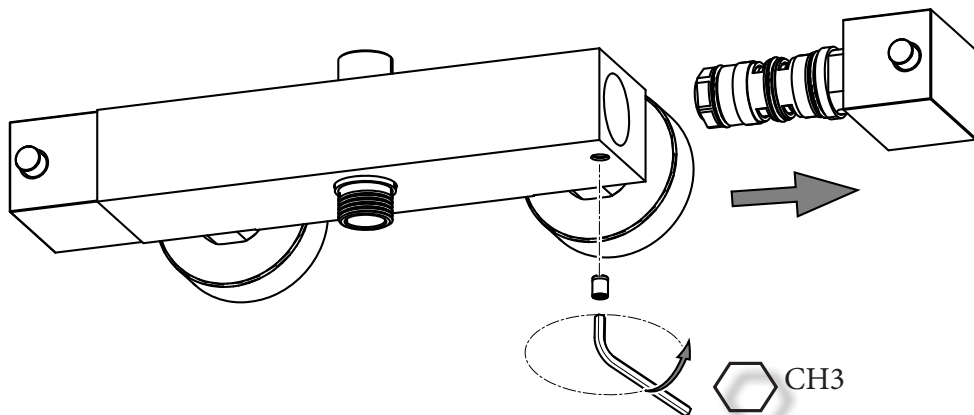


Sostituzione Sede Calotta

How to replace Seat for Nut

268
268D
269
269R

b

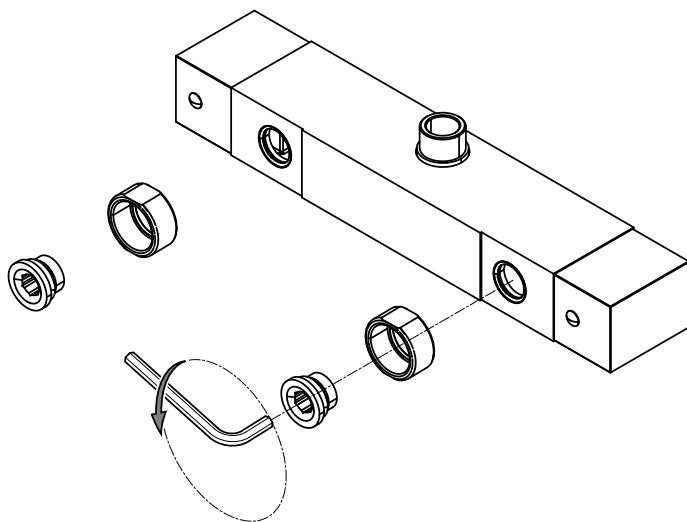





Sostituzione Deviatore How to replace Diverter

269
269R

c

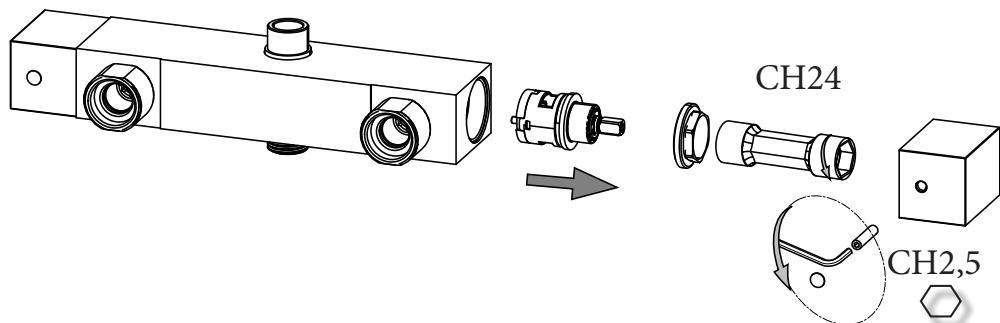

268
268D

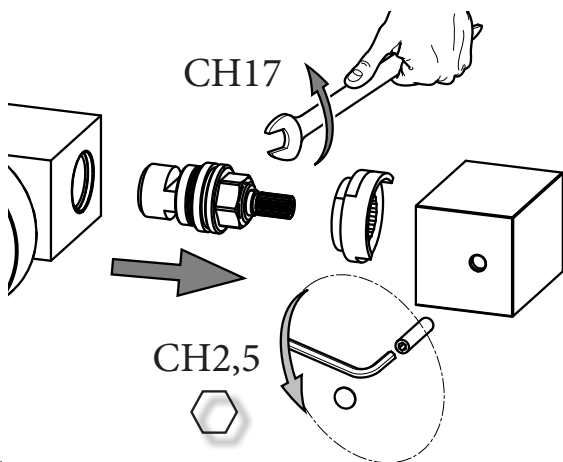

d

Sostituzione Vitone Ceramico How to replace Ceramic Disc Valve

