


LEQ

LEQ513..


LEQ518..

LEQ519..

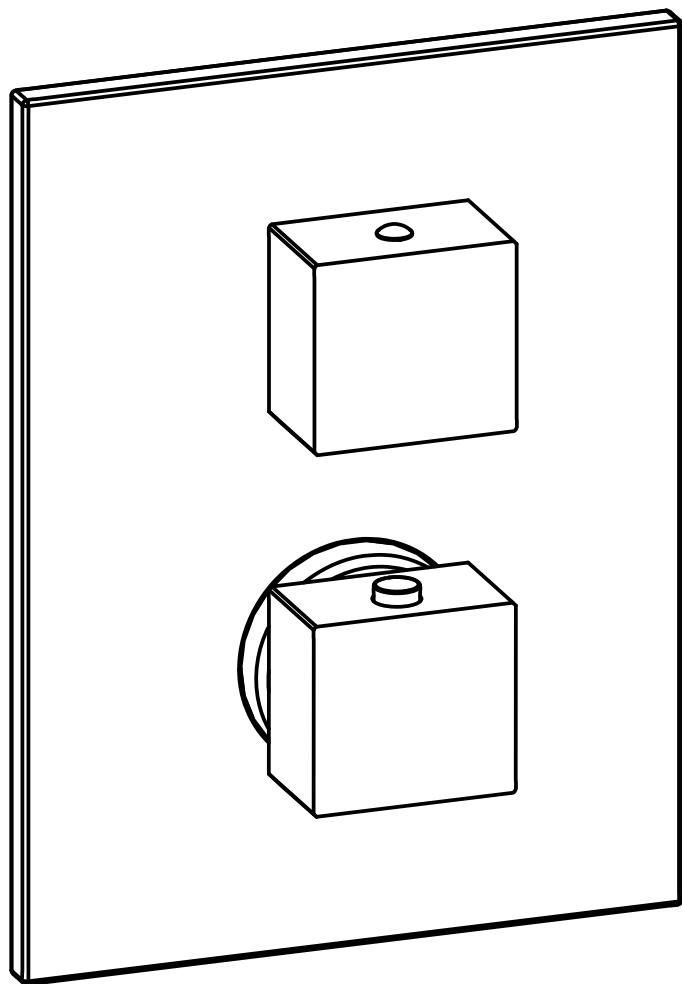


IST074
Rev.2016.03


1

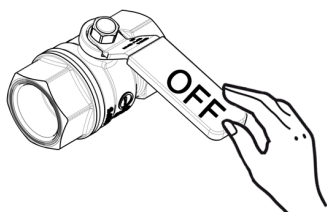

$65 \pm 5^{\circ}\text{C}$

 

$15 \pm 5^{\circ}\text{C}$

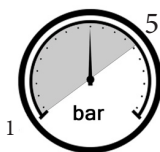


MIN - MAX



OK


Δp MAX 1bar

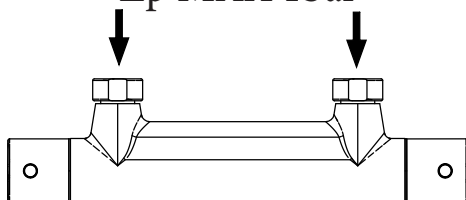

Δp : differenza pressione in entrata
different inlet water pressure

513


518

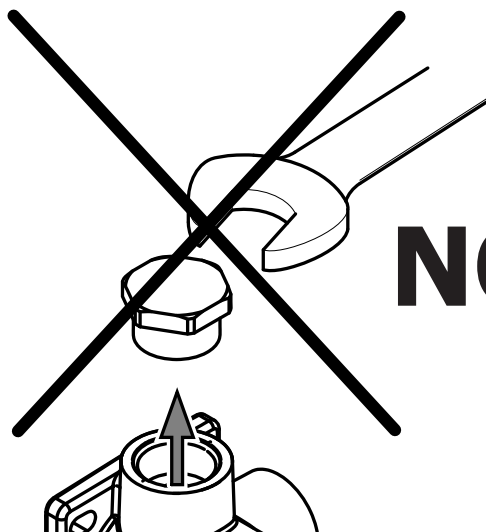

NO

2 a


513

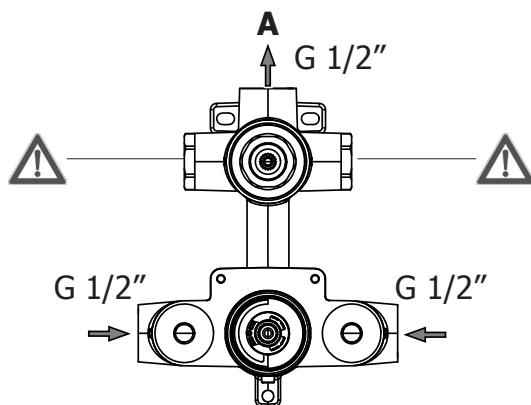

Rispettare le uscite e non rimuovere i tappi
Respect the outlets and don't remove the plug

b


518

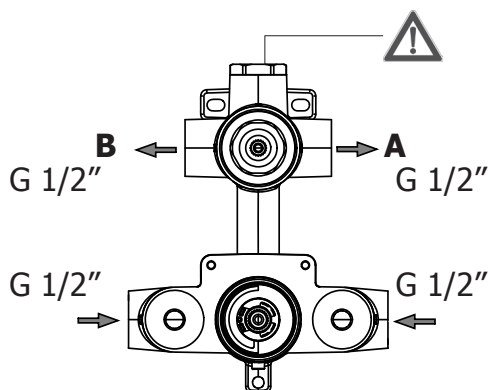

Rispettare le uscite e non rimuovere i tappi
Respect the outlets and don't remove the plug

c

519

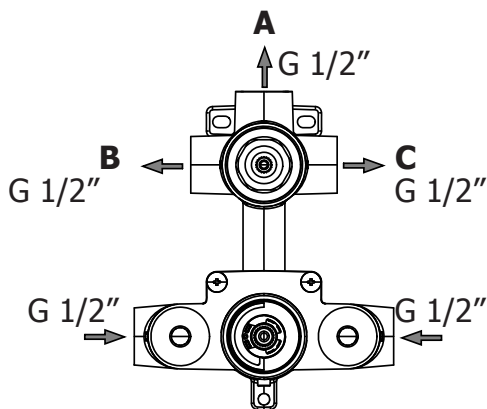


3


513

518

a

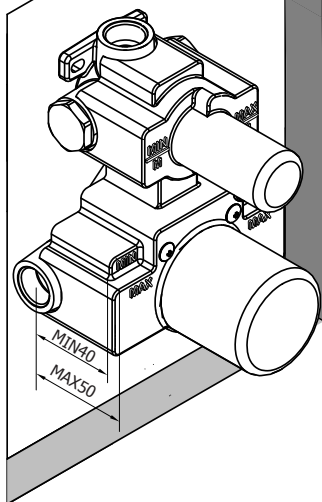


b

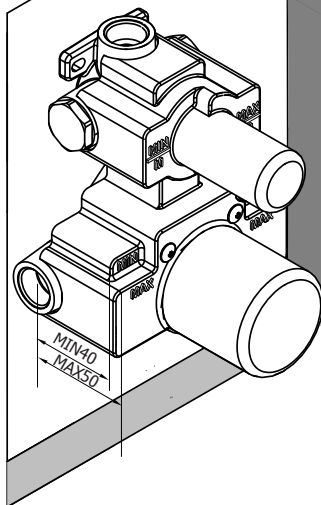


Solo per piastra in METALLO
Only for METAL wall plate


c

**CR/M
AC/M**

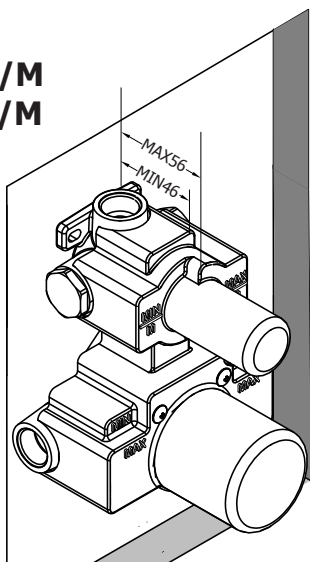




519

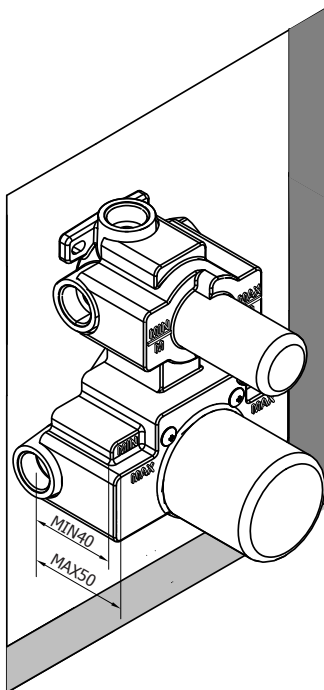

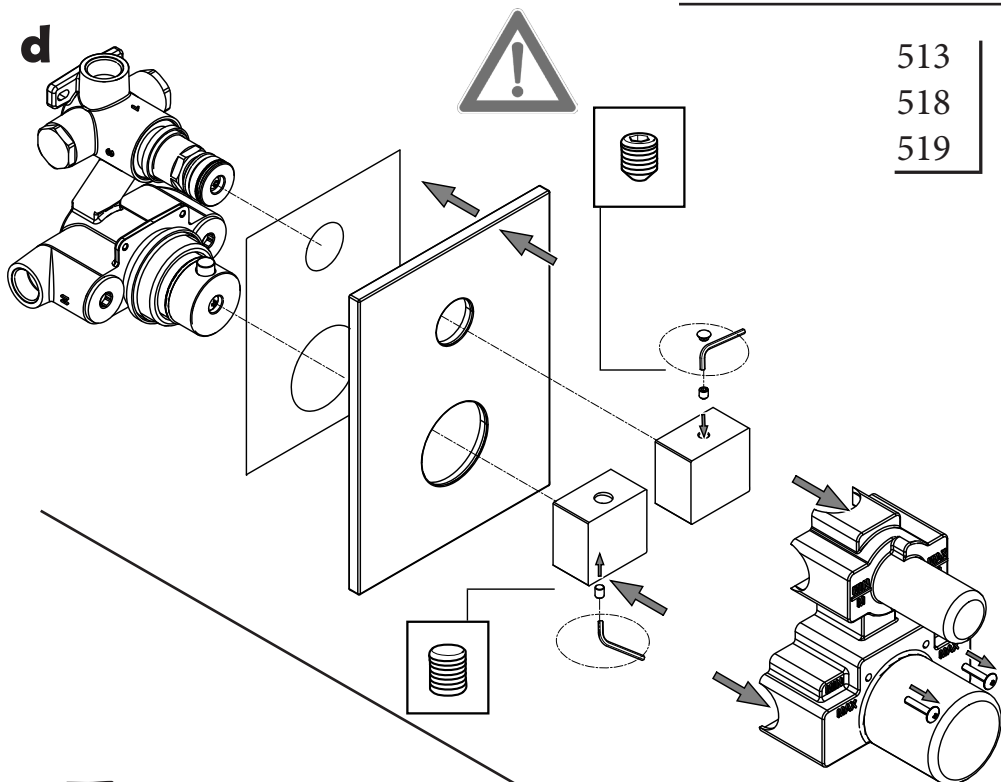

F














Funzionamento cartuccia termostatica
Working thermostatic cartridge



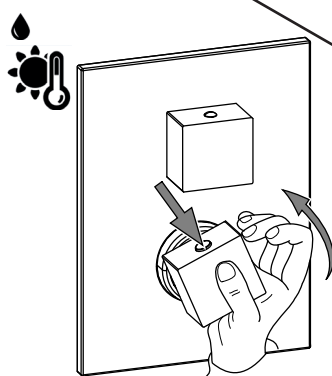
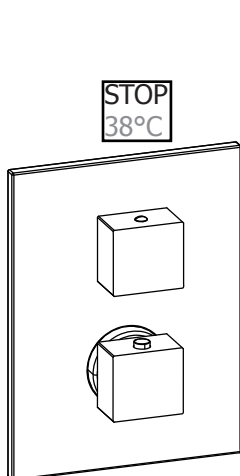
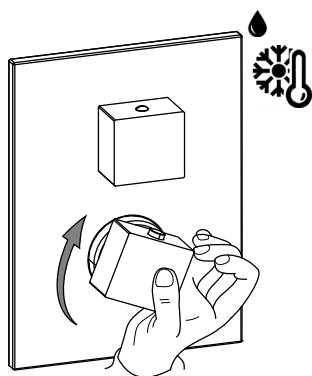


D

Funzionamento deviatore Diverter working






519

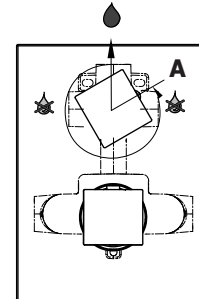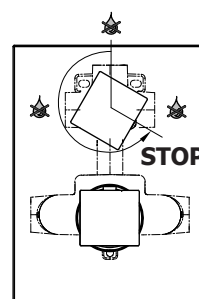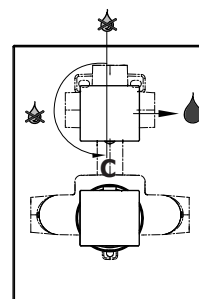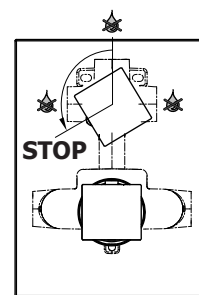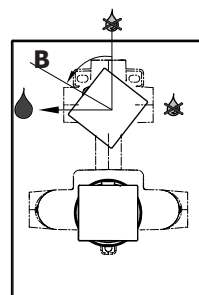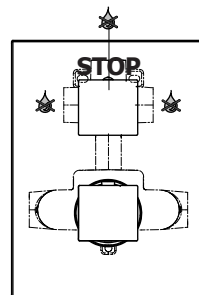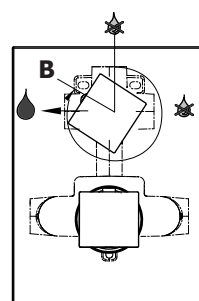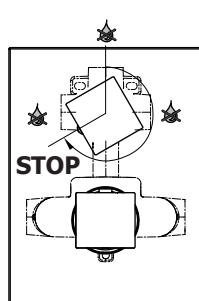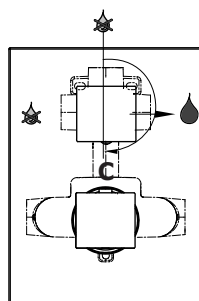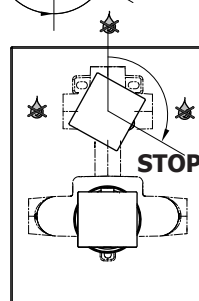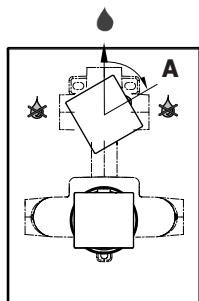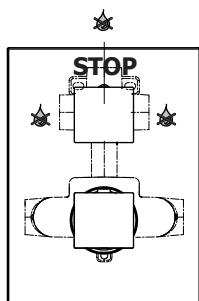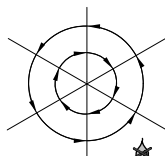

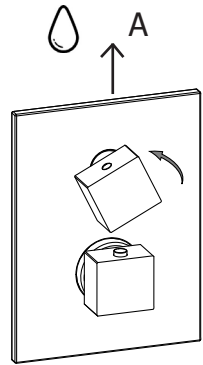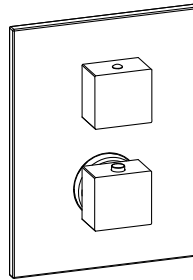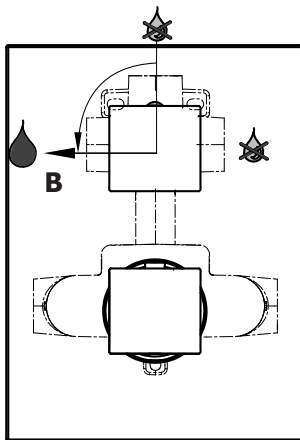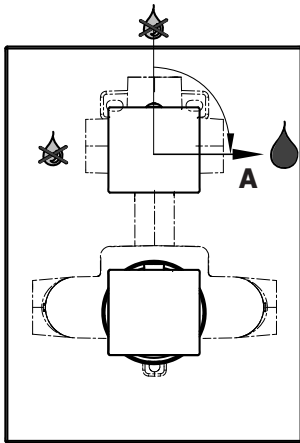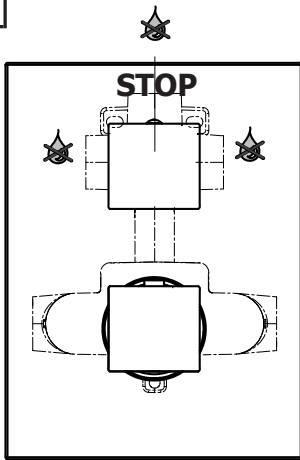

M


Manutenzione Service

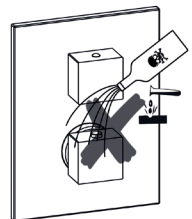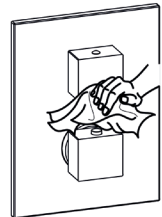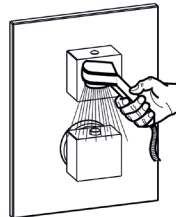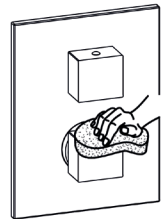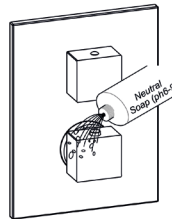

S
a

Sostituzione Cartuccia Termostatica How to replace Thermostatic Cartridge


513
518
519

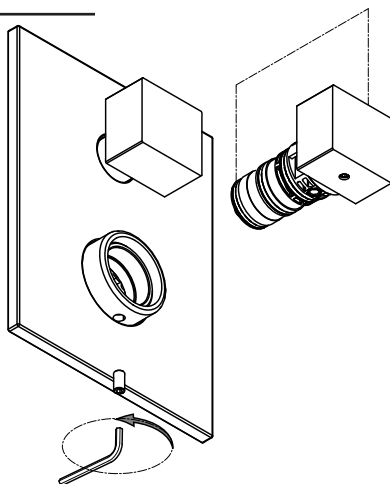


b

Sostituzione Vitone Ceramico How to replace Ceramic Disc Valve

513

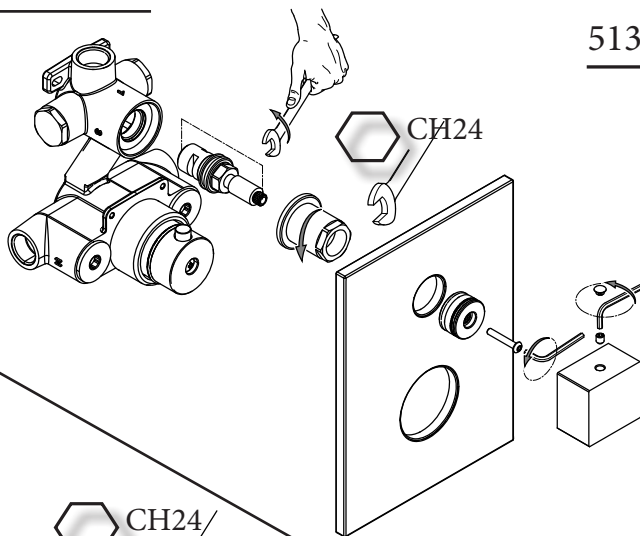

c

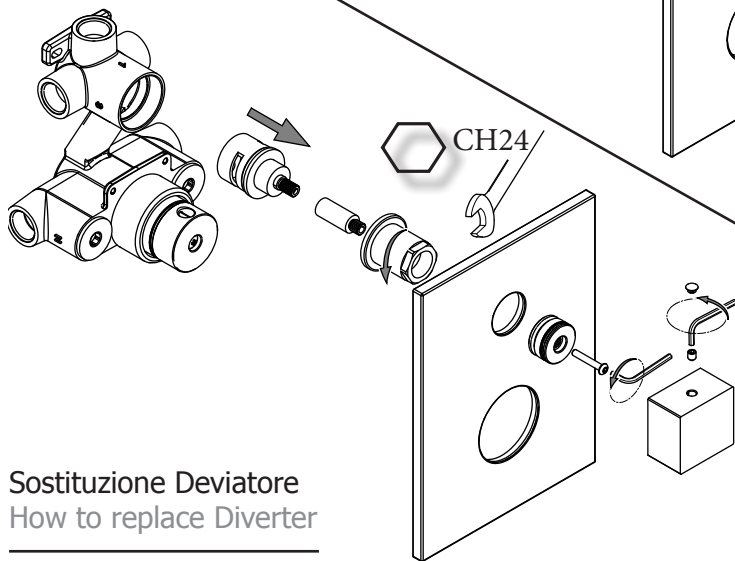

Sostituzione Deviatore How to replace Diverter

518
519