

# RINGO / WEST

RIN 075..ES WS 075..ES

RIN 071..ES WS 071..ES

RIN 070.. WS 070..

RIN 075.. WS 075..

RIN 071.. WS 071..

RIN 072.. WS 072..

RIN 073.. WS 073..

RIN 074.. WS 074..

RIN 080.. WS 080..


RIN 085.. WS 085..

RIN 081.. WS 081..

RIN 130.. WS 130..


RIN 135.. WS 135..

RIN 131.. WS 131..

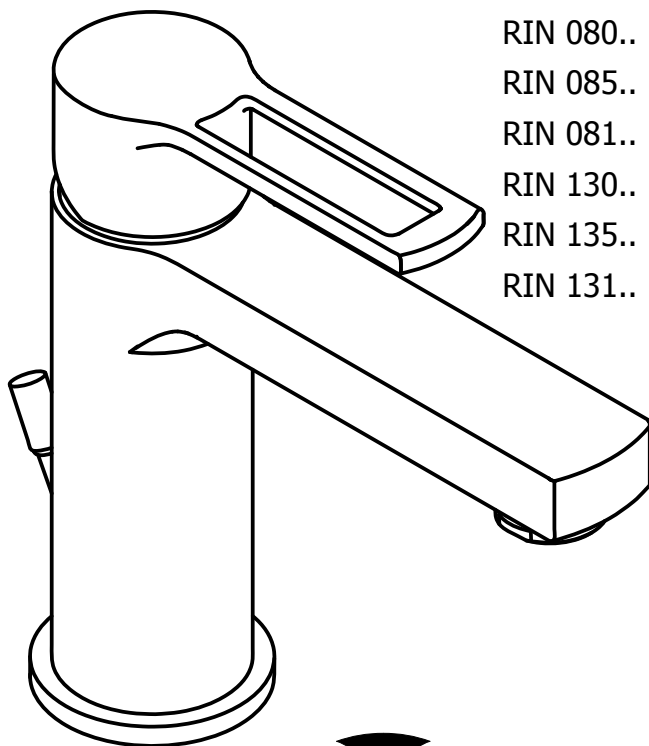

# 1


## Montaggio Assembly

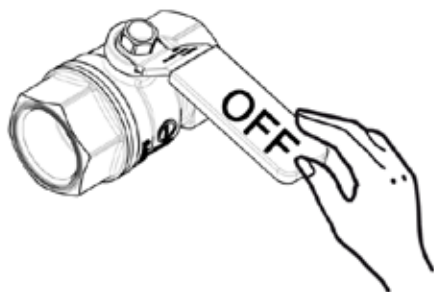

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

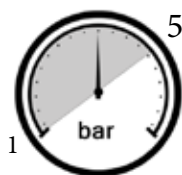


MIN - MAX



OK


**2**

**a**

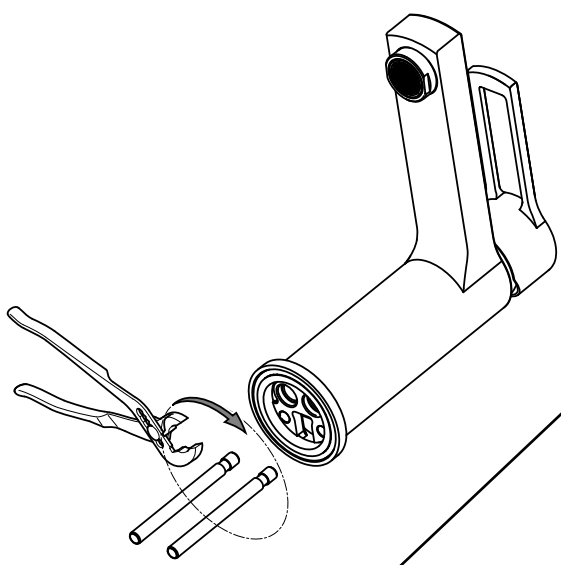



075ES 071ES  
071 070 075  
072 073 074  
081 080 085  
131 130 135

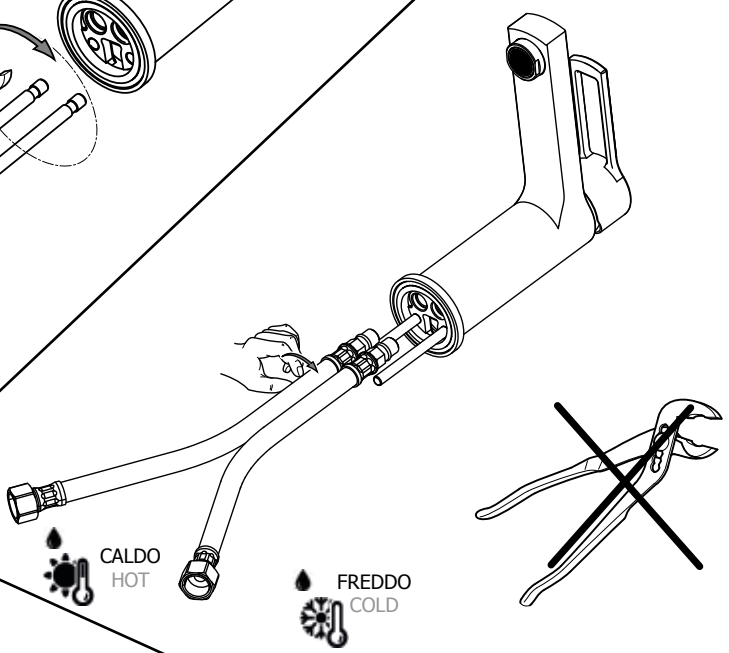
**b**



**c**


 CALDO  
HOT

 FREDDO  
COLD


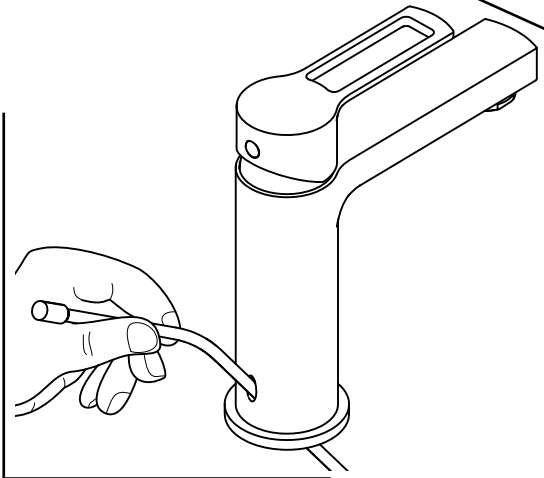


075ES  
070 075  
072 073  
080 085  
130 135

**d**

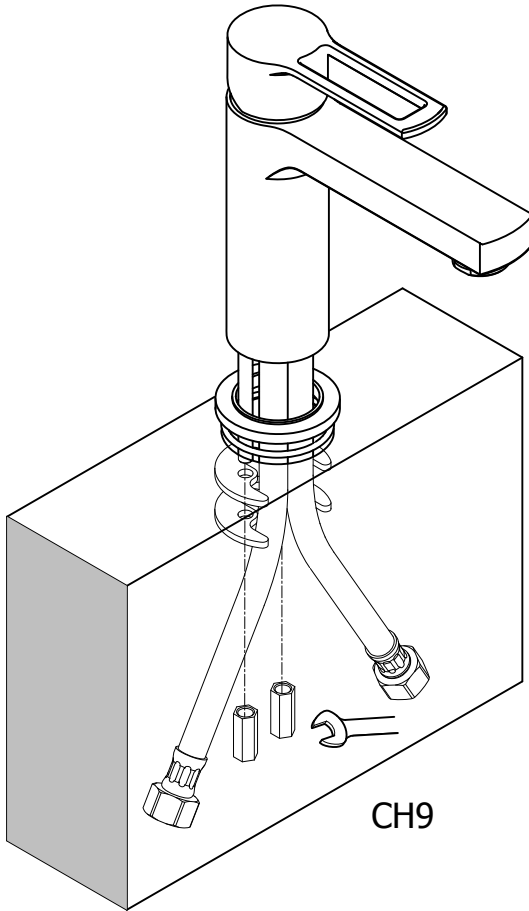

075ES 071ES  
071 070 075  
072 073 074  
081 080 085  
131 130 135

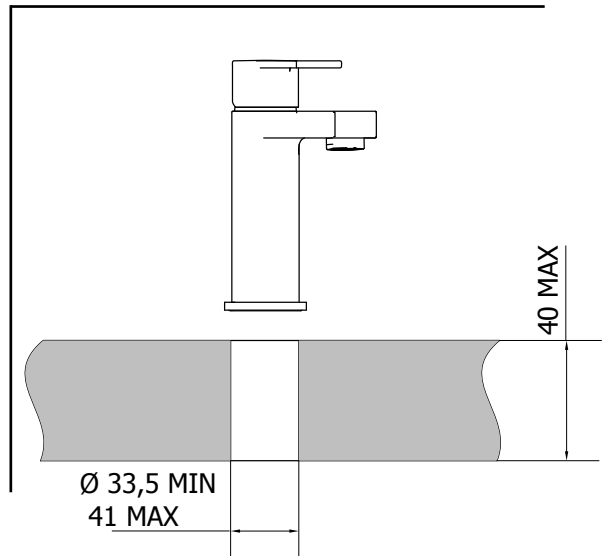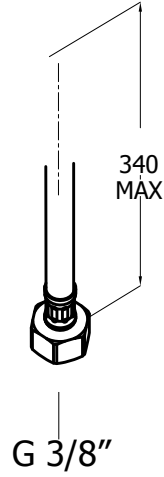

075ES



070 075

072 073

080 085

130 135




e

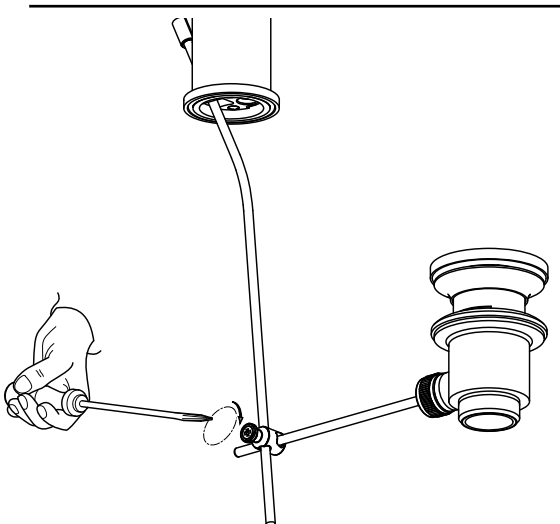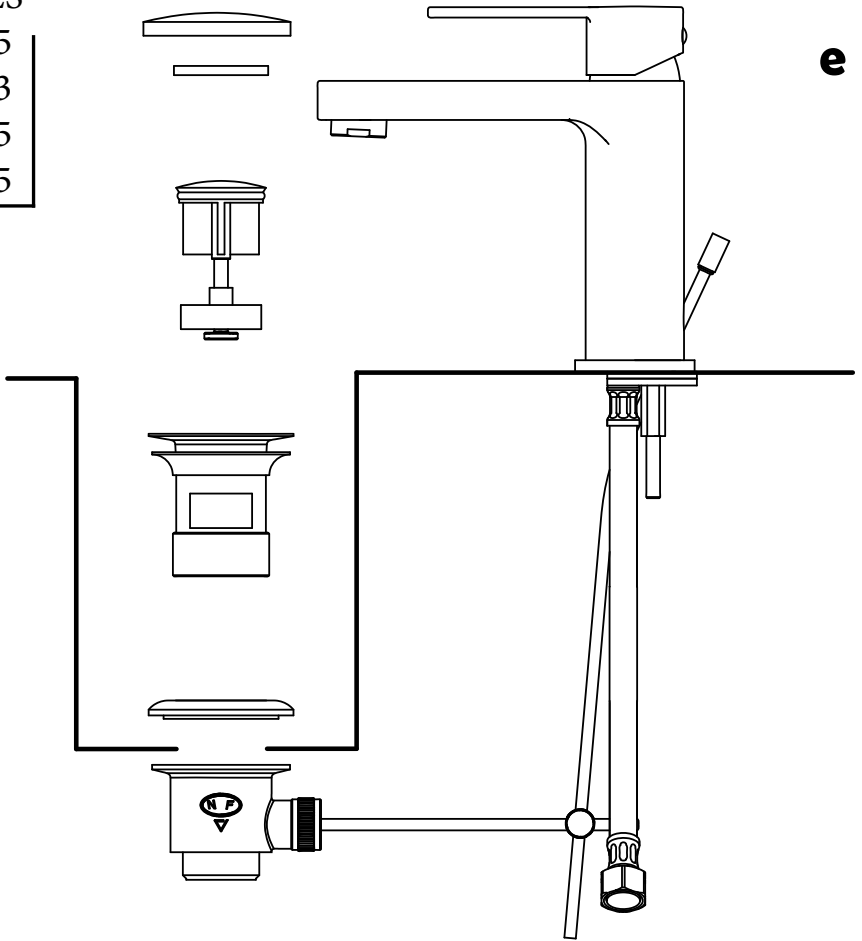

# F





## Funzionamento Working

075 ES  
071 ES

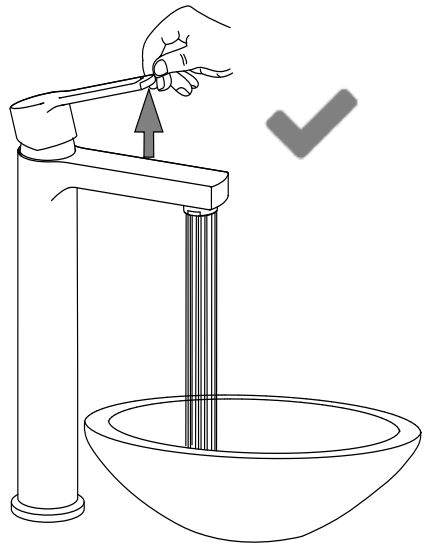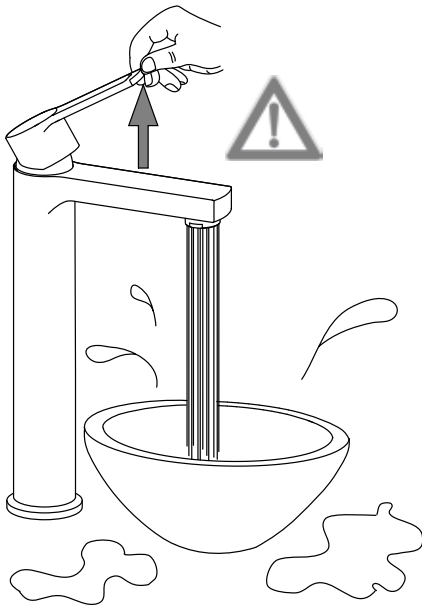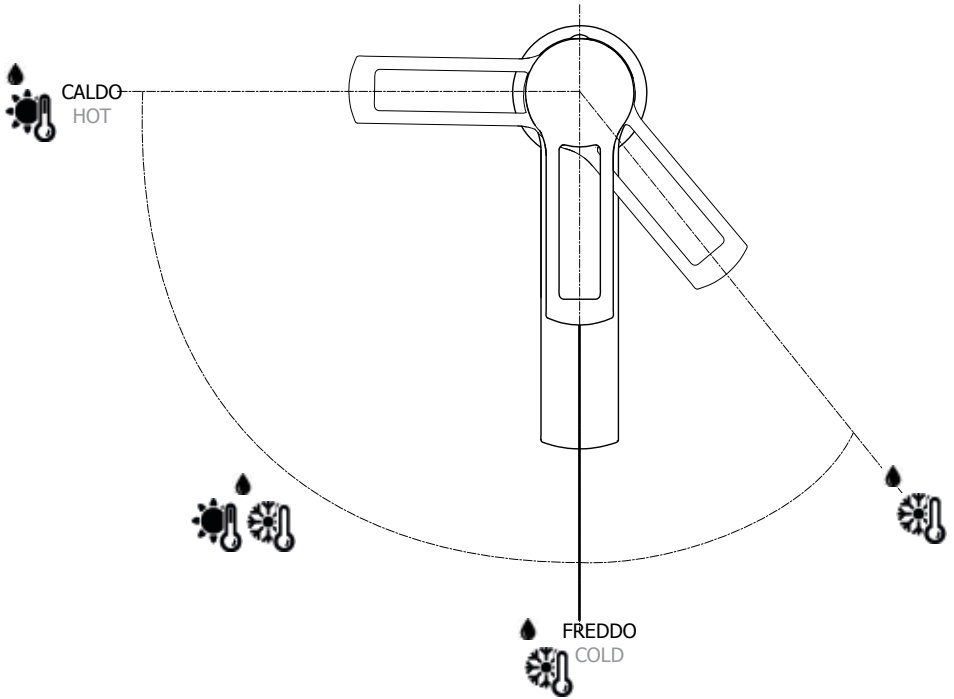

# M

Manutenzione  
Service

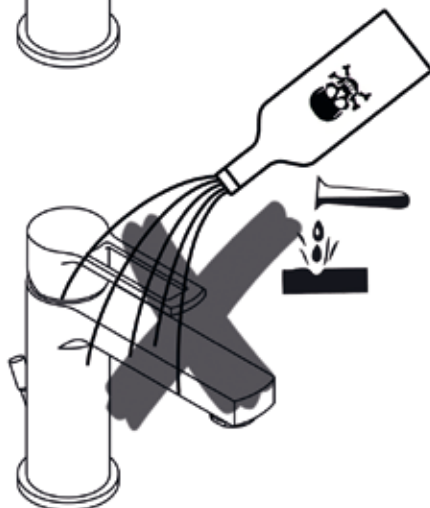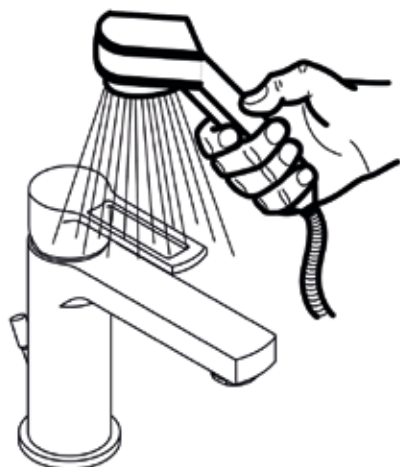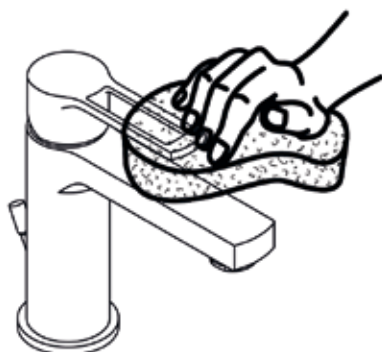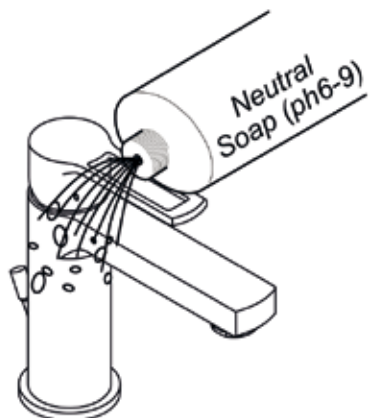




**Sostituzione Cartuccia**  
**How to replace Cartridge**

075ES 071ES  
 071 070 075  
 081 080 085  
 131 130 135


**a**

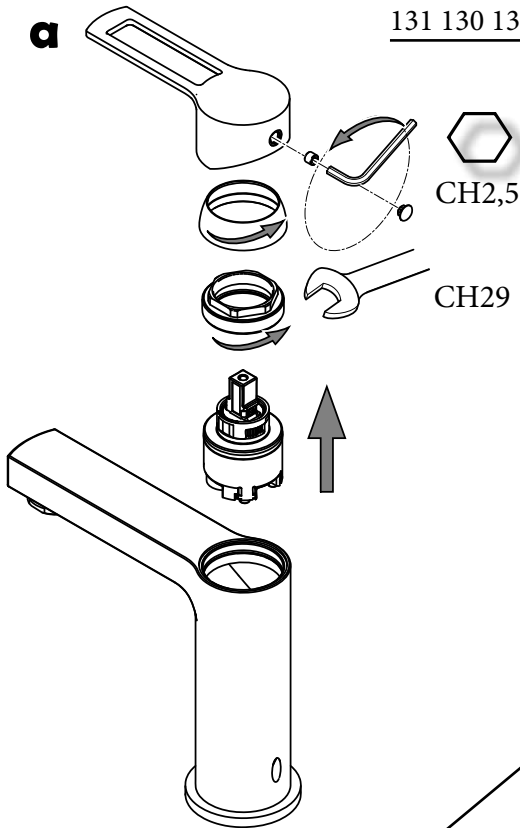

075ES 071ES  
 071 070 075  
 081 080 085  
 131 130 135

**b**

**Sostituzione Aeratore**  
**How to replace Aerator**

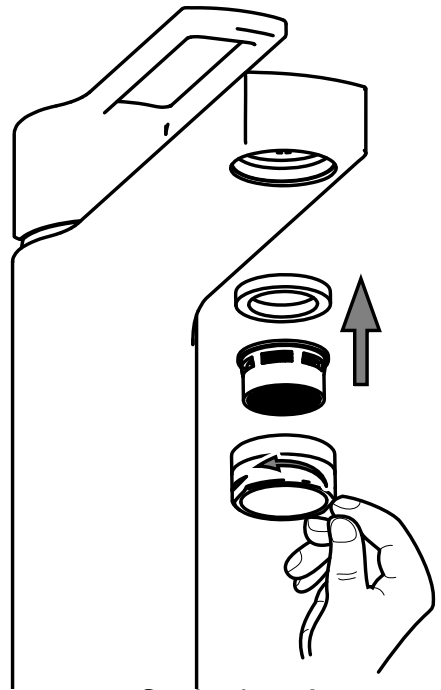

**c**

**Sostituzione Snodo**  
**How to replace Joint**

131 130 135

