

LEVEL

LEC022 / LEA022..



LEC023 / LEA023..

LEC026 / LEA026..

LEC168 / LEA168..


LEC168D / LEA168D..

LEC168R / LEA168R..

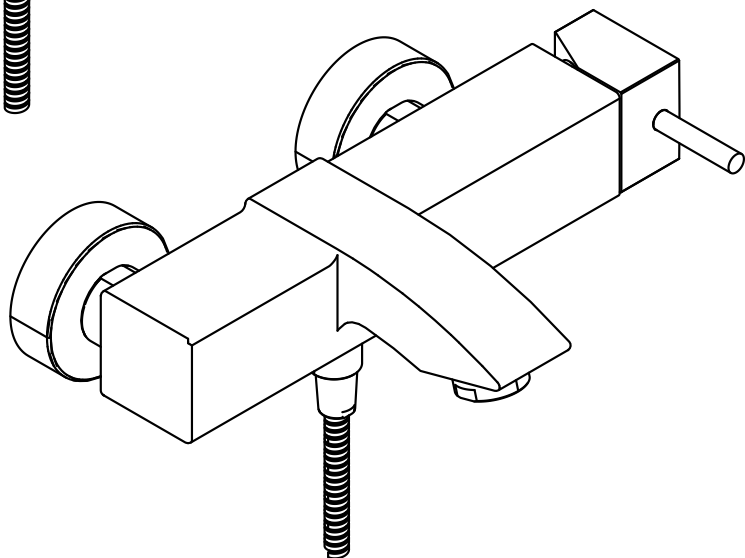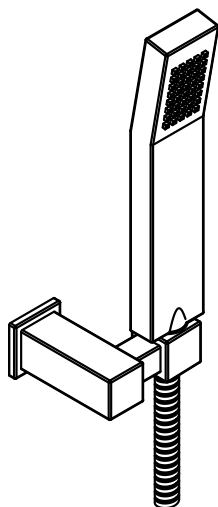

1


Montaggio Assembly

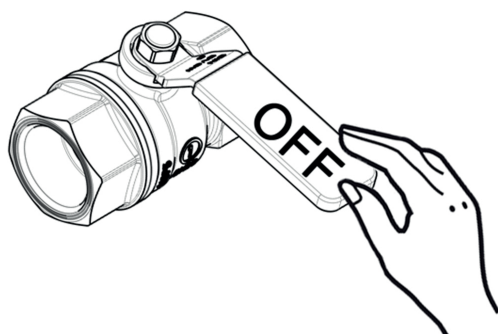

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

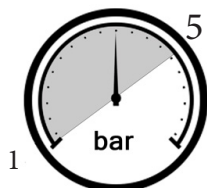


MIN - MAX




OK


2

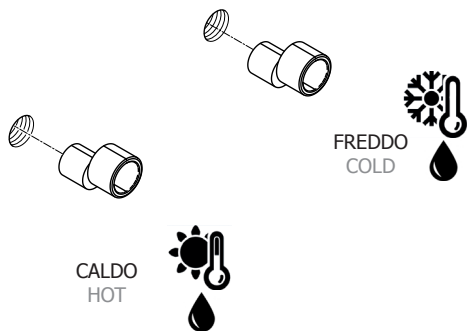

a

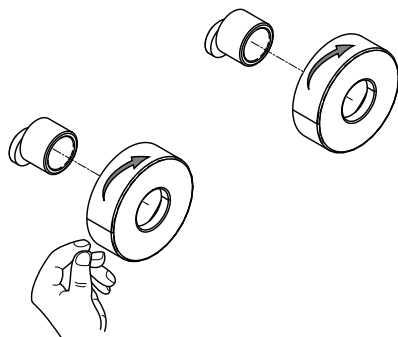


b

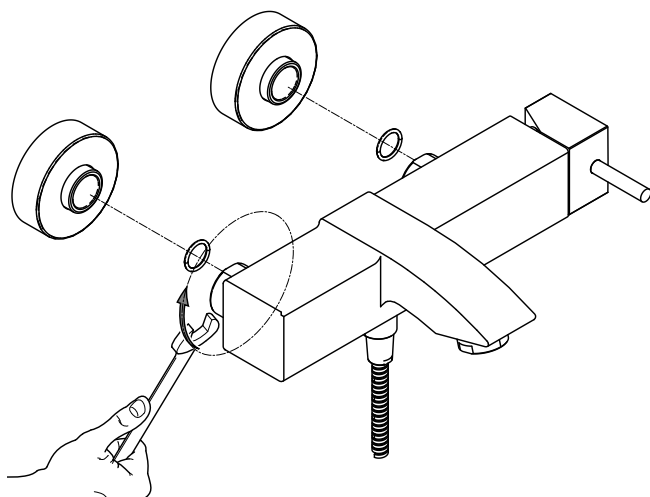

c


3

a

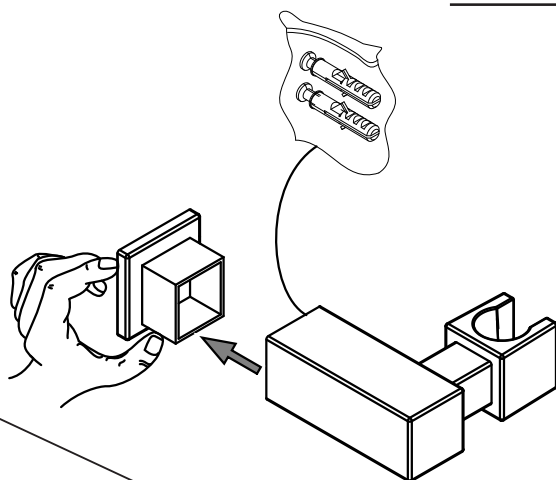


168D
023
026


b

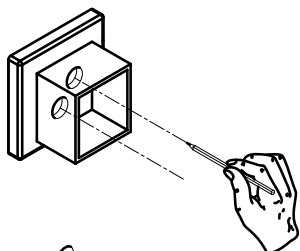



c

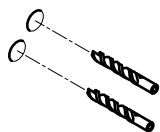

d

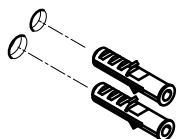

e

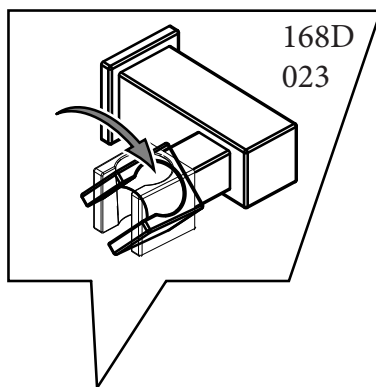
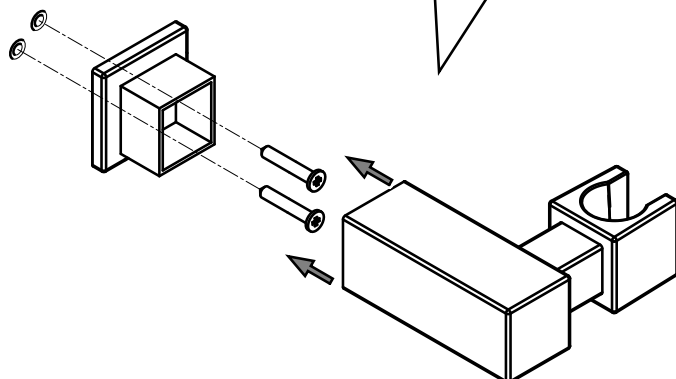


168D
023



168D
023
026

4

LEC

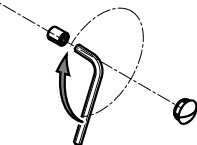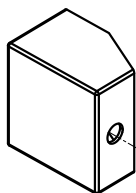

LEA

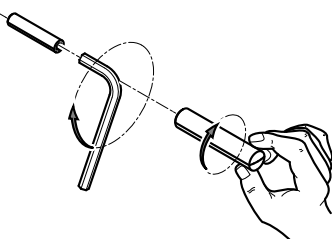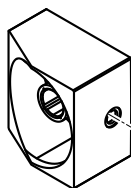

D


Deviatore
Diverter

022


023


026

a

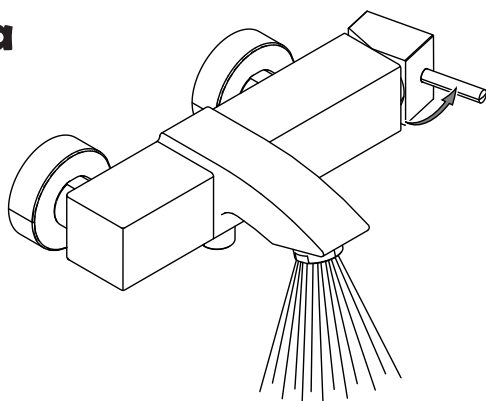


b

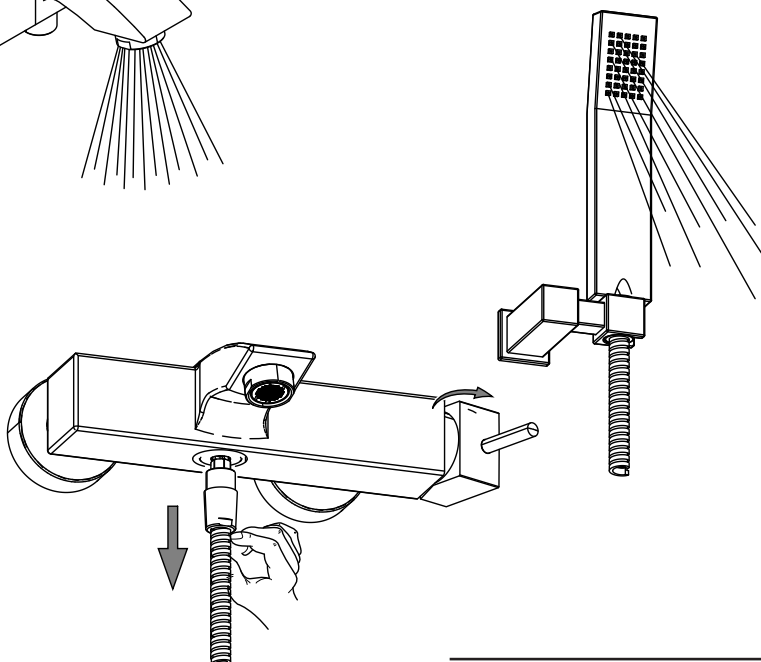






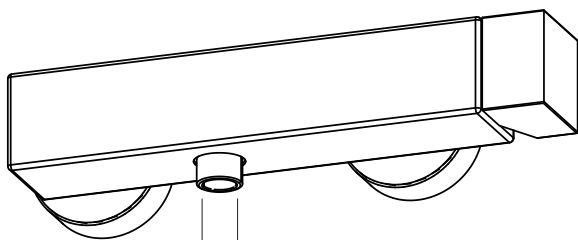


168
168D

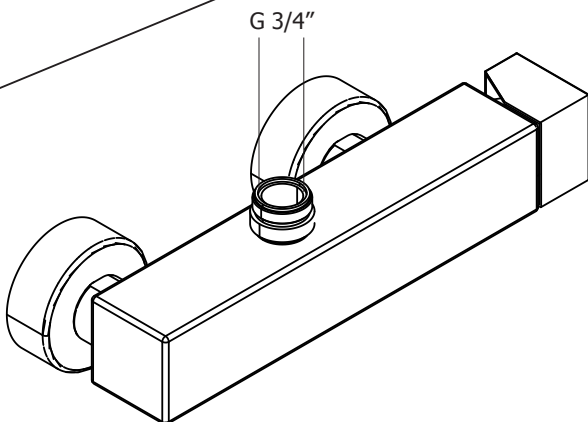

168R


M Manutenzione Service

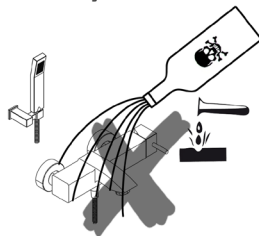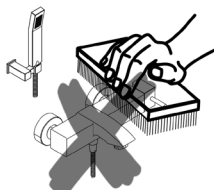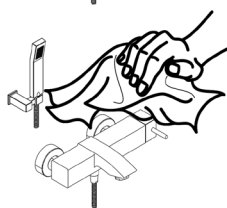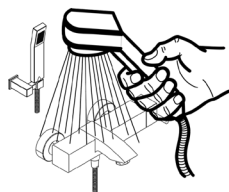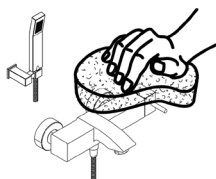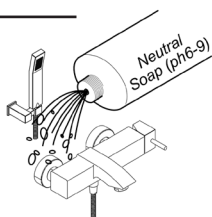




Sostituzione Cartuccia How to replace Cartridge

a

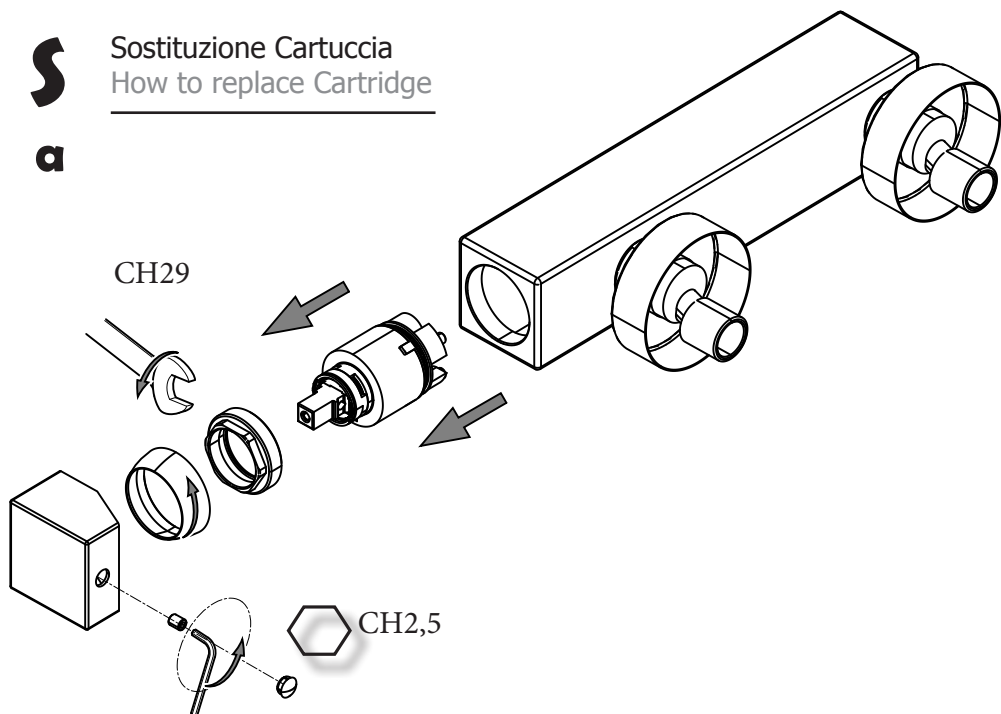

Sostituzione Sede Calotta How to replace Seat for Nut


b

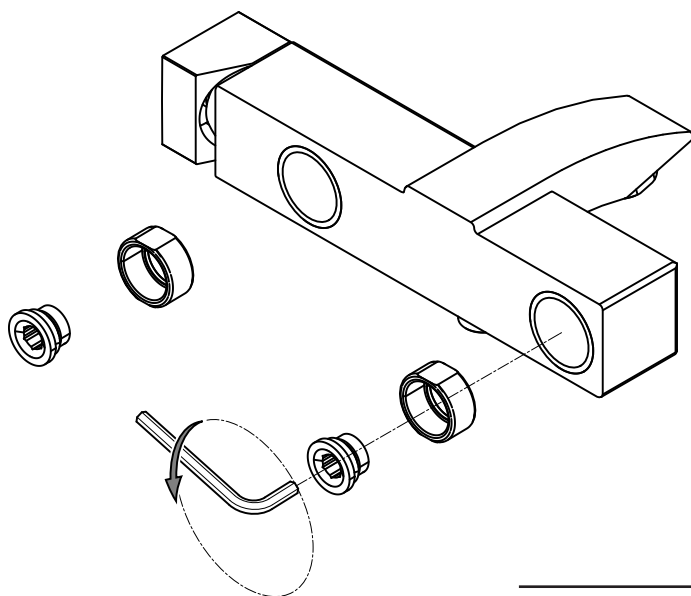



Sostituzione Deviatore How to replace Diverter

c

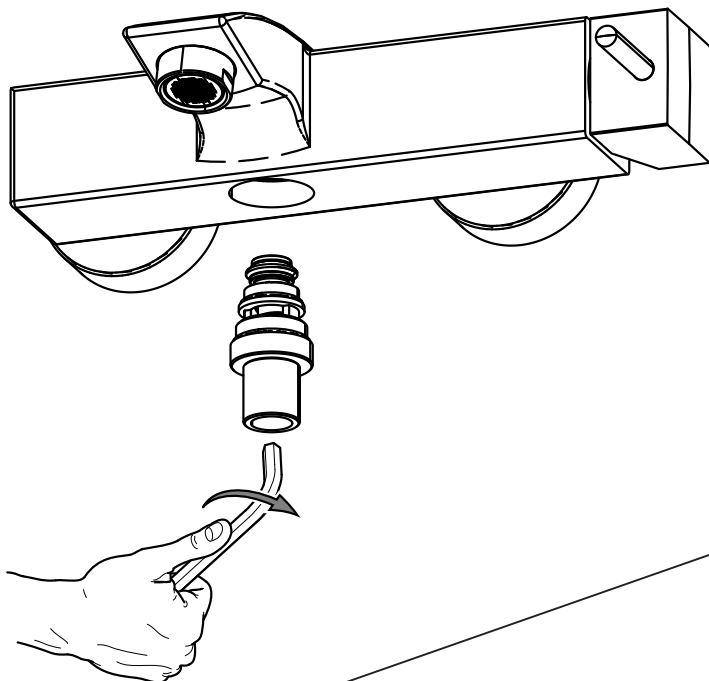

d

Sostituzione Aeratore How to replace Aerator

