 


010..

015..

018..

019..

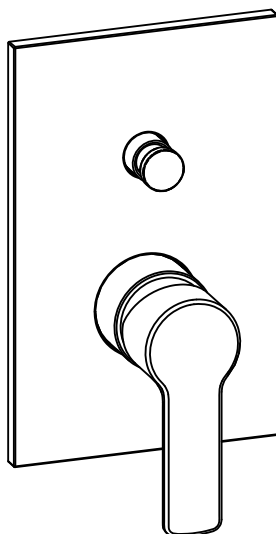

COMPATIBILITY:

ELY

EL/EF

LES/LEC/LEA

BR

BI

LIG

RIN/WS

CA

SK

SY

GR

RED

DE

DU

ND

NT

PI

APM

 
FA/GI

TA

TI

RO

LM

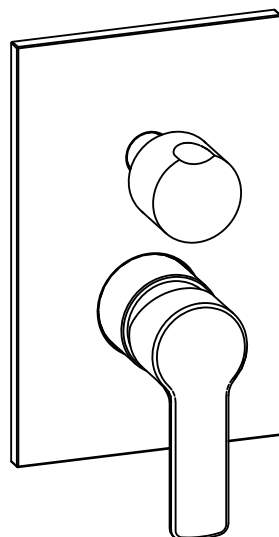

1

 
Montaggio Assembly



$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

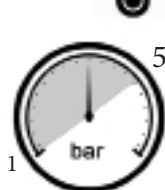


MIN - MAX




OK

Fissaggio Leve Fixing Levers

 
a

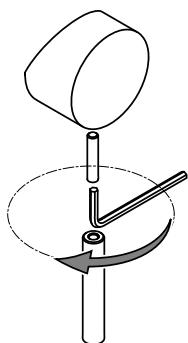


b

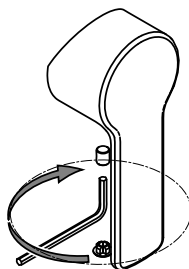 


c

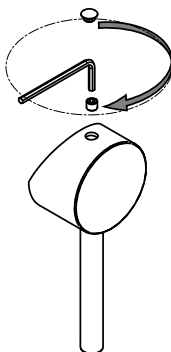 

d

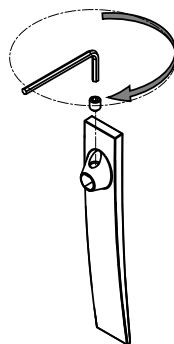 


2 a

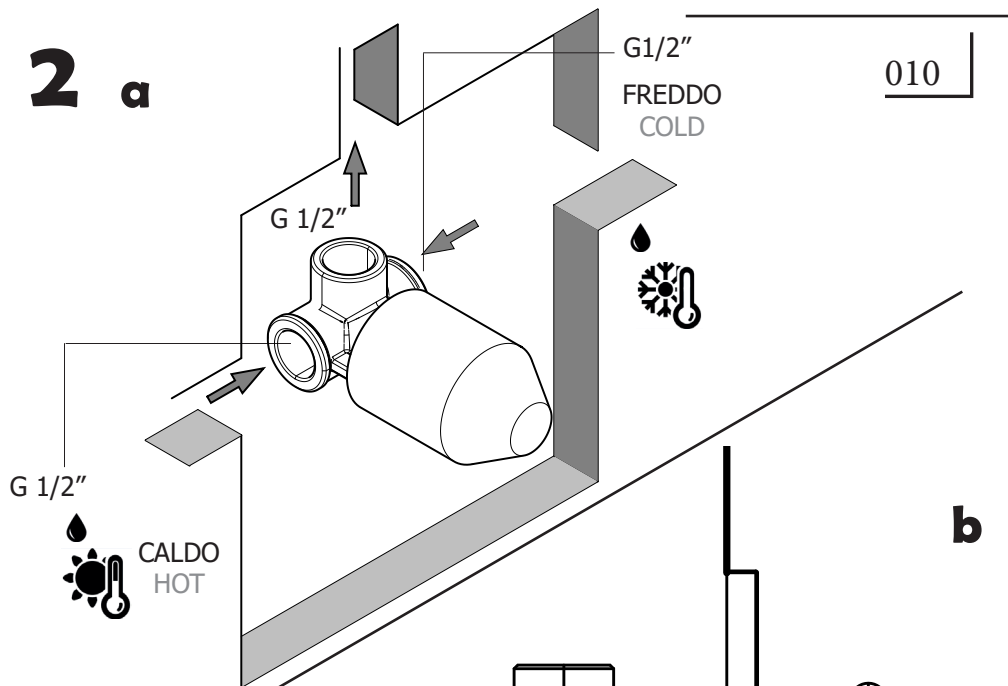 


010

 b

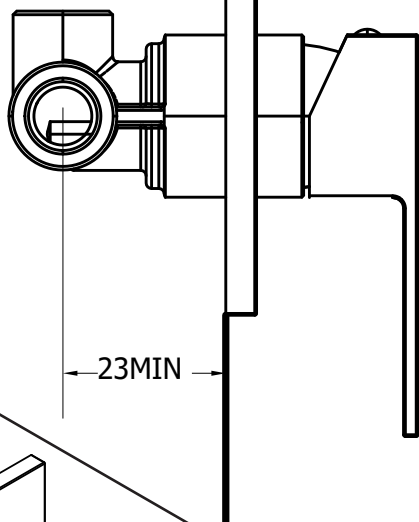


c

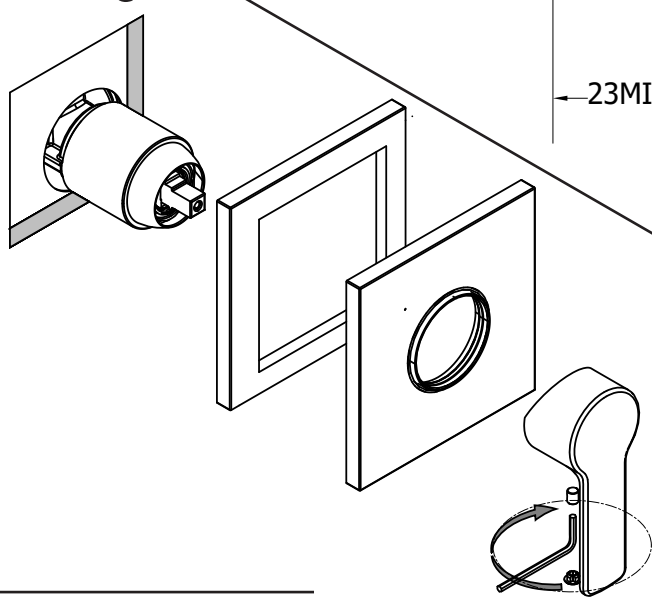 

3



 Rispettare le uscite e non rimuovere i tappi
Respect the outlets and don't remove the plug

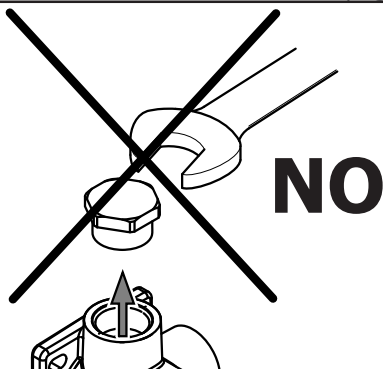

a

 
 
 
015

018

019




Rispettare le uscite e non rimuovere i tappi
Respect the outlets and don't remove the plug

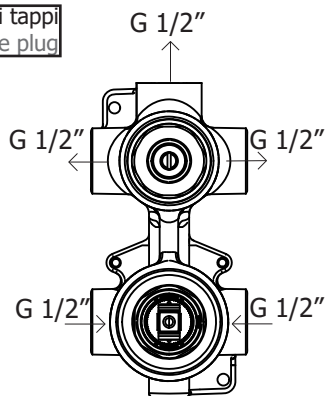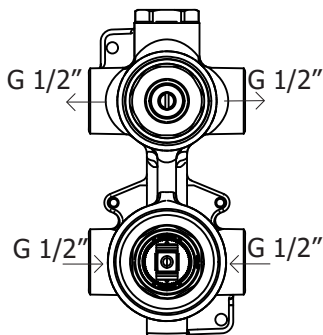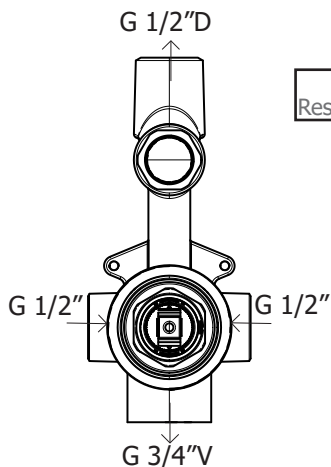

USCITA PRINCIPALE

 b

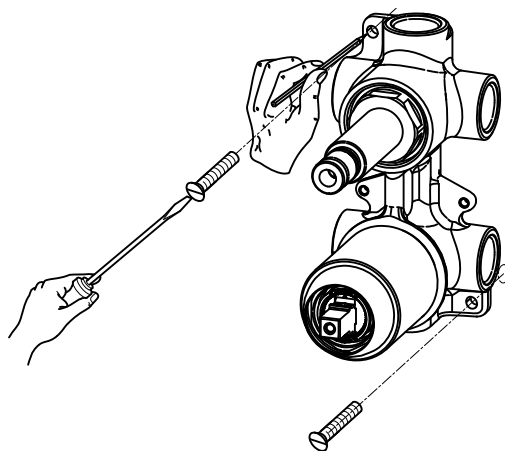



015

018

019


c

  015

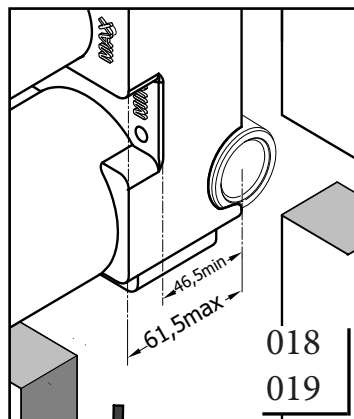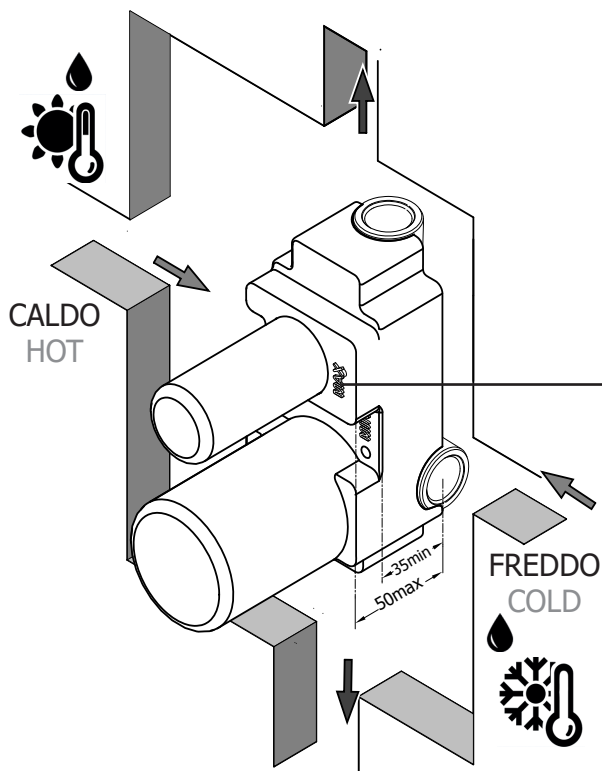


018

 019

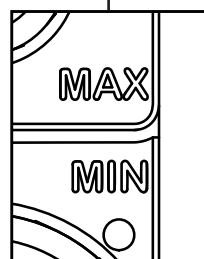


d

 015







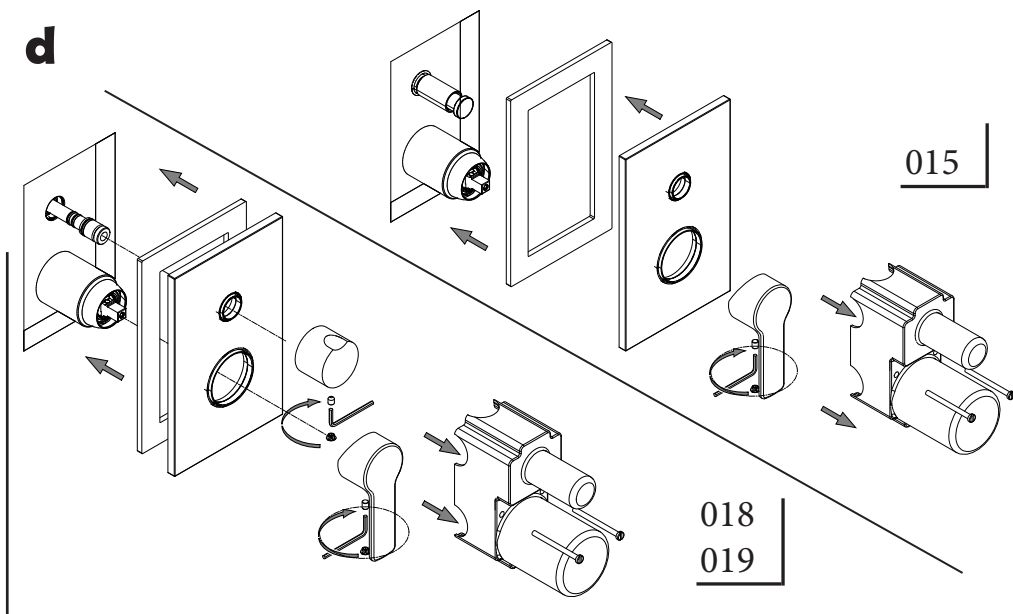


018


 
019

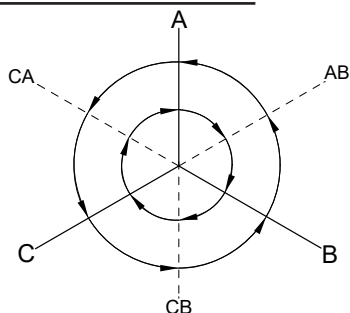

     
 
 
Posizioni maniglia e selezione uscite
Handle positions and outlets selection

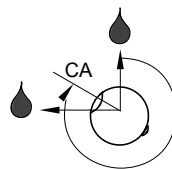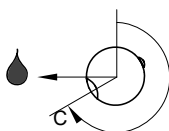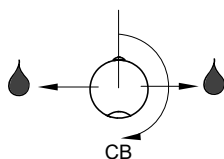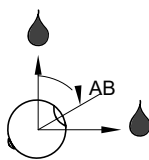

  
Controlla di aver impostato correttamente
l'uscita superiore A quindi fissare la maniglia
Check to set up accurately A upper outlet and
than fix handle

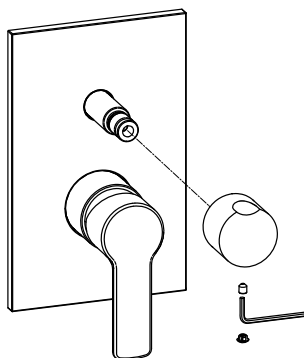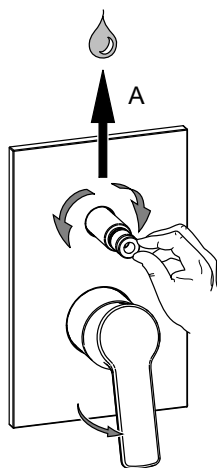


018

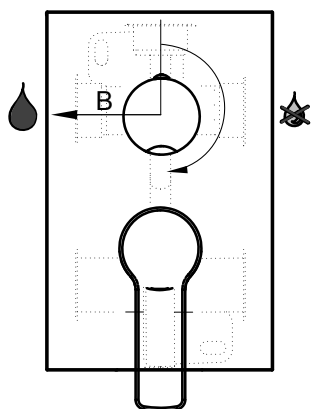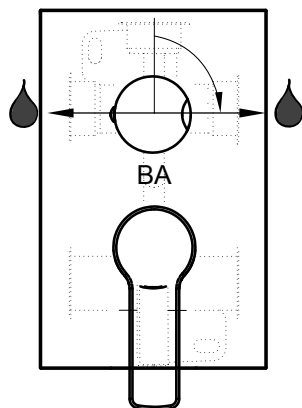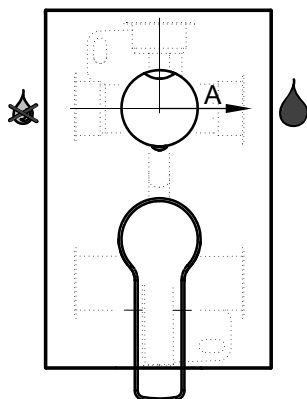   

015





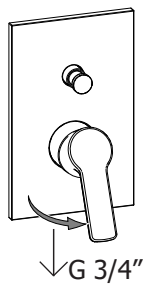 


A

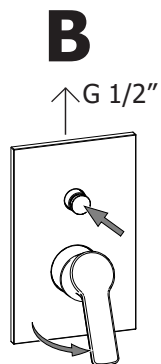 

B

     M Manutenzione
Service

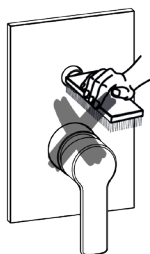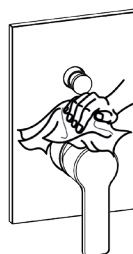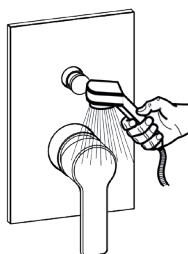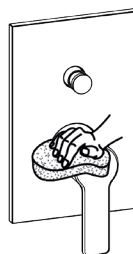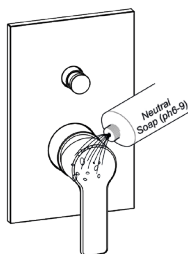




Sostituzione Cartuccia How to replace Cartridge

a

 
Per tutte le serie
For all series

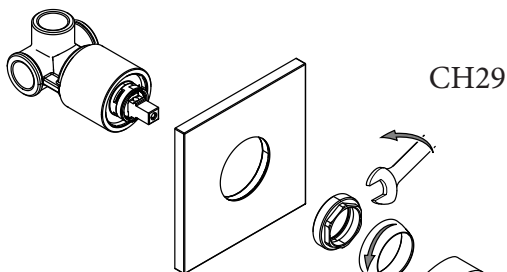


b

Sostituzione Deviatore How to replace Diverter

 Solo per Elys
Only for Elys

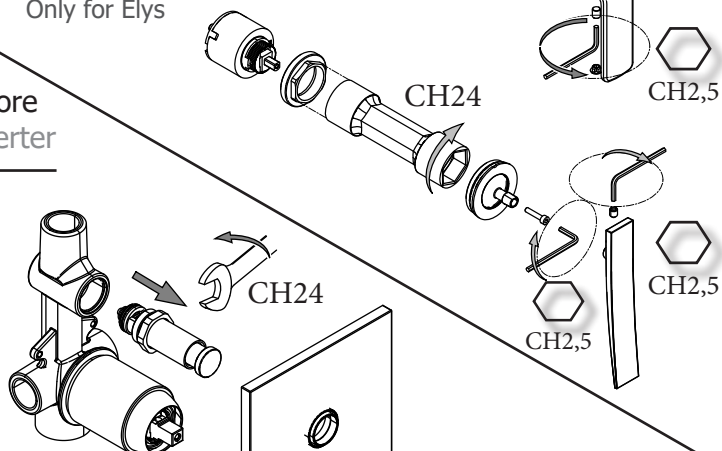

c

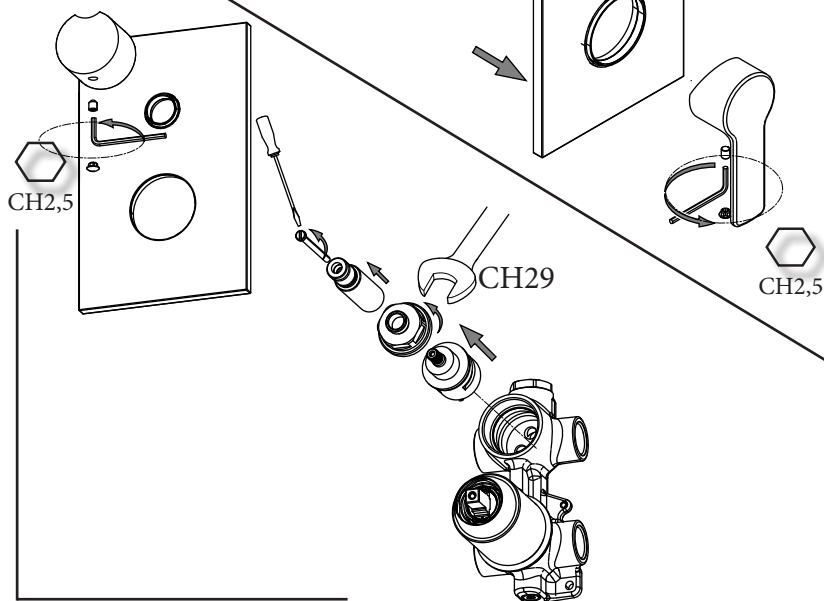 

015

018

019