




COMPATIBILITY: QTV
IRV / VLV
NI
DA
FBLV
FCMV
FMEV

050
051
052
054
055
057
058
112
116
117
118
119
150



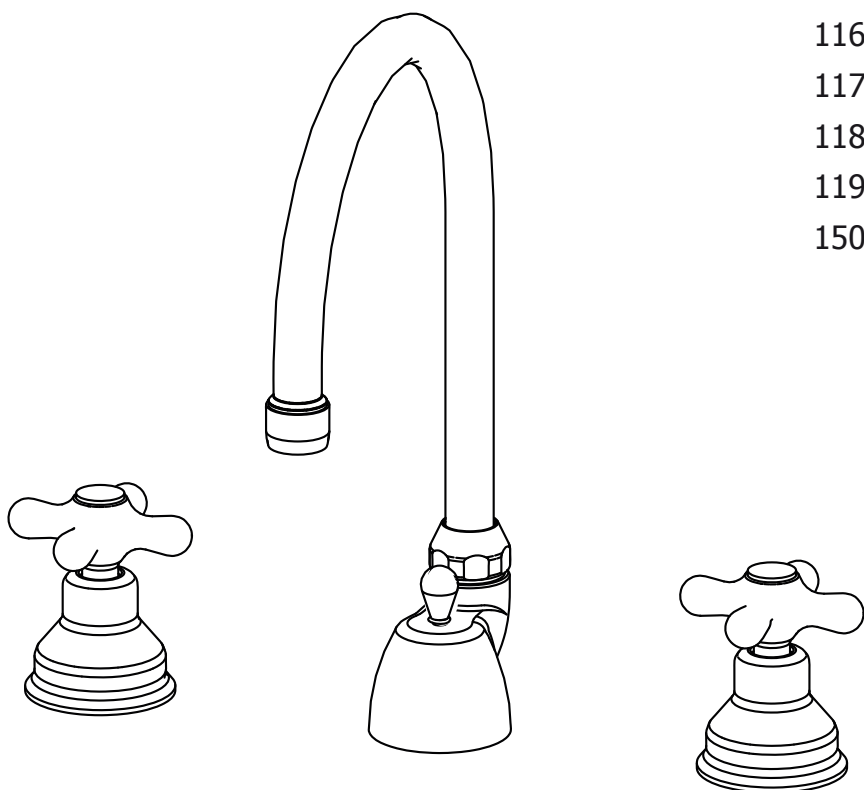


1

Montaggio Assembly

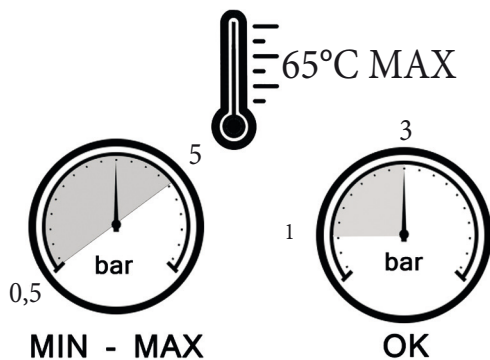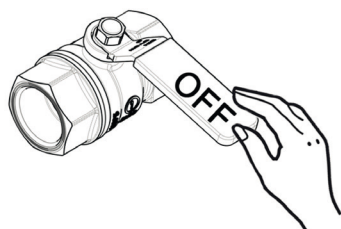


2

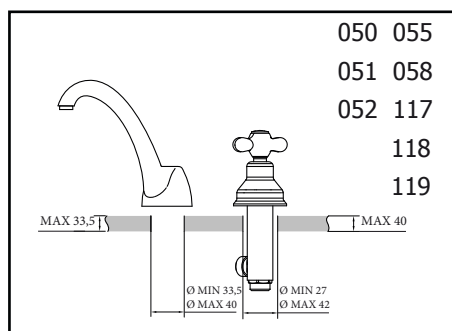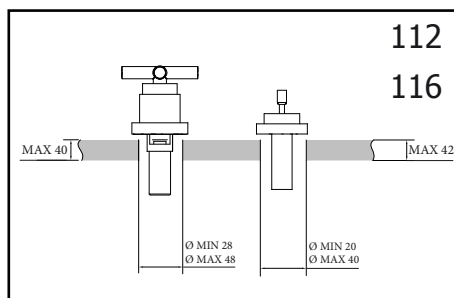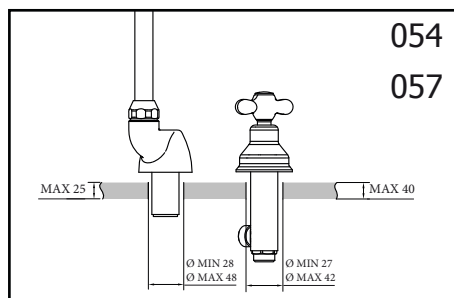


3

a

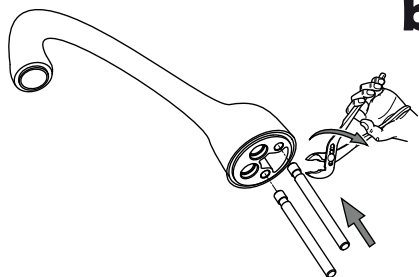

b

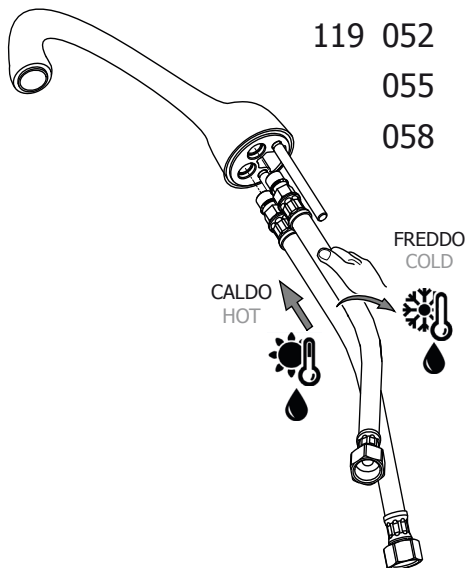

117 050

118 051


119 052

055


058

4

a

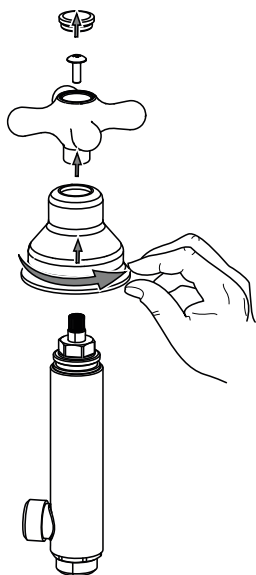

b

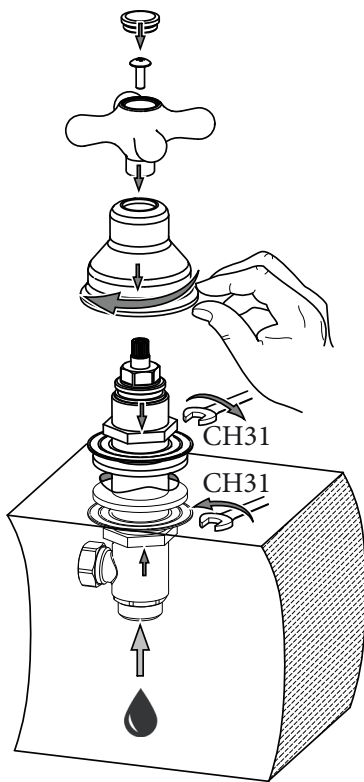

050

051

052

054

055

057

058


117

118

119

5

a

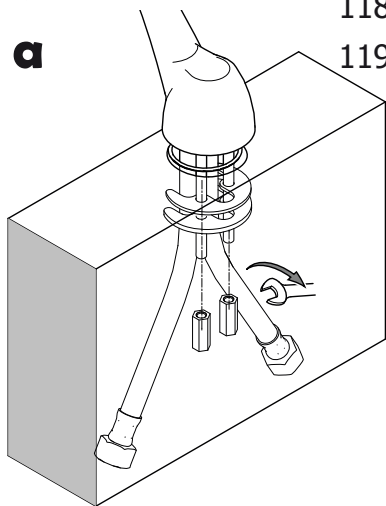

117 050

118 051


119 052

055

058


150

b

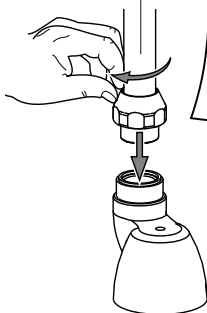


054


057

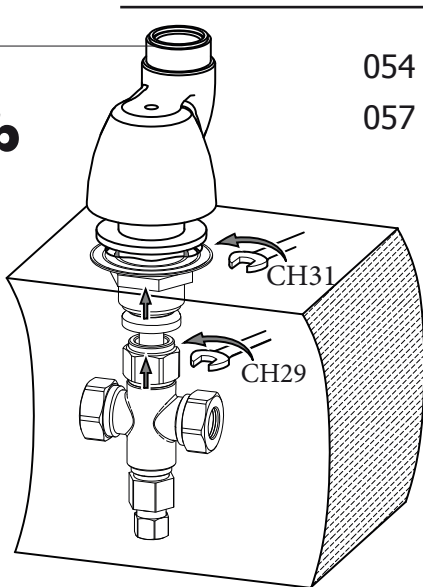


a

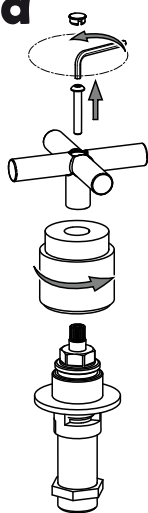


b

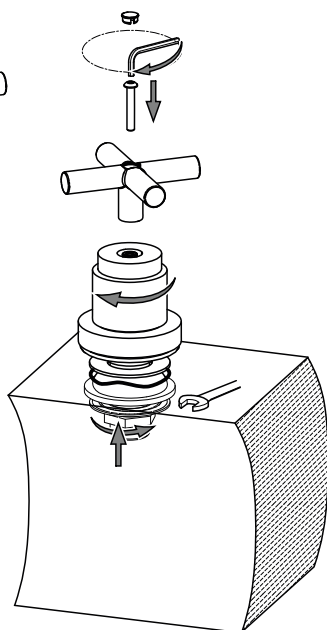

c

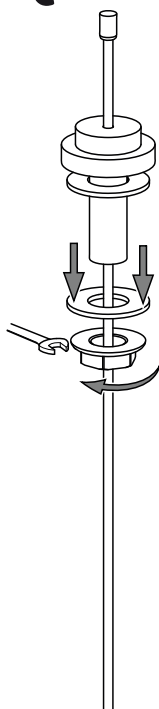




d

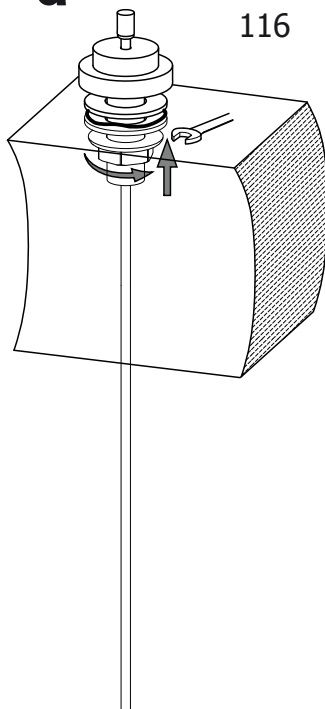


112

116


054
057

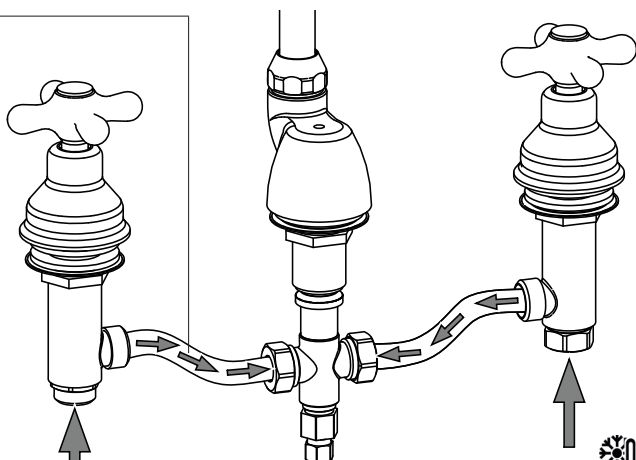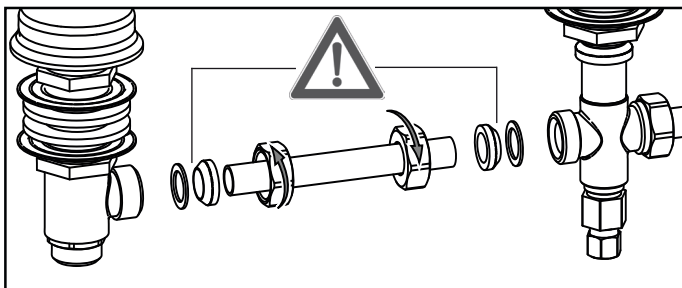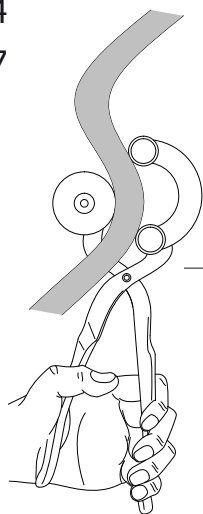

050
051
052
055
058
117
118
119

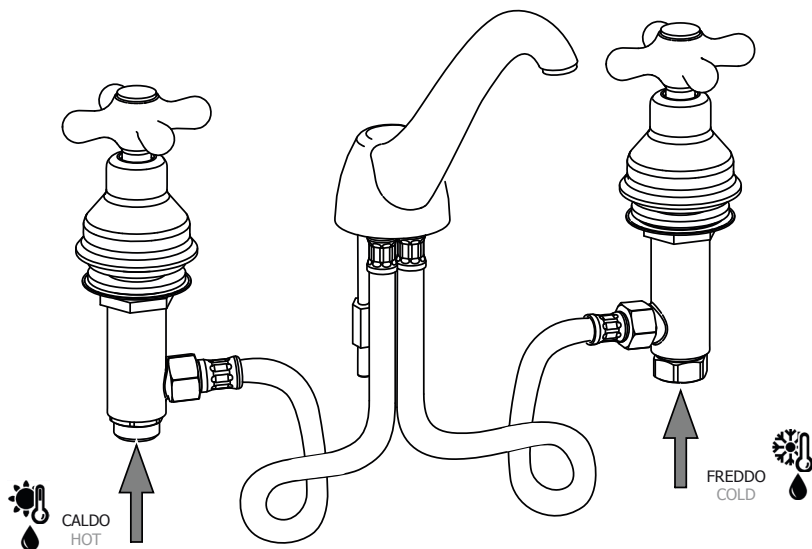


6

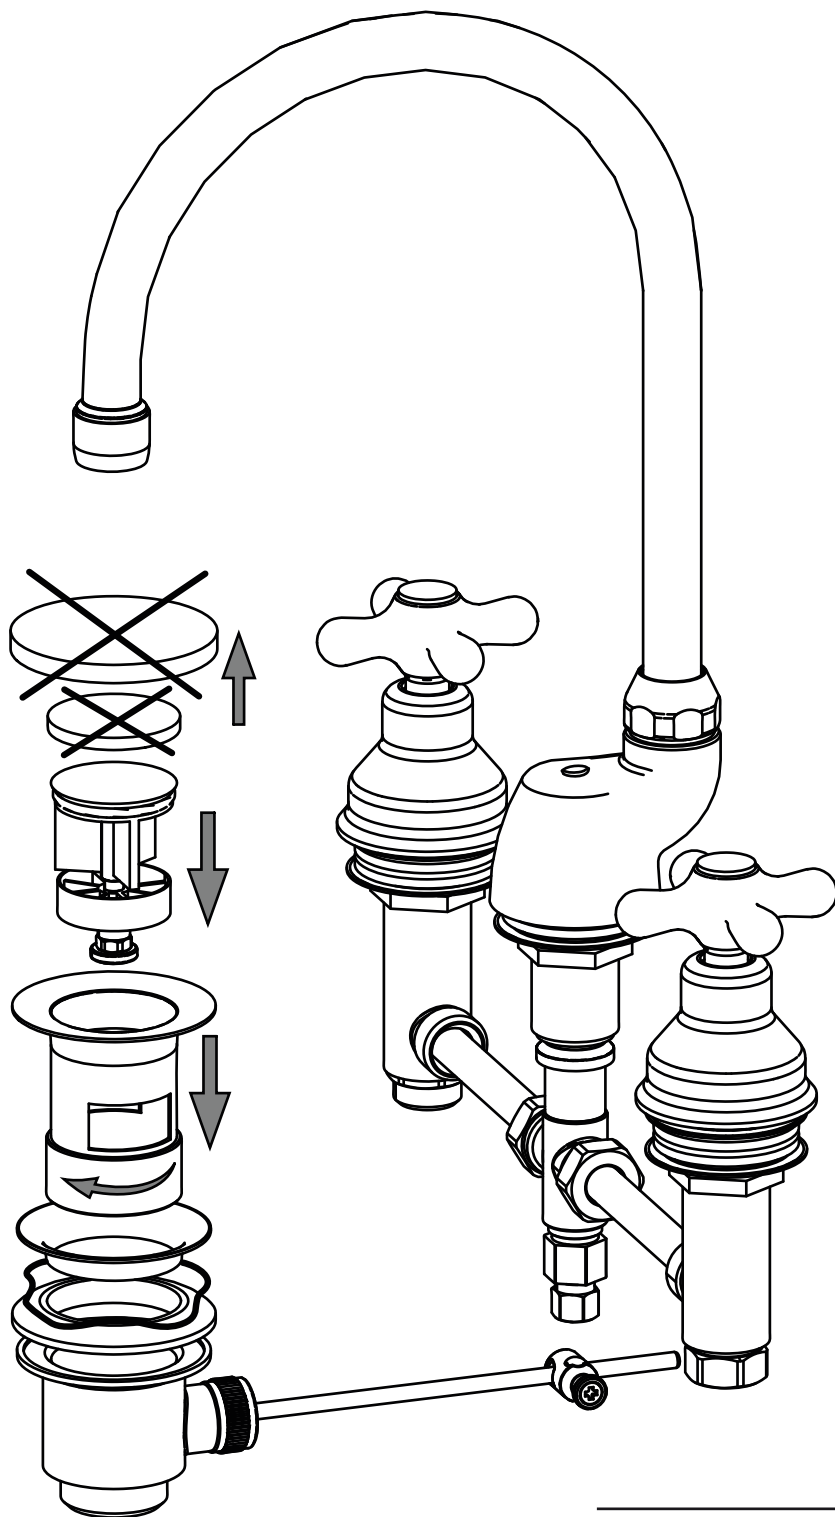


057
058
050
055
112
116
117
118
119

7

057
058
050
055
112
116
117
118
119

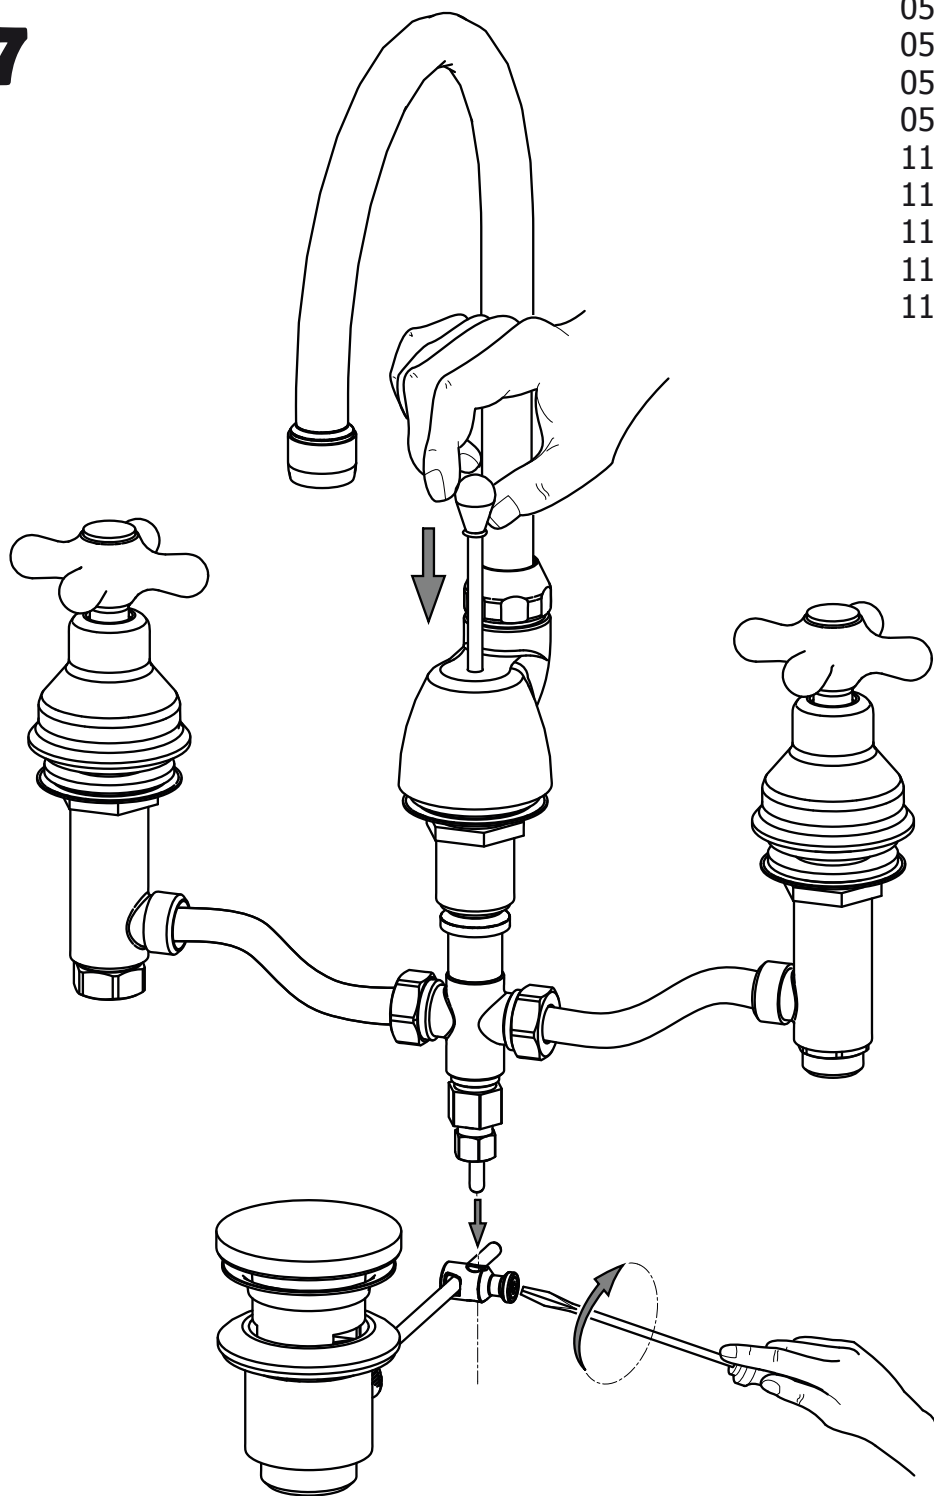


M Manutenzione Service

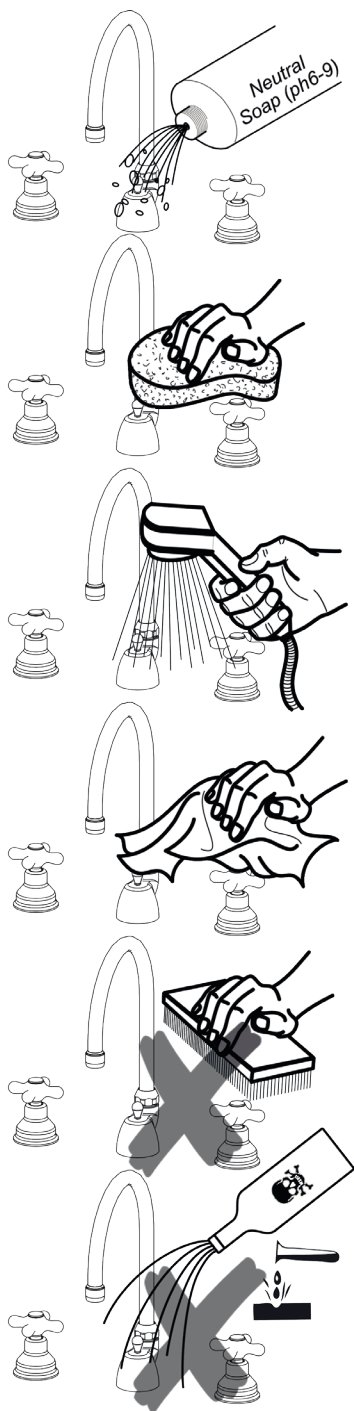


S Sostituzione Vitone Ceramico How to replace Ceramic Disc Valve

a

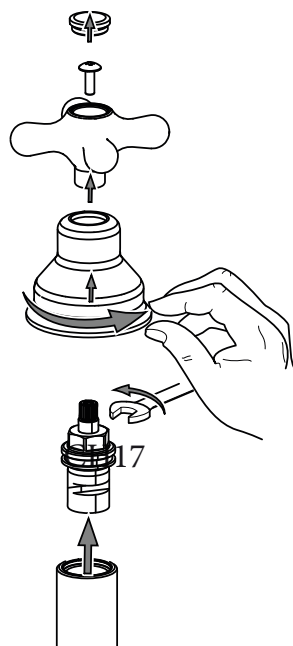

b Sostituzione Snodo How to replace Joint

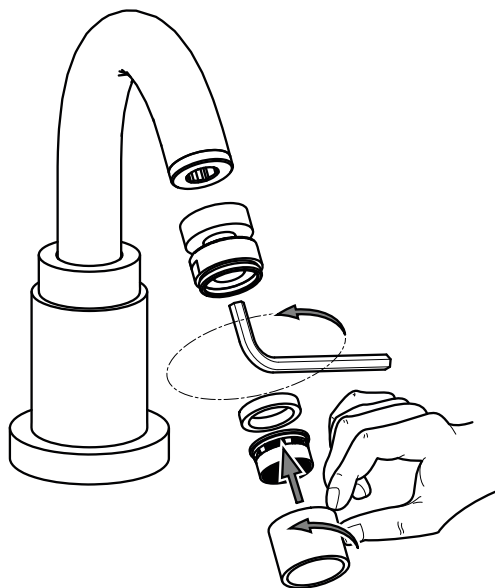

c Sostituzione Aeratore How to replace Aerator