

 
010..

014..

015..


510..

514..

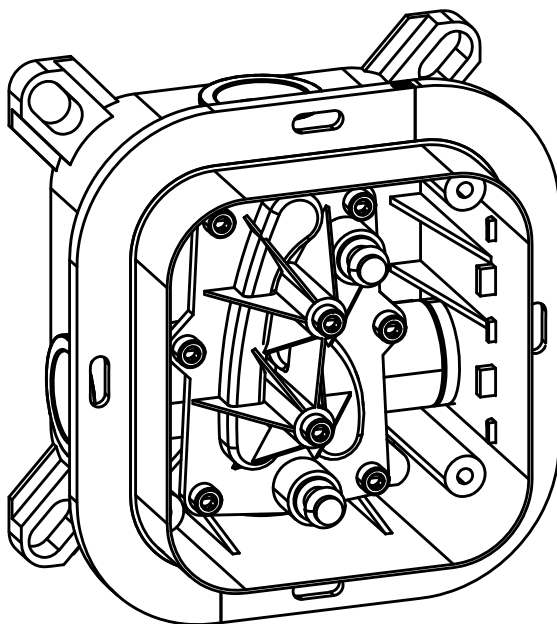

1

 
Montaggio Assembly

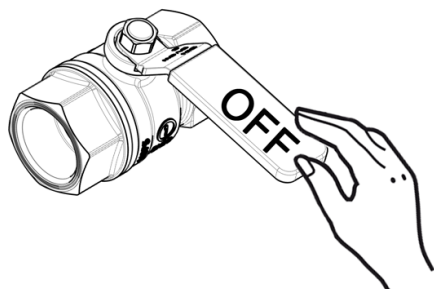

$65 \pm 5^{\circ}\text{C}$



 $15 \pm 5^{\circ}\text{C}$

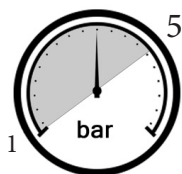


MIN - MAX




OK

 2 a

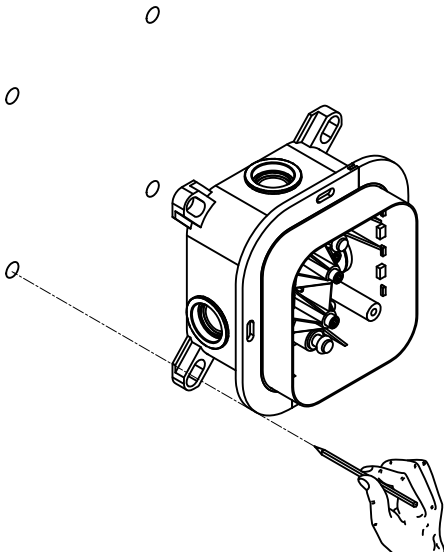


b

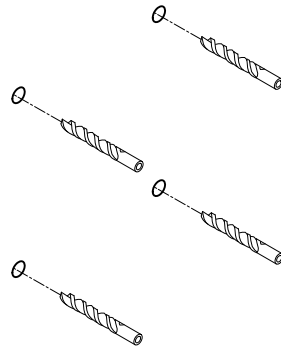 


- 010
- 014
- 015
- 510
- 514

 c

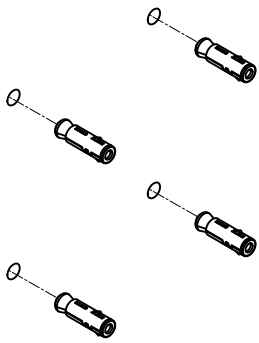


d

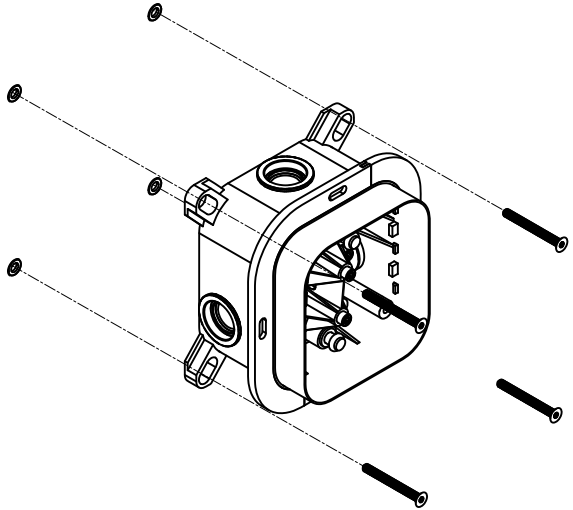 


3a

 010
510

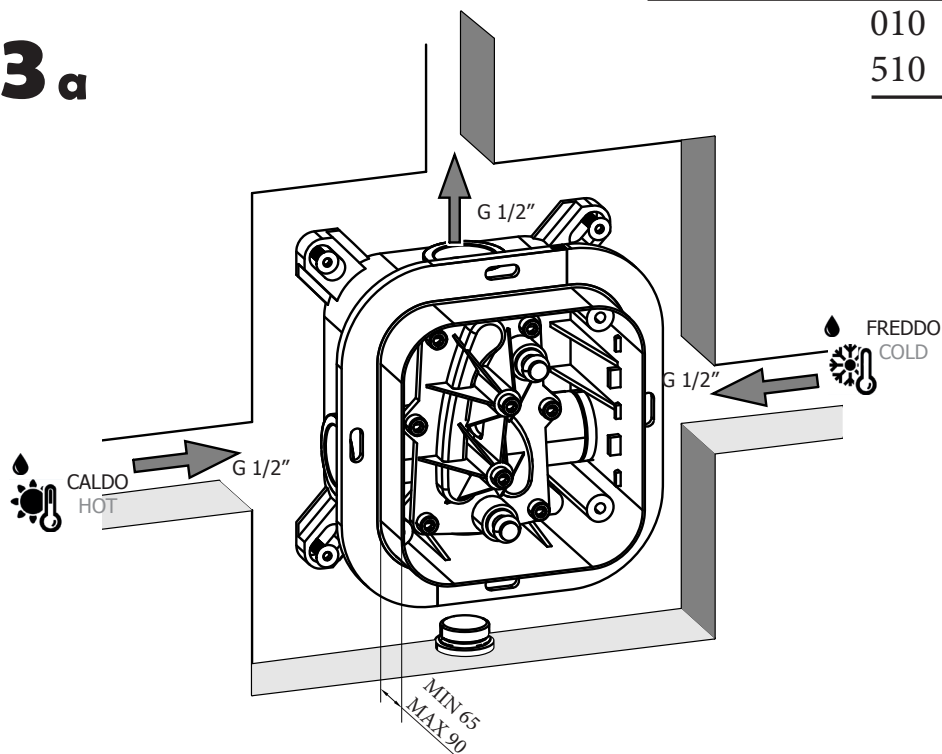


b

 014
015
514

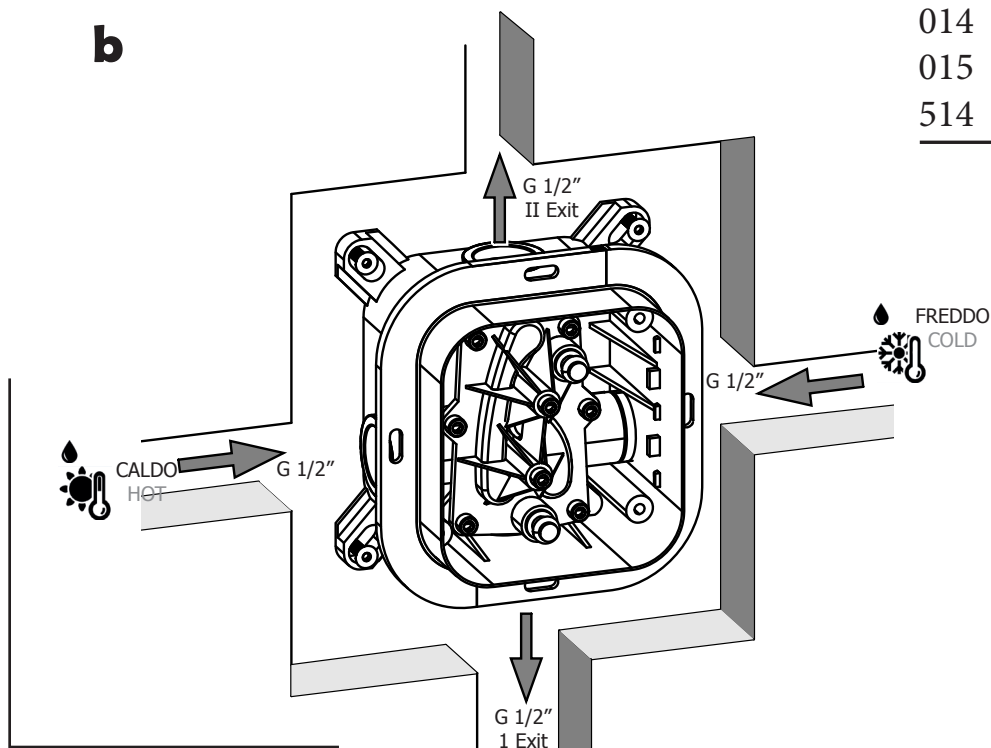


4

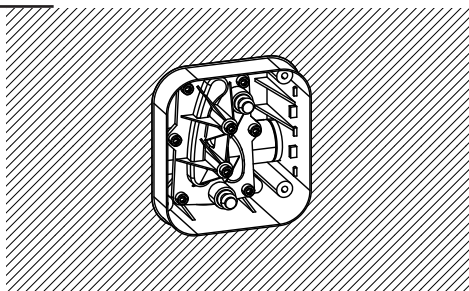 


010
014
015
510
514

 
5

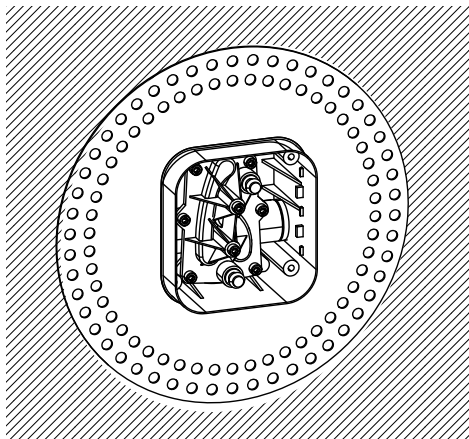




6

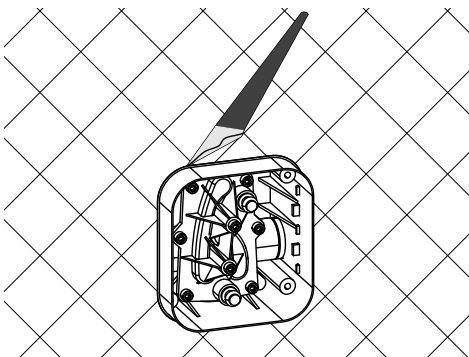 

7




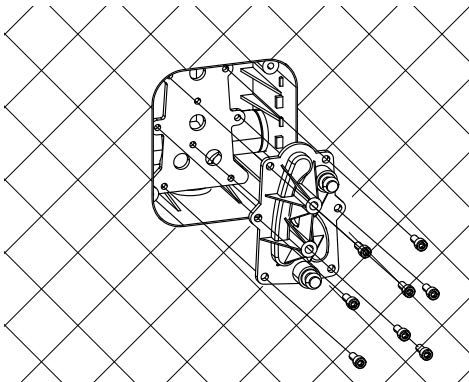 


8
a

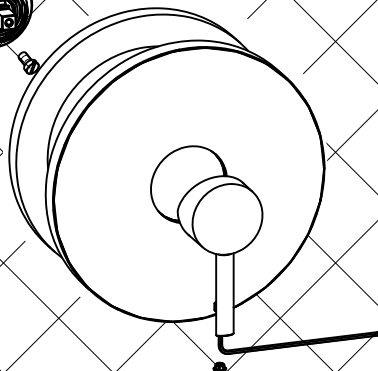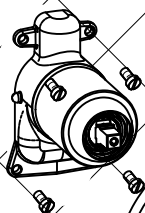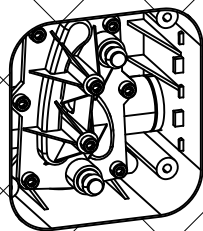   

010
510

 
 
 
 
b

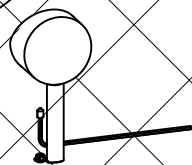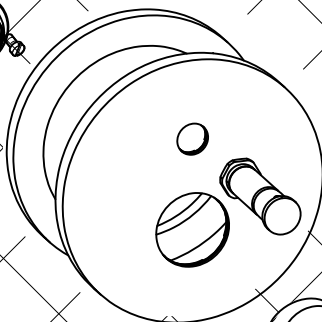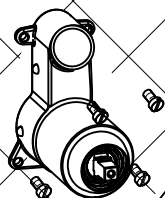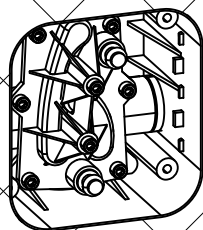

014
015
514




M

    Manutenzione Service

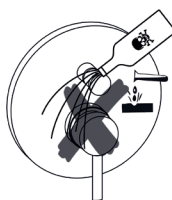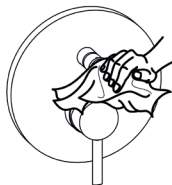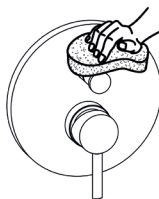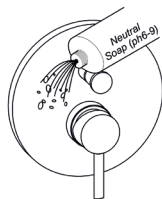

R

   Regolazione temperatura Temperature setting

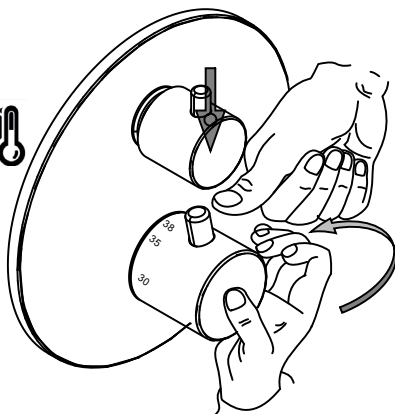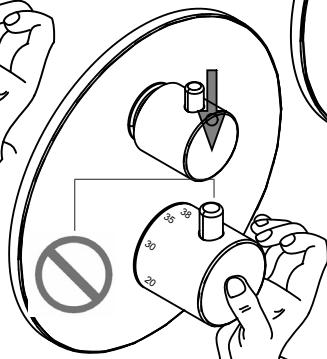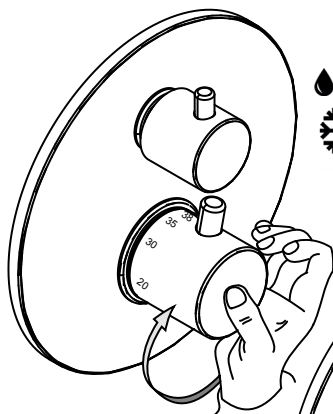

S

Sostituzione Cartuccia termostatica

How to replace thermostatic cartridge

 
 
 
 
 
010

014

015

510

514

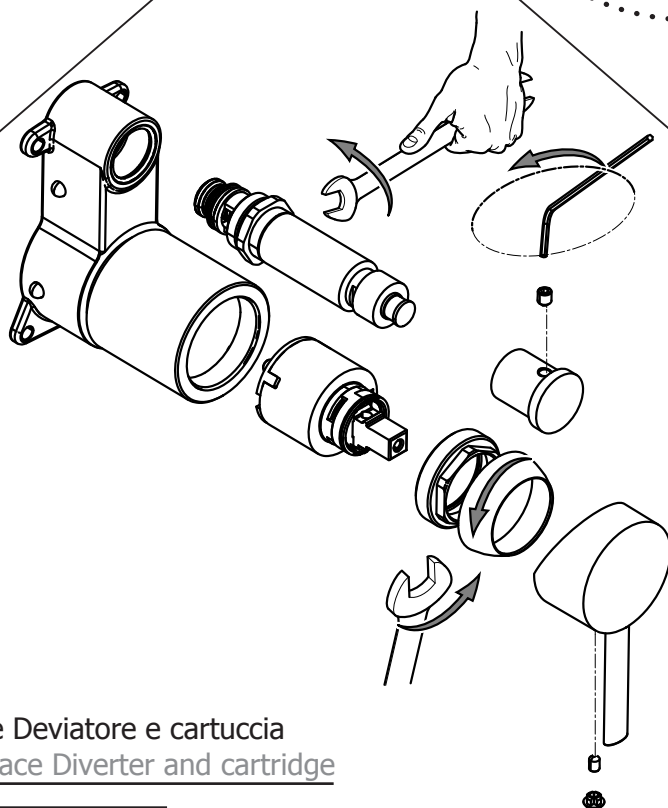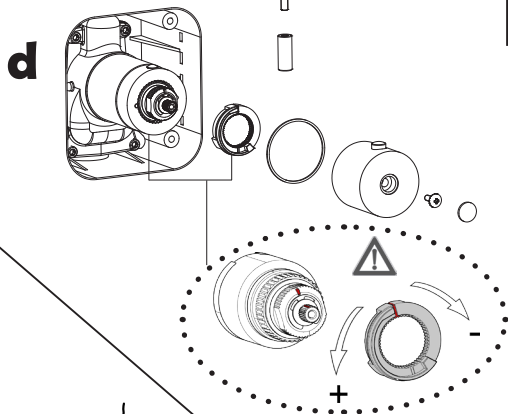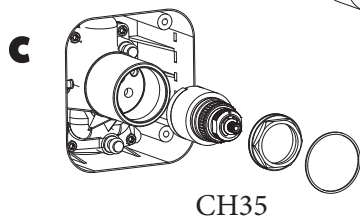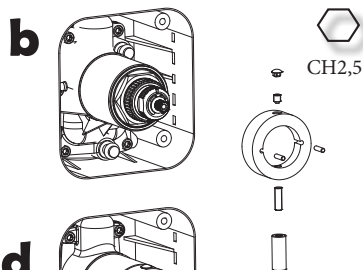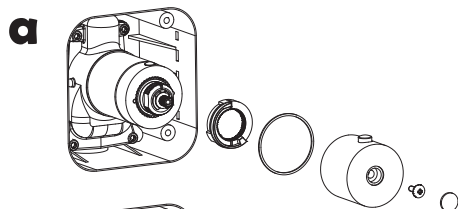

Sostituzione Deviatore e cartuccia

How to replace Diverter and cartridge

010

014

015

510

514