


LEQ

LEQ268..

LEQ268D..


LEQ269..

LEQ269R..

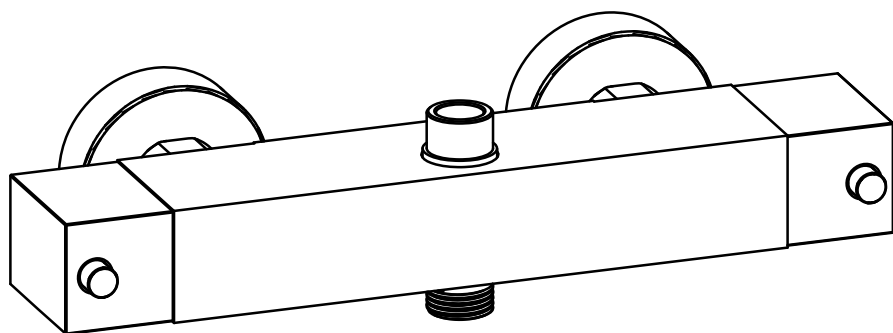

IST099
Rev.2017.00


1

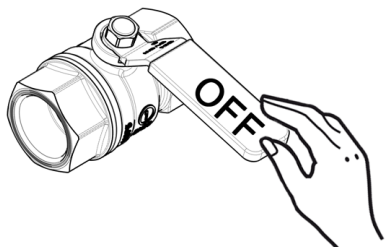

$65 \pm 5^{\circ}\text{C}$




$15 \pm 5^{\circ}\text{C}$

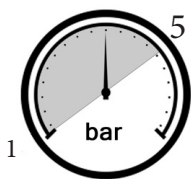

MIN - MAX




OK

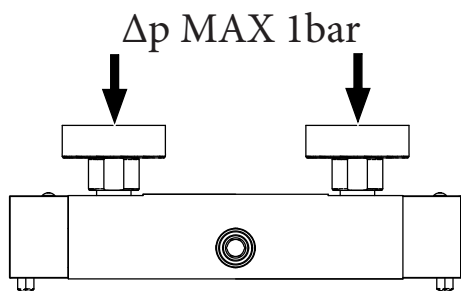


Δp : differenza pressione in entrata
different inlet water pressure

2

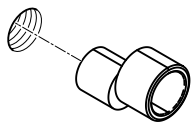

CALDO
HOT


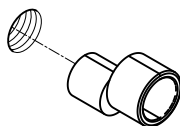


FREDDO
COLD






268
268D
269
269R


a

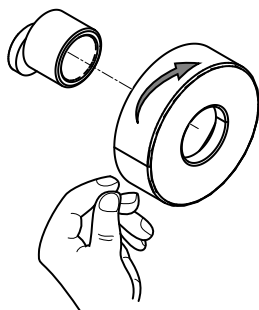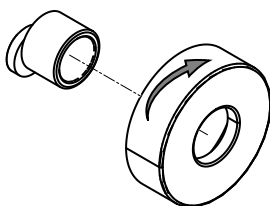

b

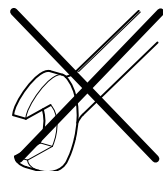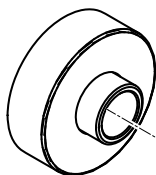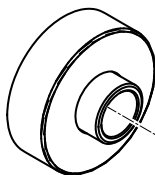


c

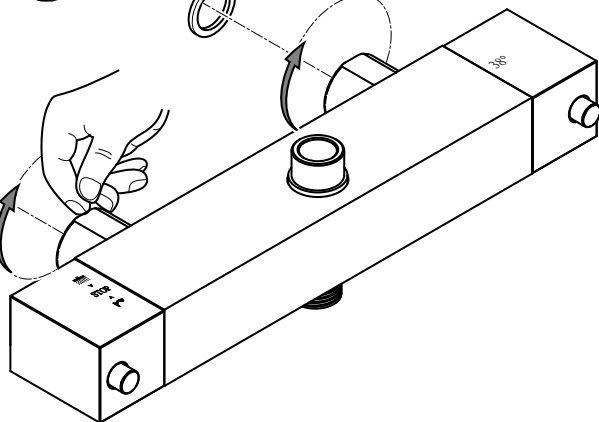


3

a

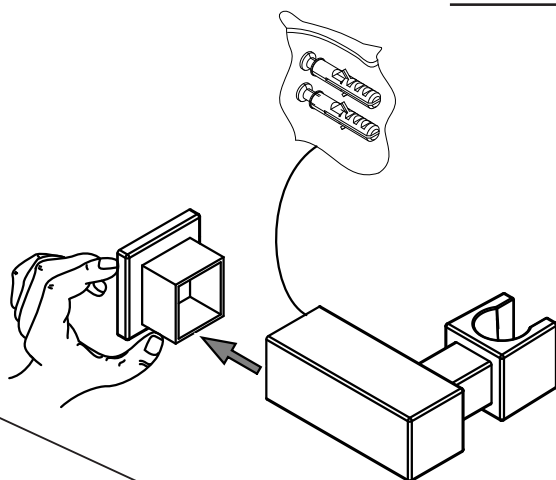


268
268D
269
269R


b

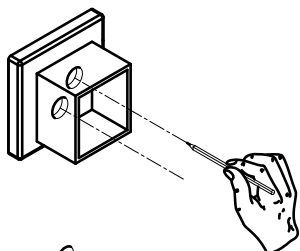


c

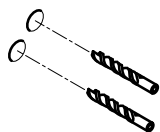

d

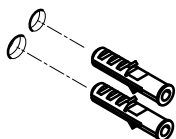




e

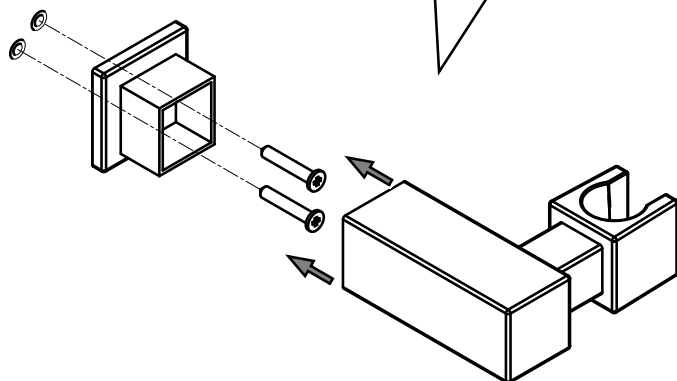

D




Deviatore
Diverter


269
269R

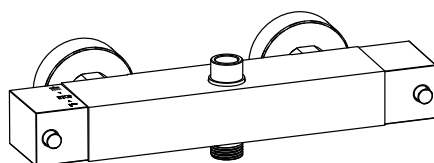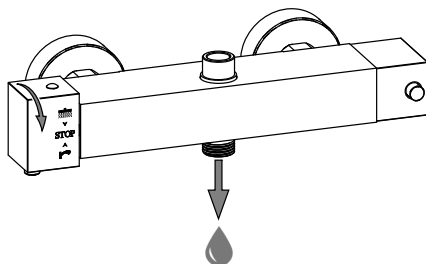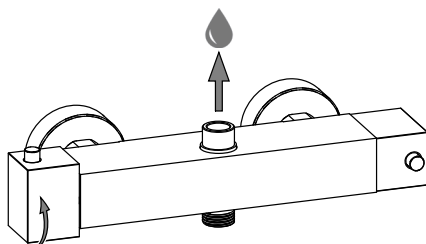a**STOP****b****c****F**


Funzionamento cartuccia termostatica
Thermostatic Cartridge Working

268
268D
269
269R

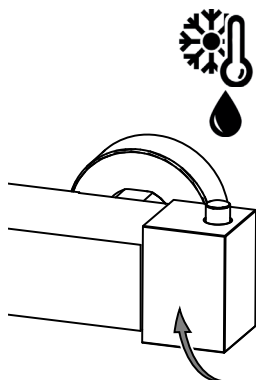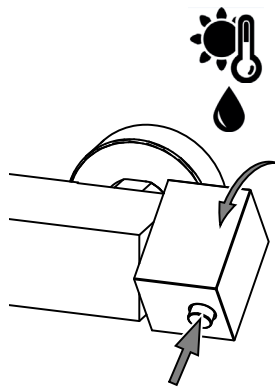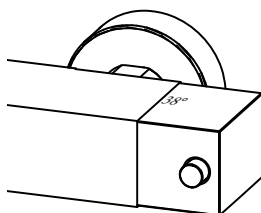
**STOP 38°**

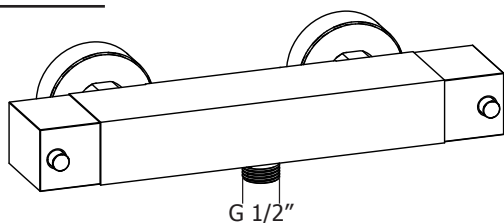

268
268D






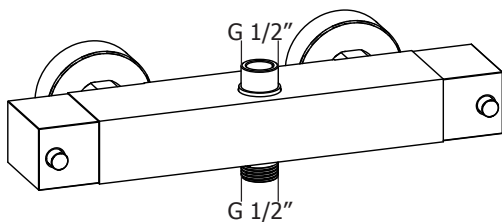


269

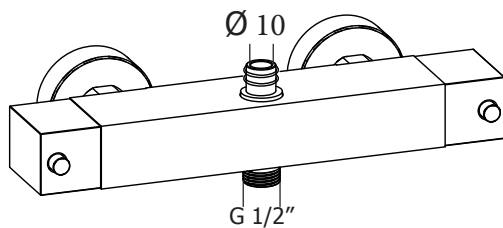

269R

M Manutenzione Service

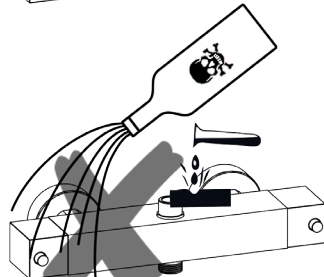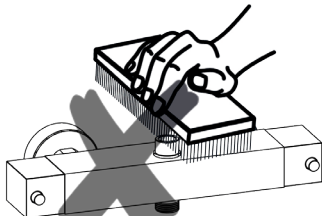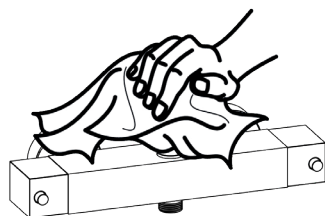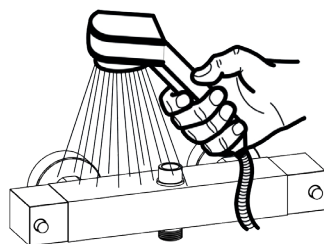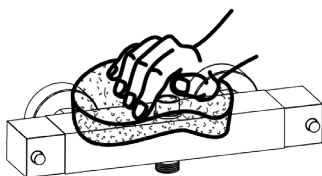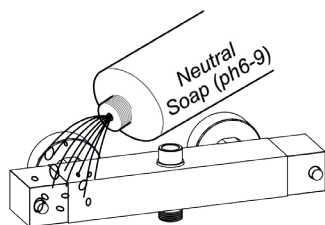




Sostituzione Cartuccia Termostatica

How to replace Thermostatic Cartridge

268
268D
269
269R

a

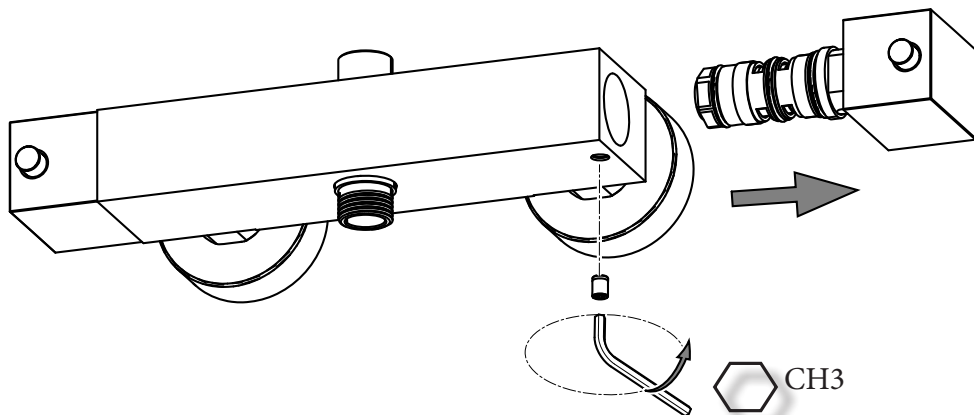


Sostituzione Sede Calotta

How to replace Seat for Nut



268
268D
269
269R

b

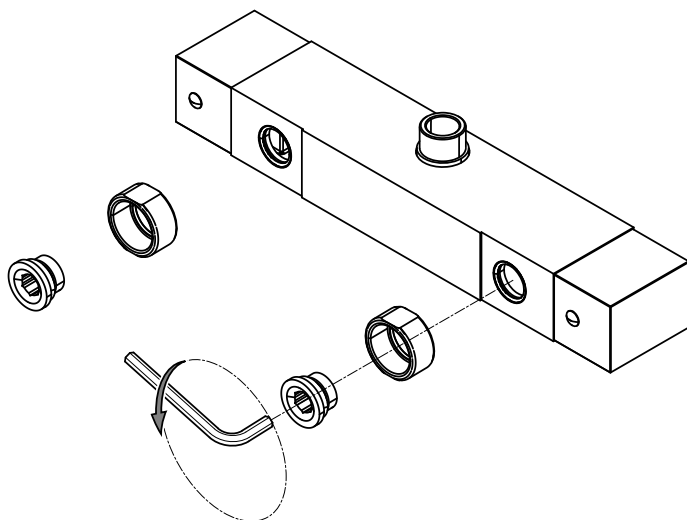

S

Sostituzione Deviatore How to replace Diverter

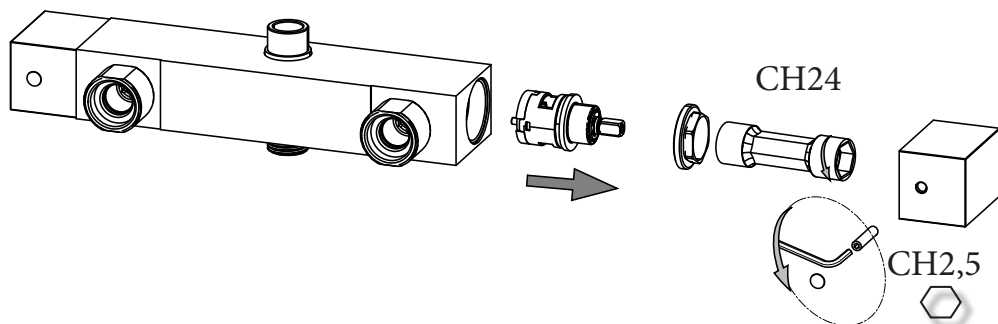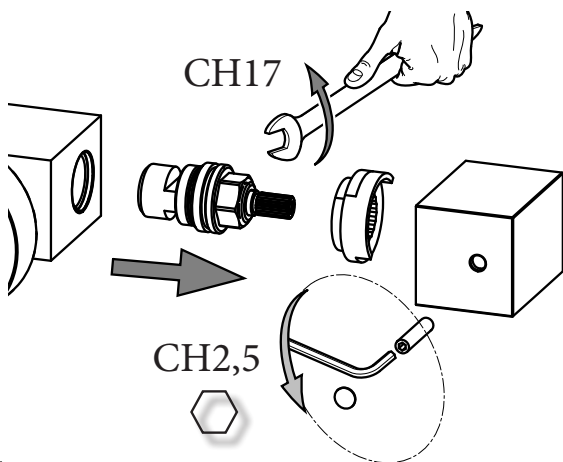269
269R**c**268
268D**d**

Sostituzione Vitone Ceramico How to replace Ceramic Disc Valve

