



020..
 022..
 023..
 024..
 025..
 026..
 027..
 028..
 029..
 168..
 168D..
 168R..
 922..
 923..
 028..
 029..
 161..
 162..
 167..
 169..
 170..

COMPATIBILITY:

FBLV
 FMEV
 IRV
 VLV
 NI
 DA
 ET

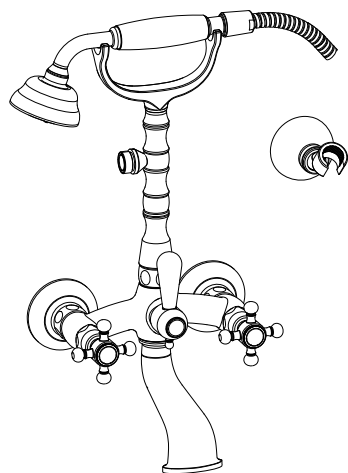


1

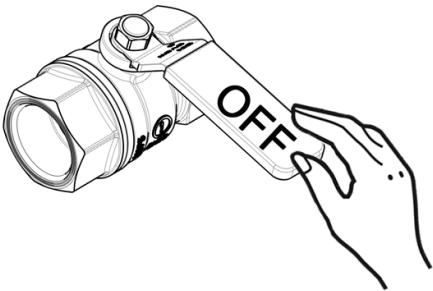

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

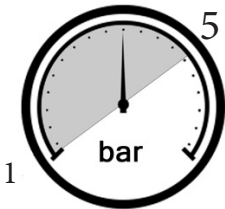


MIN - MAX




OK

2

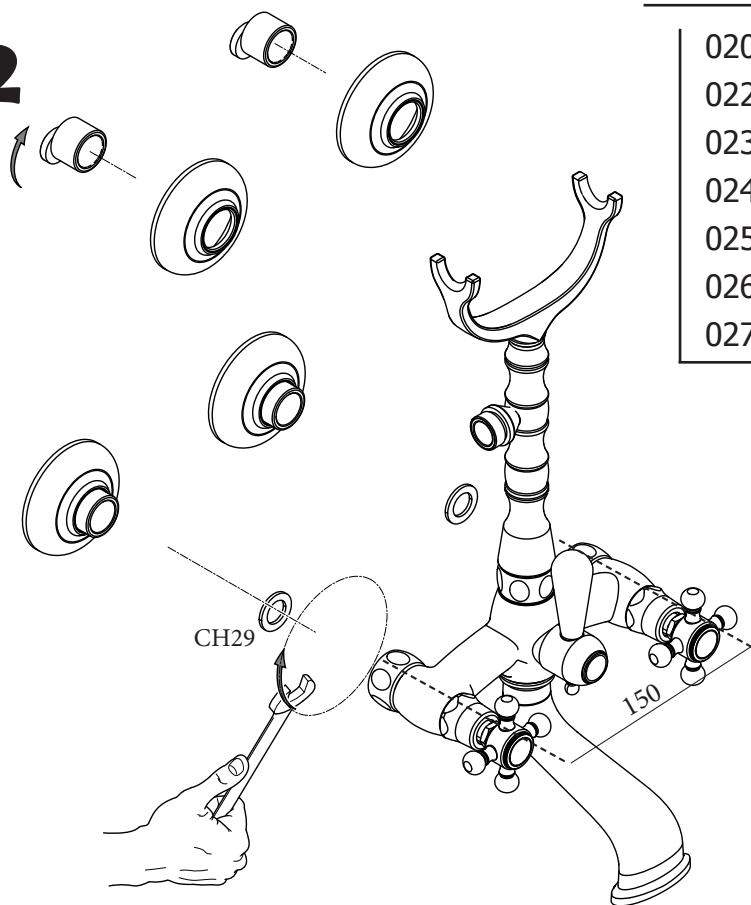


3

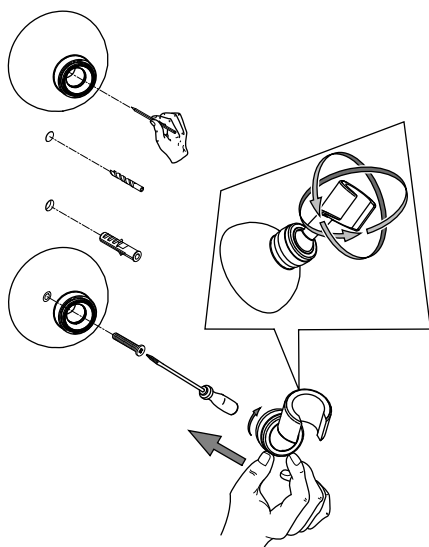


020
023
025
027
168D
923

4

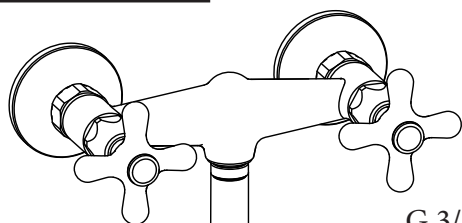

$G\ 1/2''$



$G\ 3/4''$

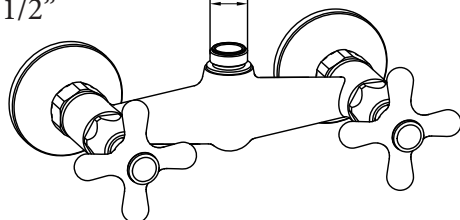

168R

168

5

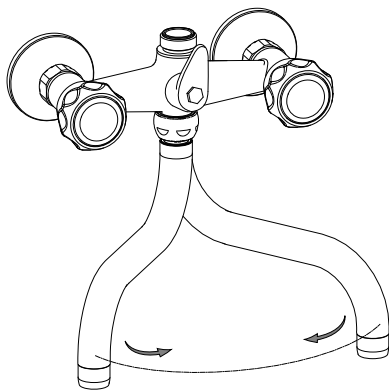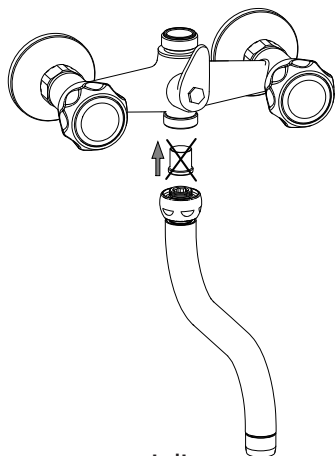

028

029

161

162


167

169


170

Deviatore con maniglia
Diverter with handle

a

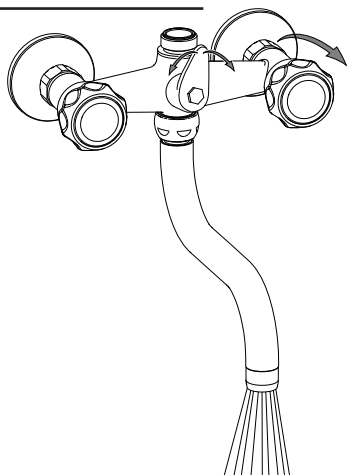

b


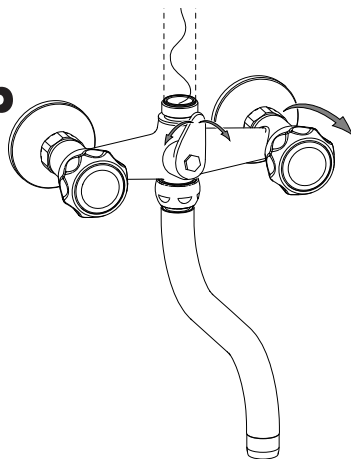


029

169




Deviatore con maniglia
Diverter with handle


020	025
022	029
023	922
024	923

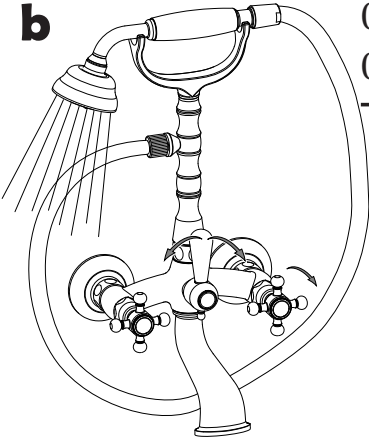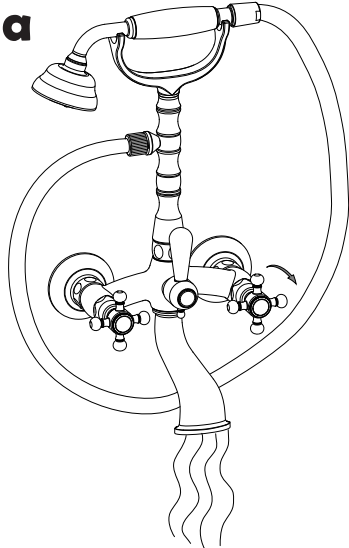

Deviatore a pulsante
Push Diverter

026
027

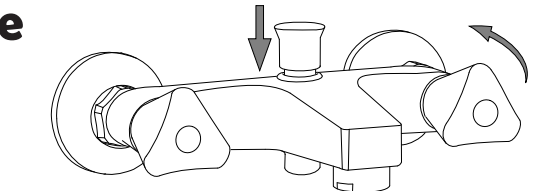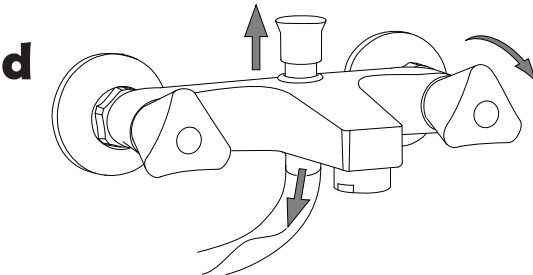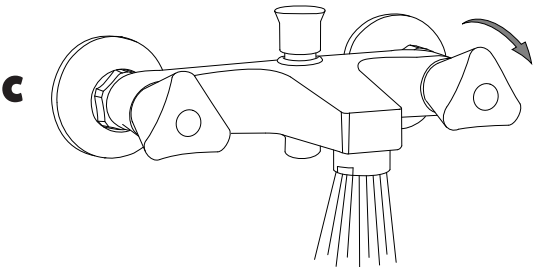

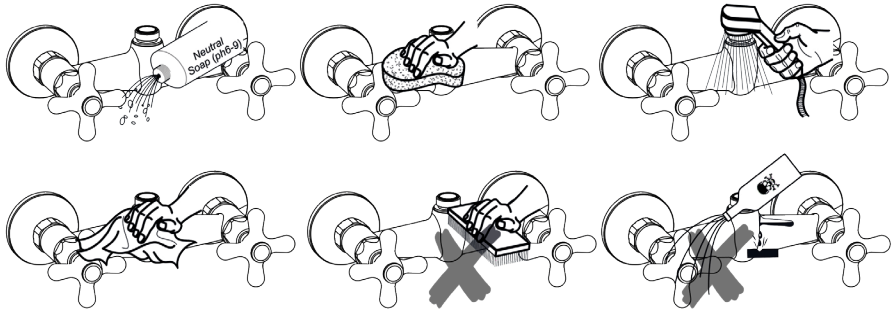


S

Sostituzione Vitone Ceramico

How to replace Ceramic Disc Valve

a


020.. 028.. 161..
022.. 029.. 162..
023.. 168.. 167..
024.. 168D.. 169..
025.. 168R.. 170..
026.. 922..
027.. 923..

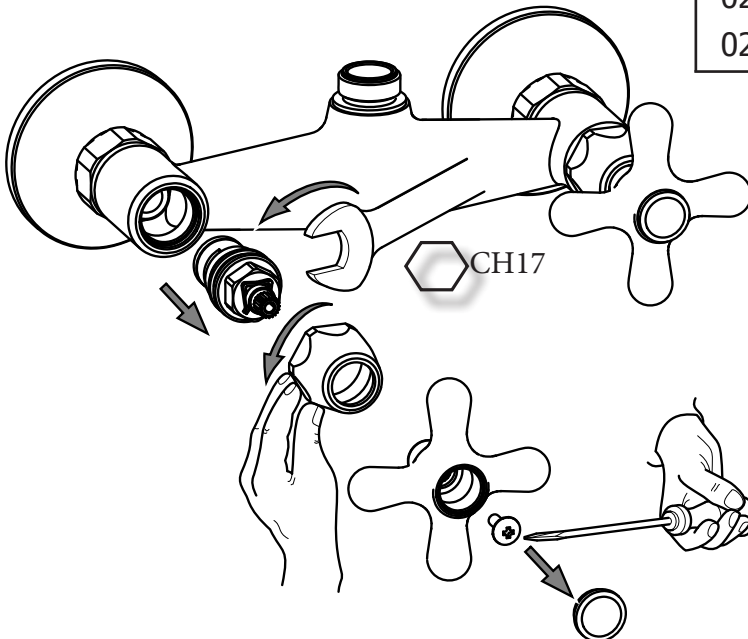

b


Sostituzione Sede Calotta How to replace Seat for Nut

020..	028..	161..
022..	029..	162..
023..	168..	167..
024..	168D..	169..
025..	168R..	170..
026..	922..	
027..	923..	

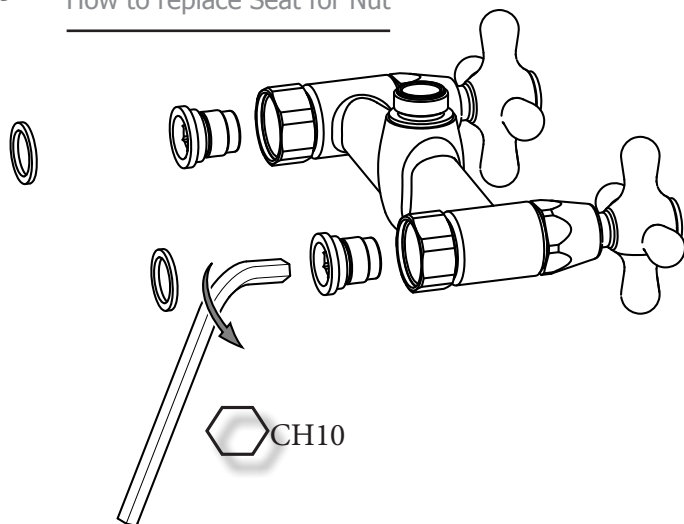**c**

Sostituzione Deviatore con maniglia How to replace Diverter with handle

161	020	025
162	022	029
167	023	922
169	024	923
170		

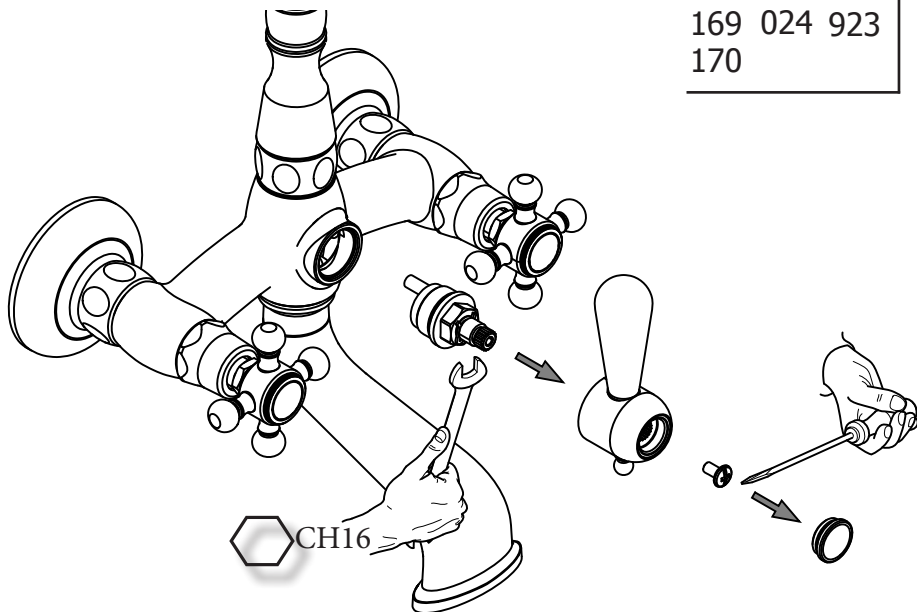


d


Sostituzione Deviatore a pulsante How to replace push Diverter

026

027

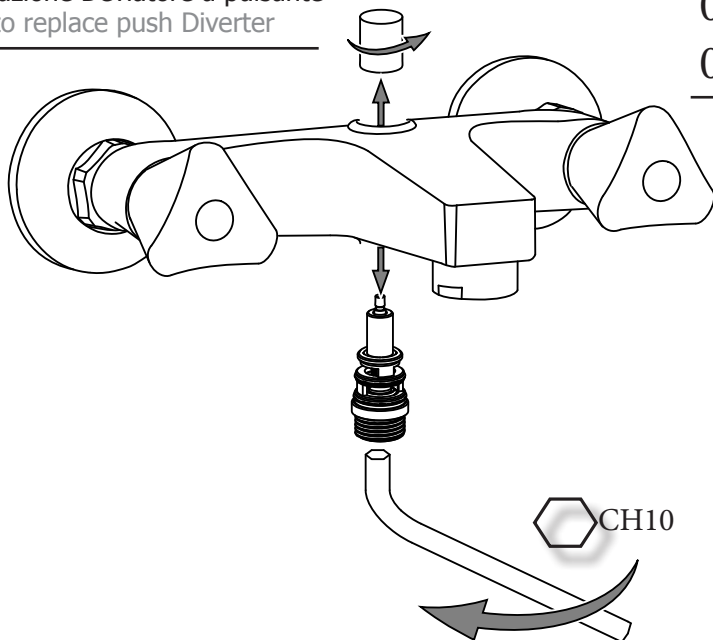**e**

Sostituzione Aeratore How to replace Aerator

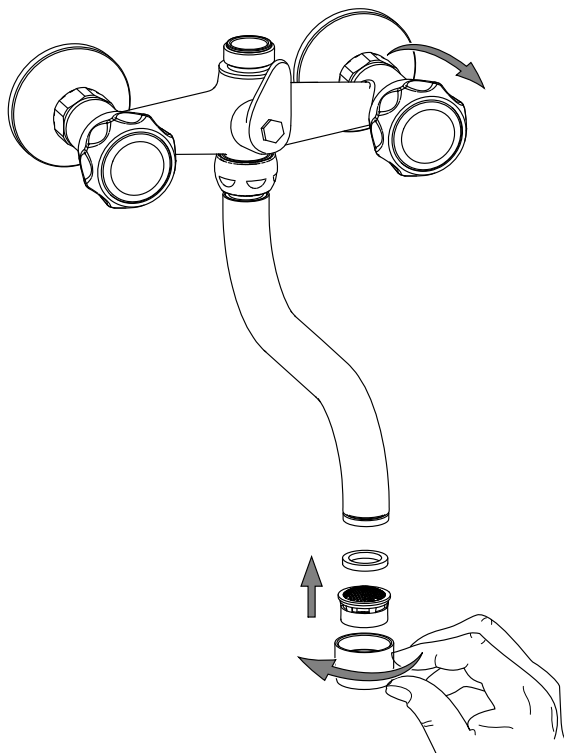

020.. 923..

024.. 161..

025.. 162..

028.. 167..

029.. 169..

922.. 170..