

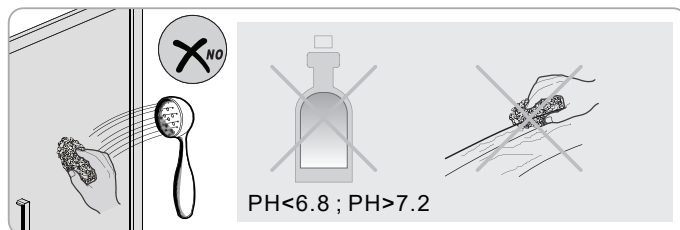
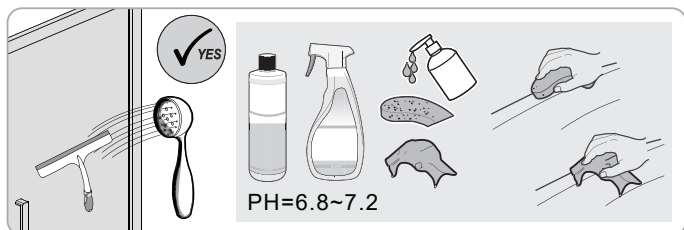
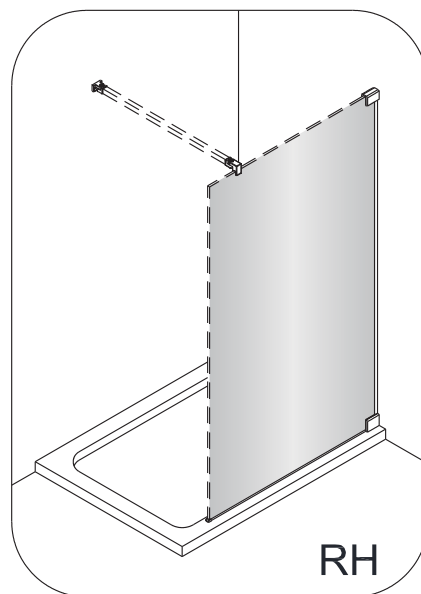


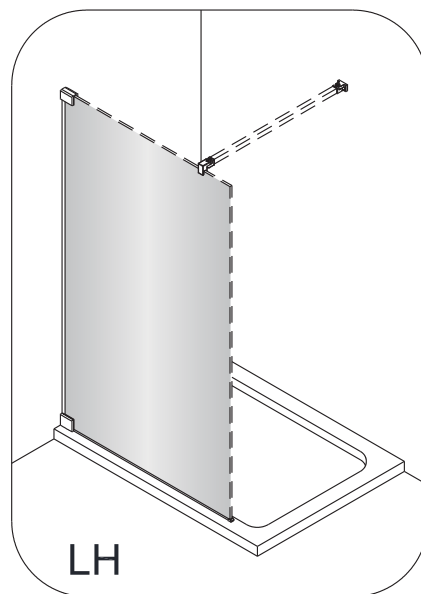


Swiss
Aqua
Technologies

Instalační návod
Inštalacný návod
Mounting Instruction
Montageanleitung
Инструкция по установке




SATWIPANT
SATWIPANTC

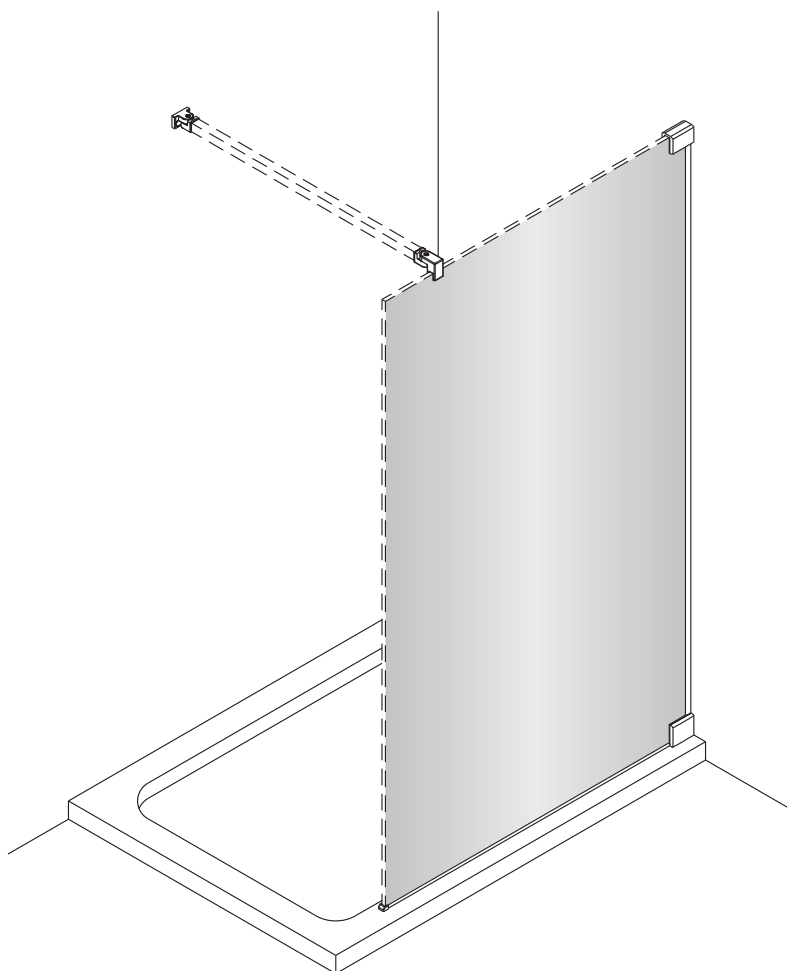

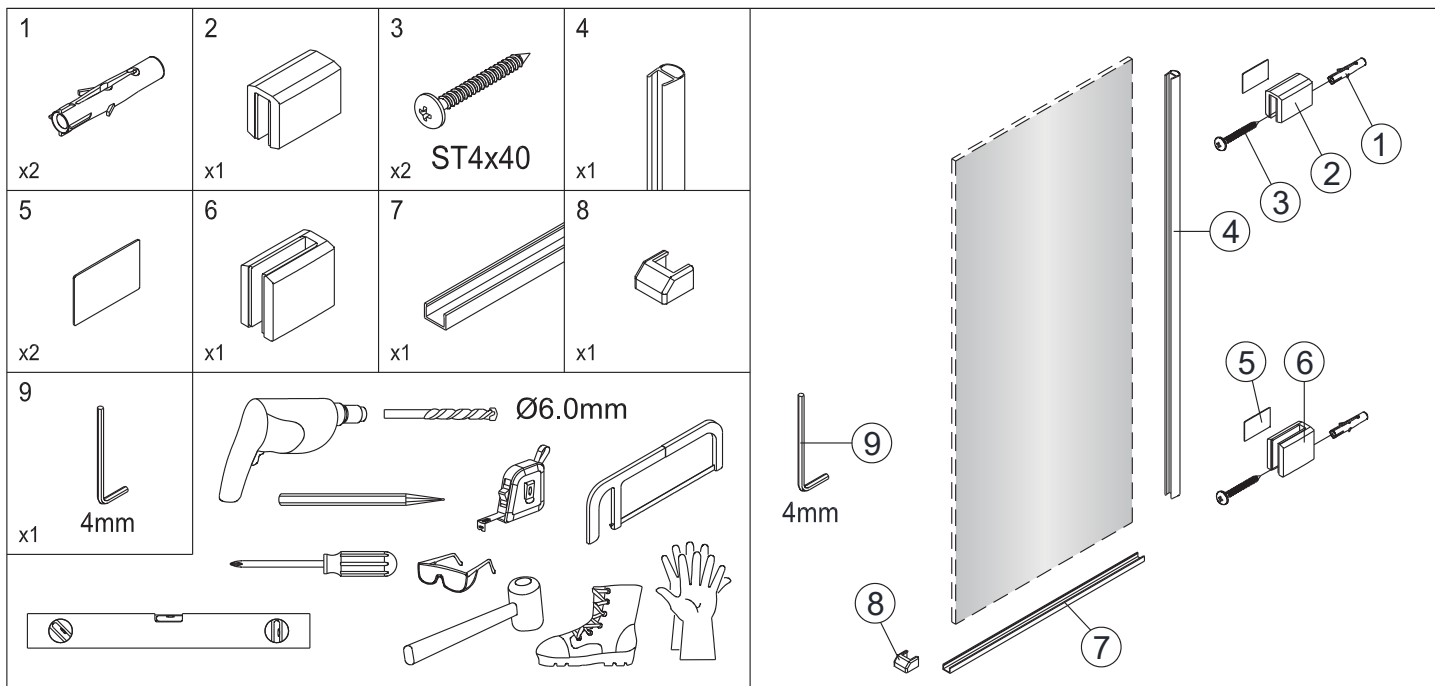


Poznámka: Vnitřní strana koutu
- Easy Clean


1

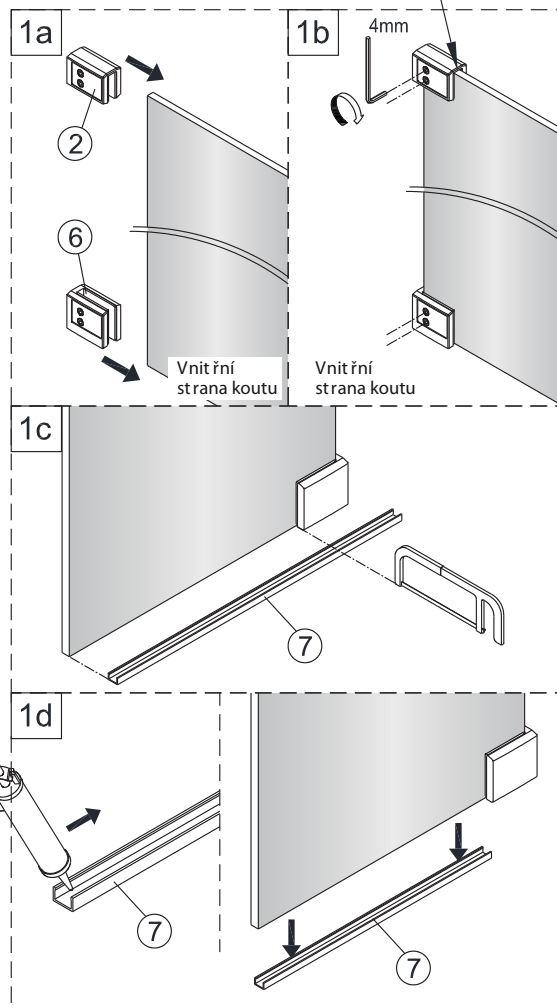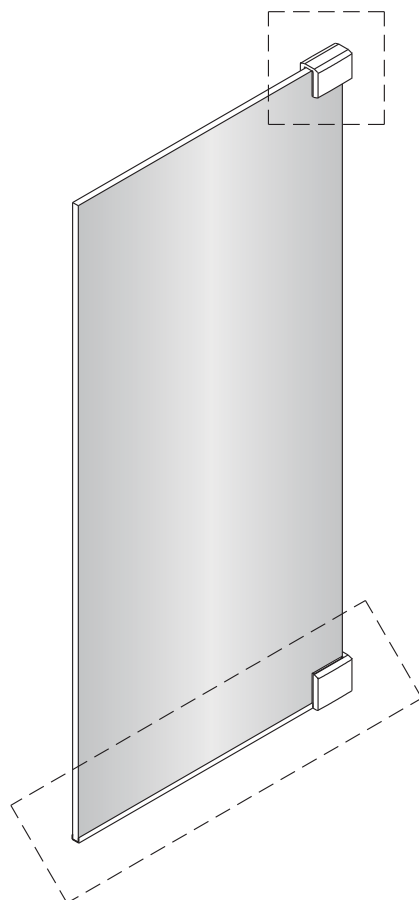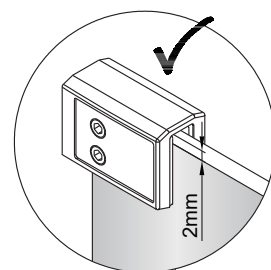



②



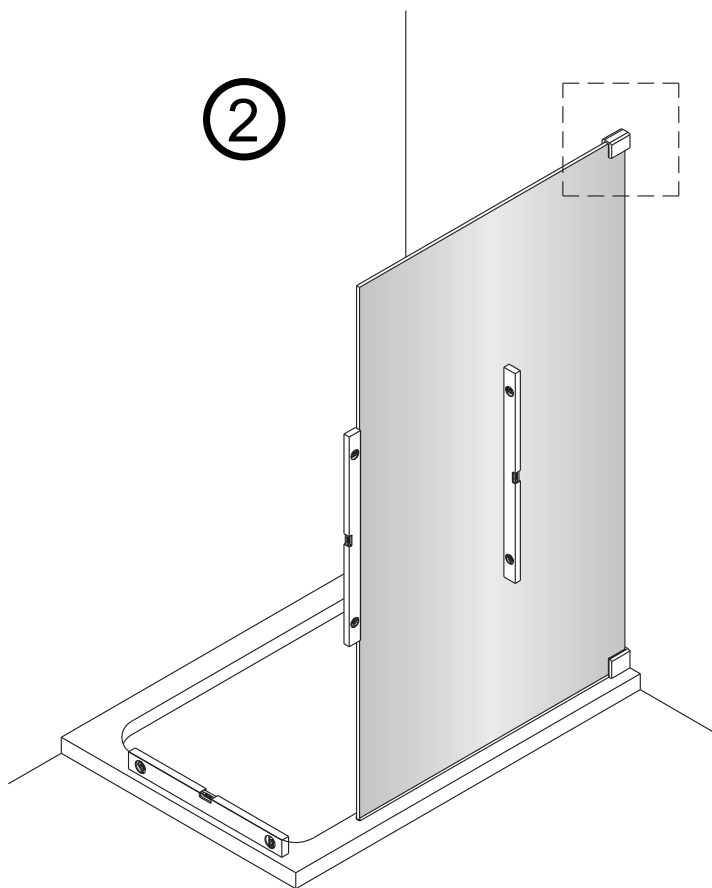


Make sure that the gradient of the wall is not exceed 7mm as the figure below.



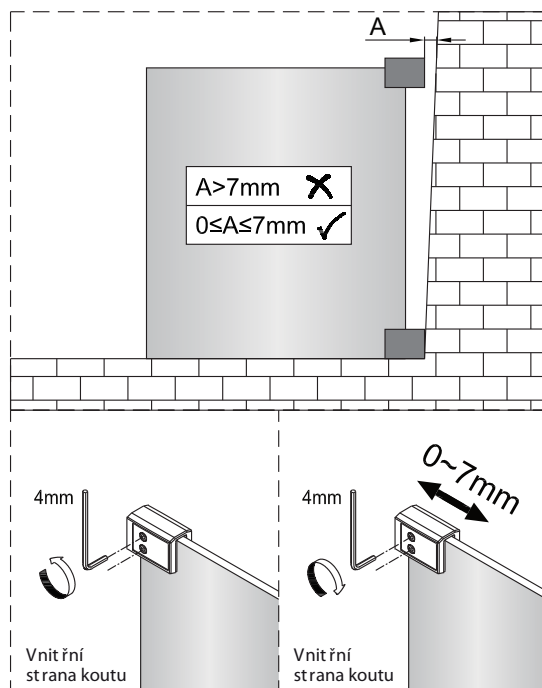


③

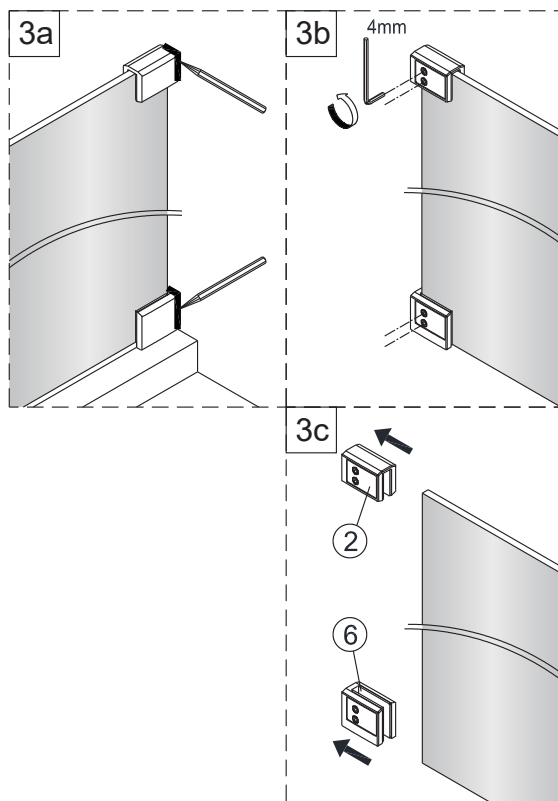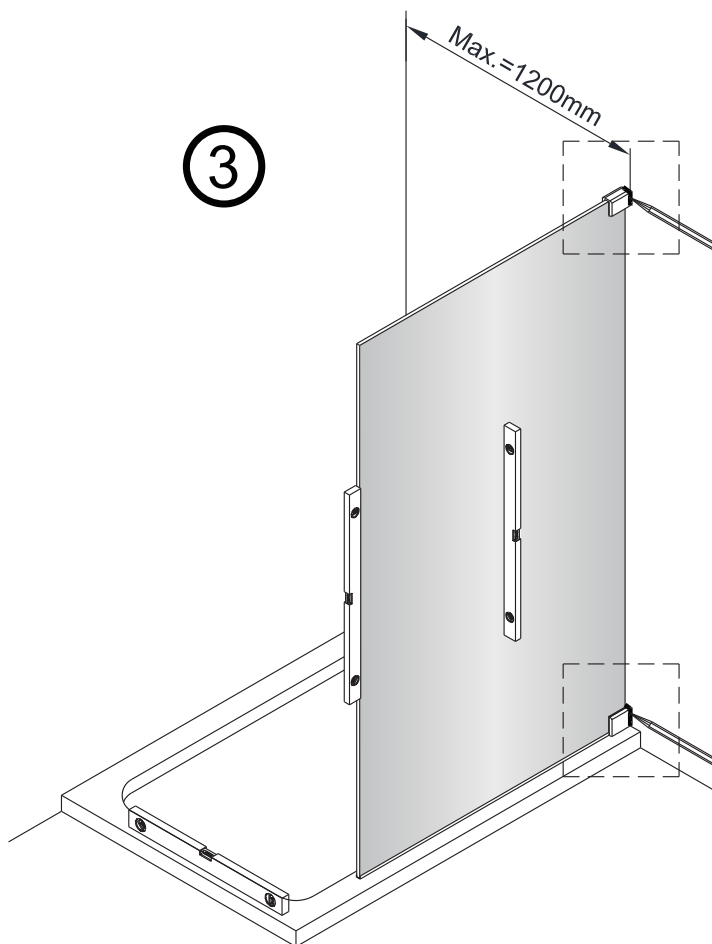

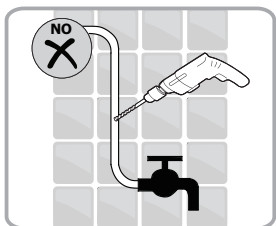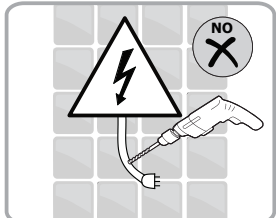
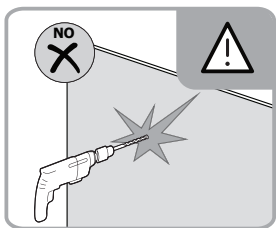


④

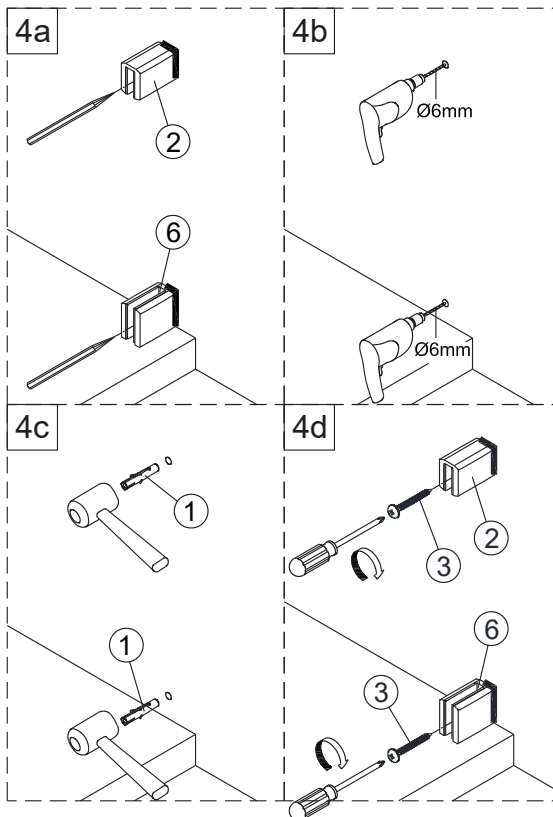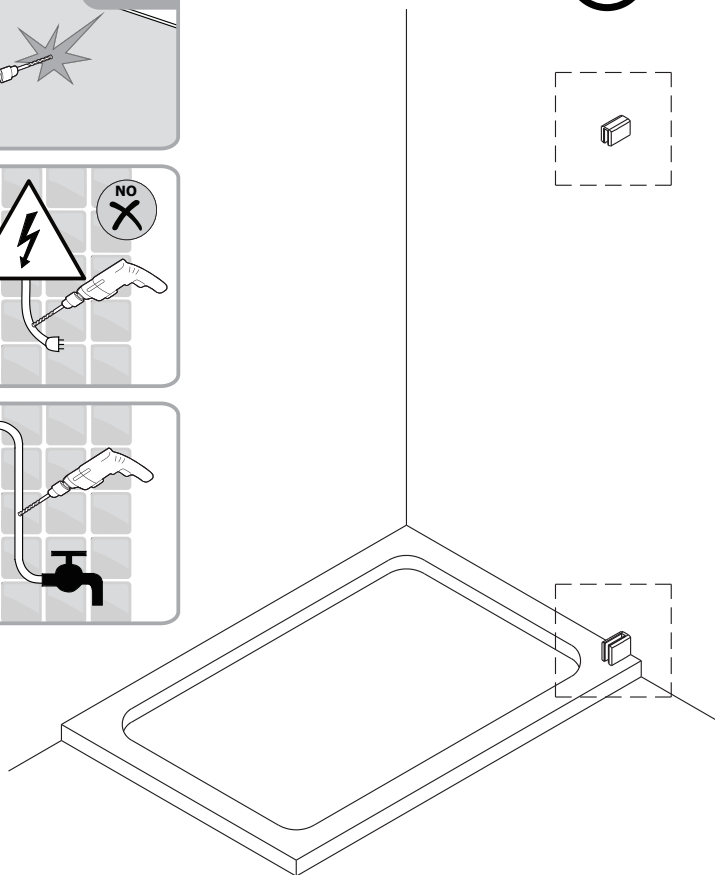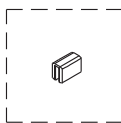


Poznámka: Vnitřní strana koutu
- Easy Clean

⑤

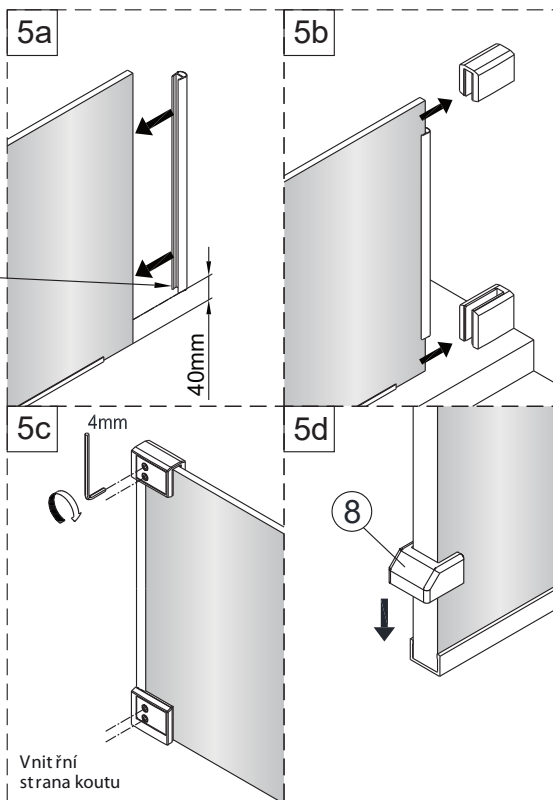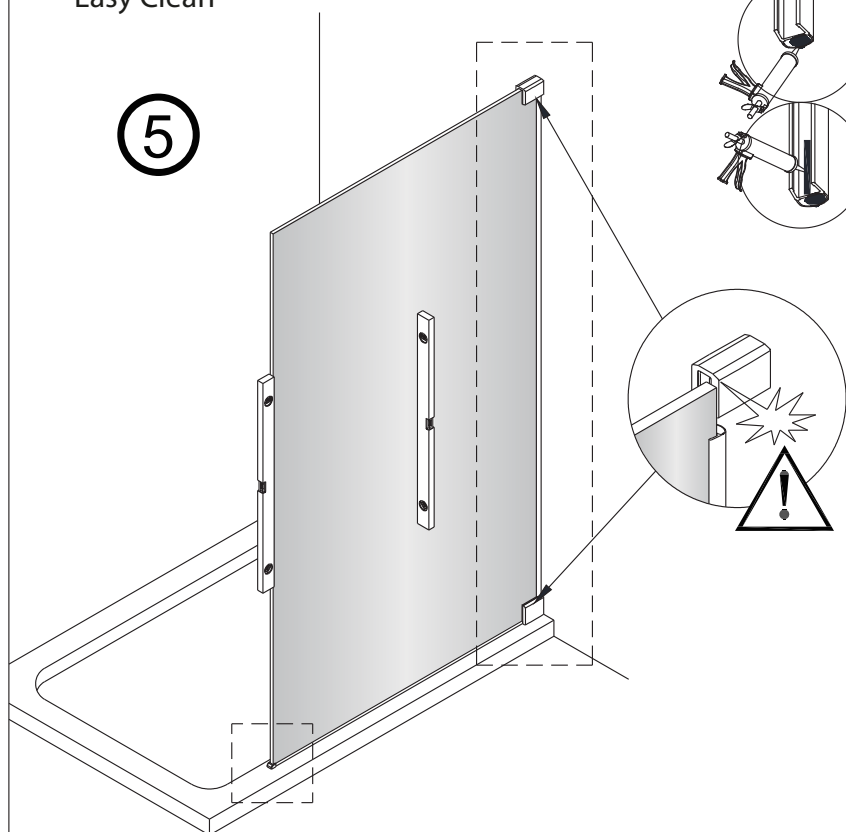


Vnitřní strana koutu



⑥

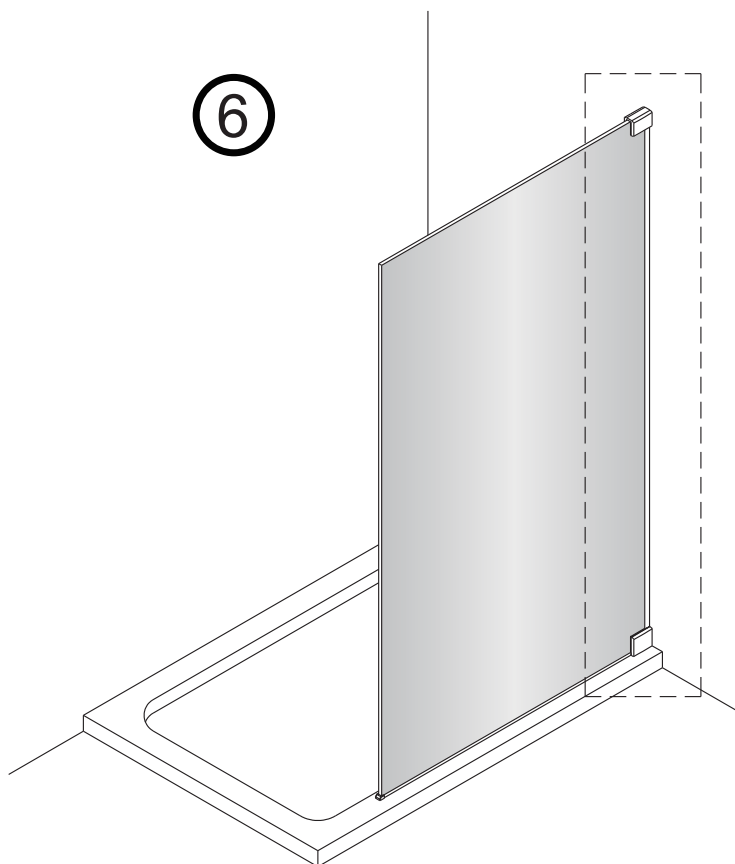

Adjust the position of the water-proof strip and make the strip and wall in close contact so as to realize the best water resistance.

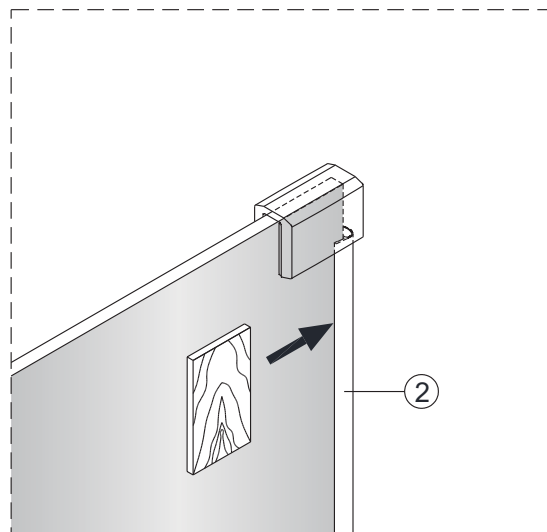

⑦

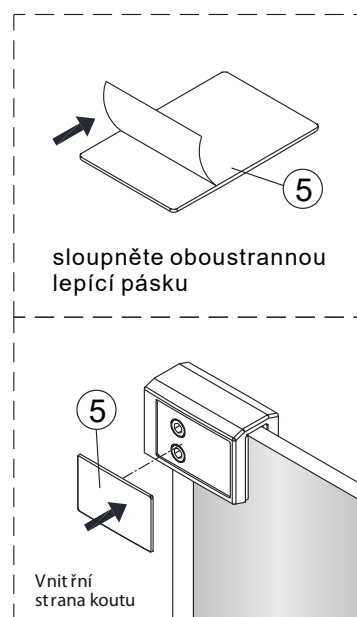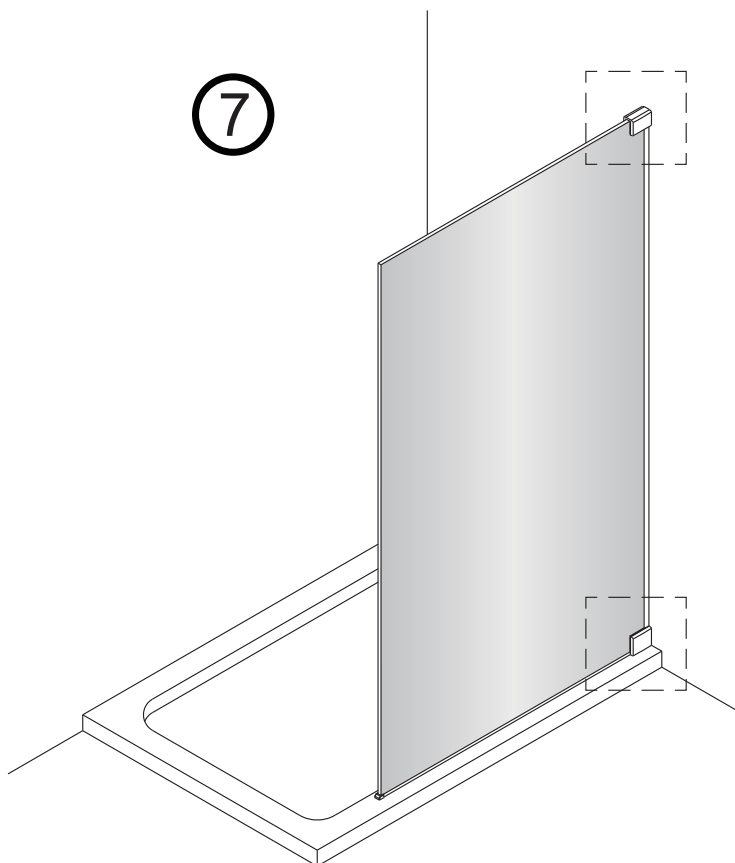

8

