






Instalační návod
Inštalacný návod
Mounting Instruction
Montageanleitung
Инструкция по установке

SATTEXQBB80CT
SATTEXQBB90CT
SATTEXQBB100CT
SATTEXQBB80CRT
SATTEXQBB90CRT
SATTEXQBB100CRT

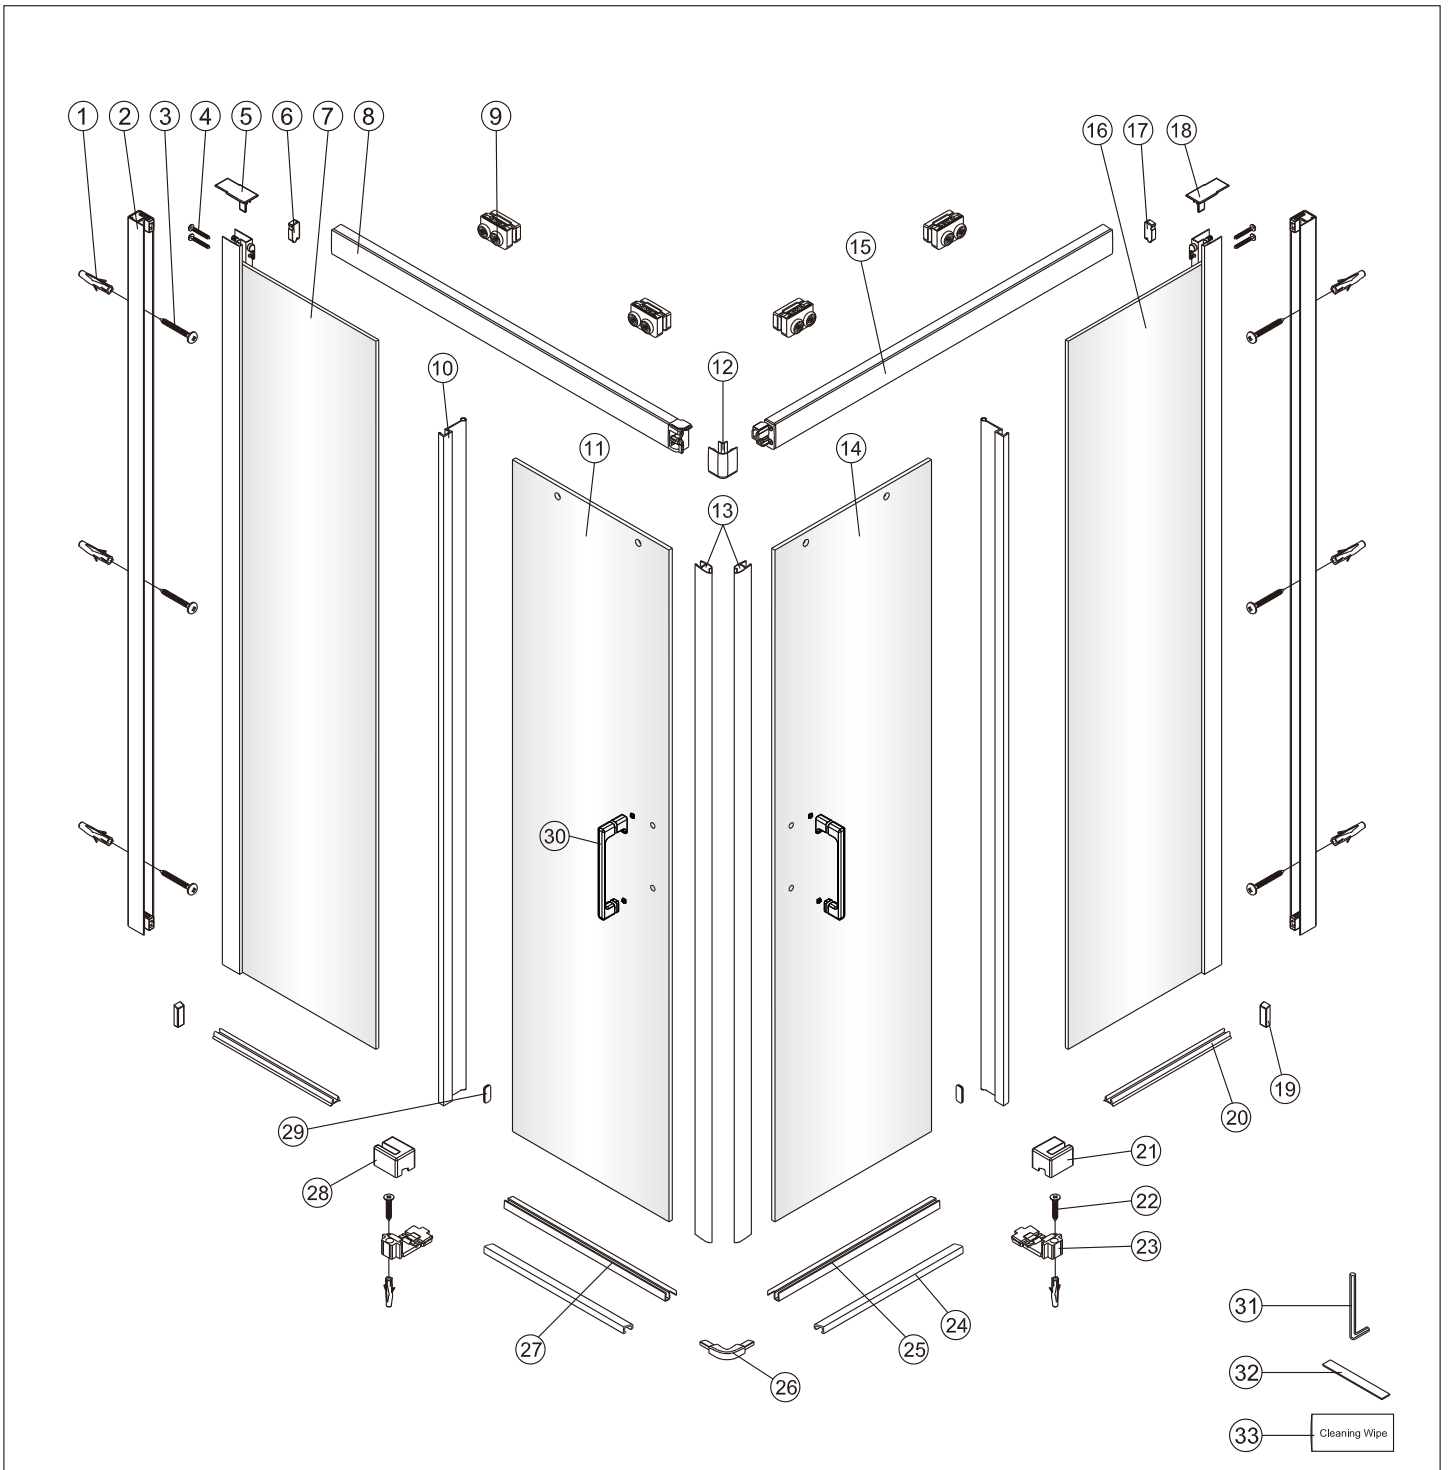





 x8	 x2	 x6 ST4x40	 x4 ST4x30	 x1	 x1	 x1	 x1	 x4	 x2
 x1	 x1	 1set	 x1	 x1	 x1	 x1	 x1	 x2	 x2
 x1	 x2 ST4x30	 x2	 x2	 x1	 x1	 x1	 x1	 x2	 x2
 x1 3mm	 x6	 x2	 Drill bit: $\varnothing 6.0$ mm Drill bit: $\varnothing 3.2$ mm						

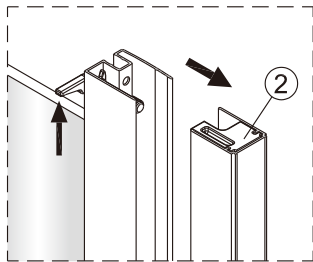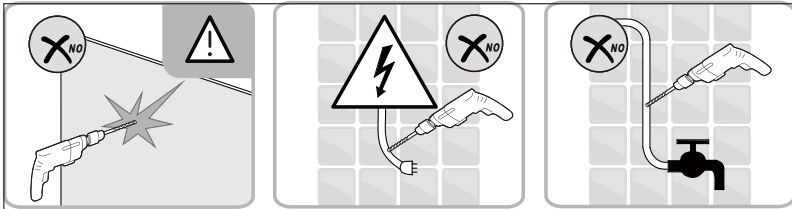








1

	A(mm)
SATTEXQBB80CT	769~789
SATTEXQBB80CRT	
SATTEXQBB90CT	869~889
SATTEXQBB90CRT	
SATTEXQBB100CT	969~989
SATTEXQBB100CRT	

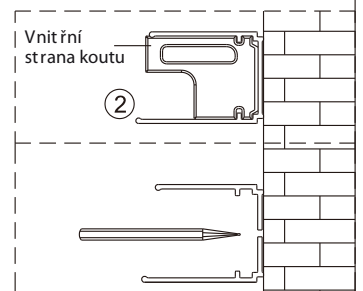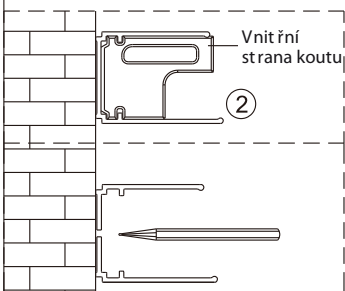


Ø6 mm

Ø6 mm

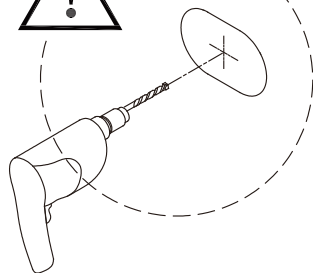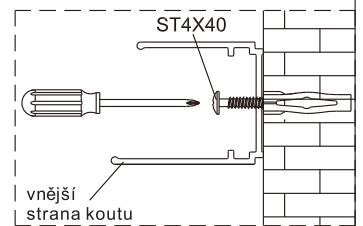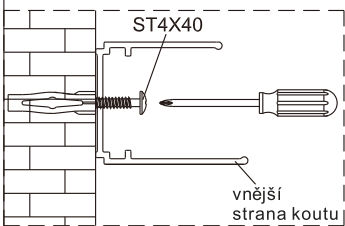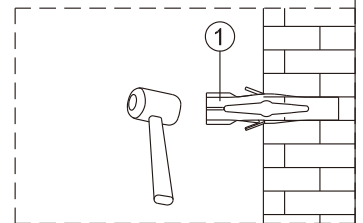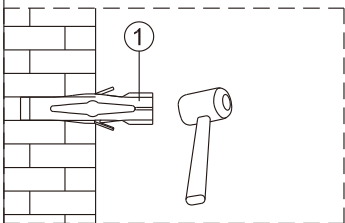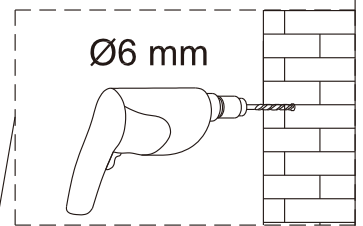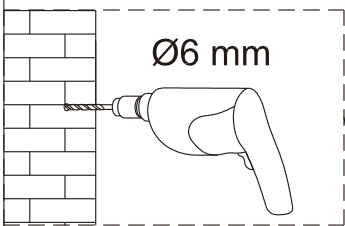


2

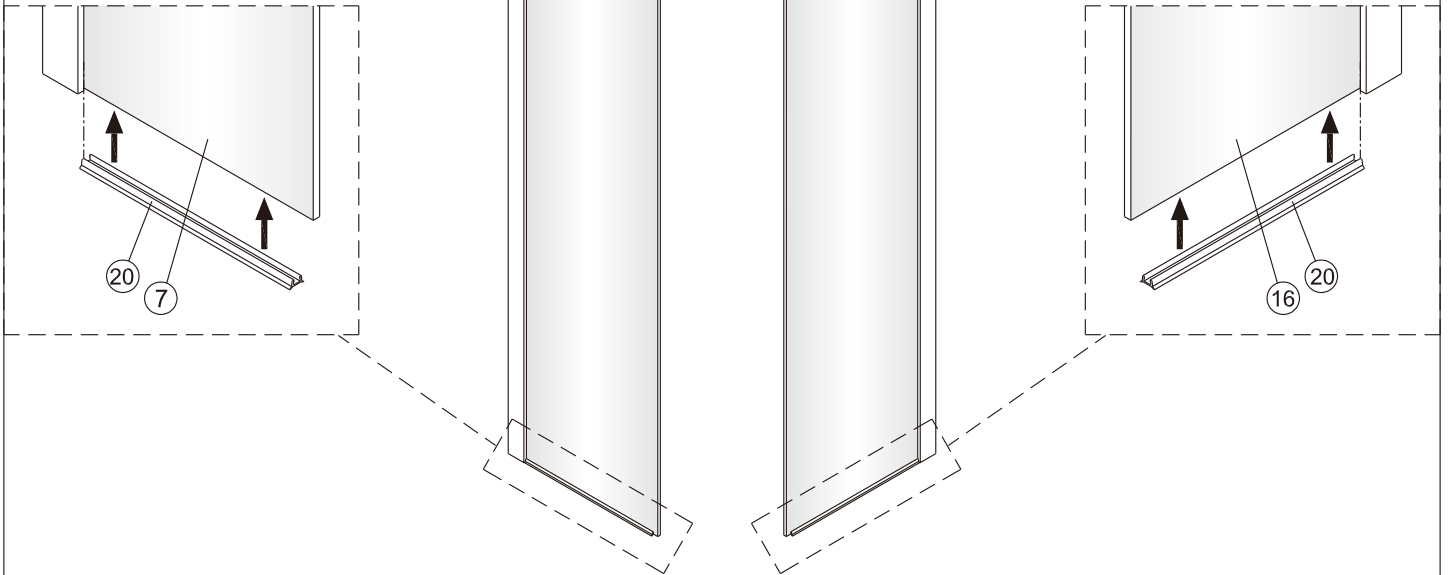


Poznámka: Vnitřní strana koutu
- Easy Clean


3

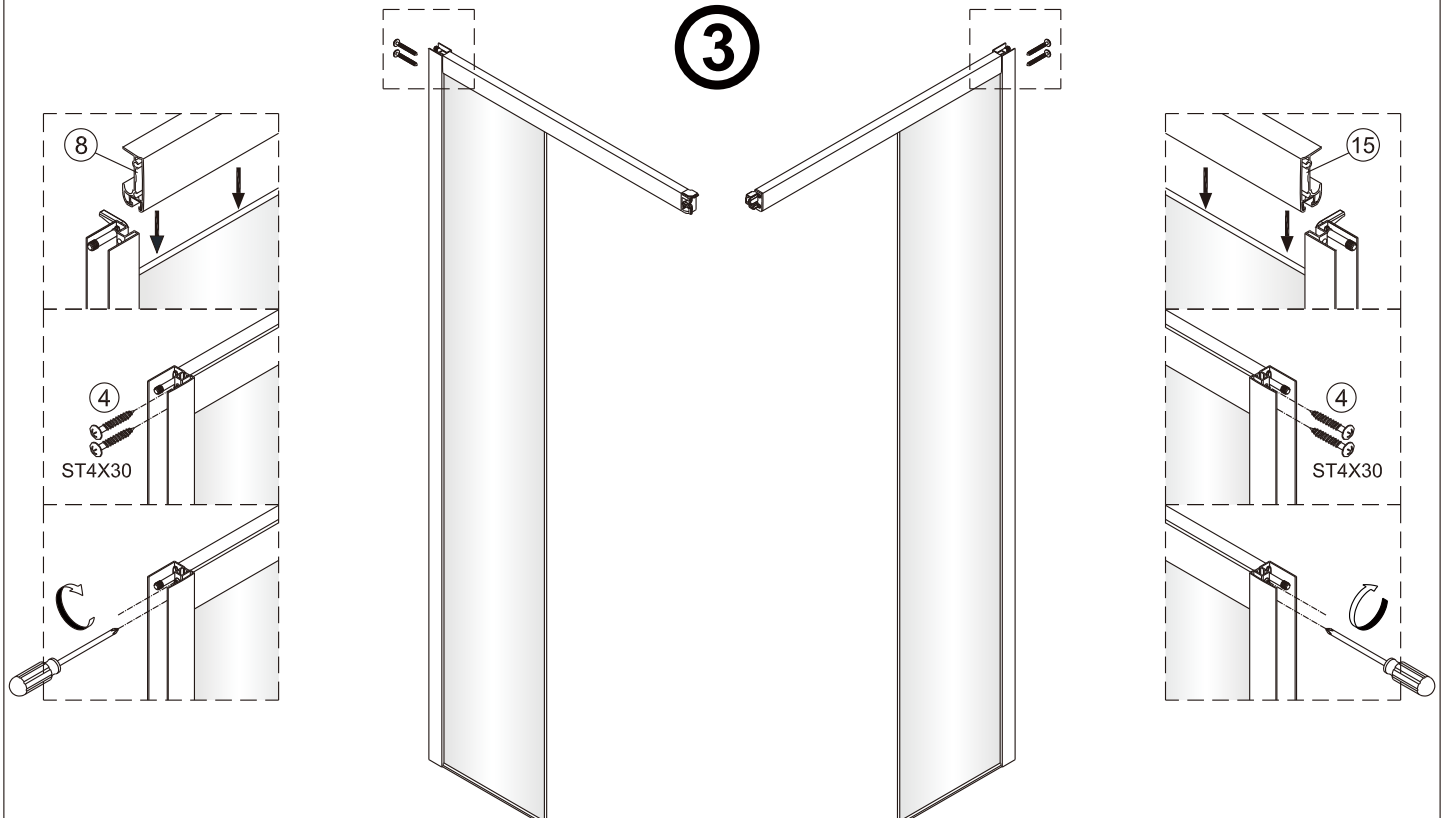









Poznámka: Vnitřní strana koutu
- Easy Clean


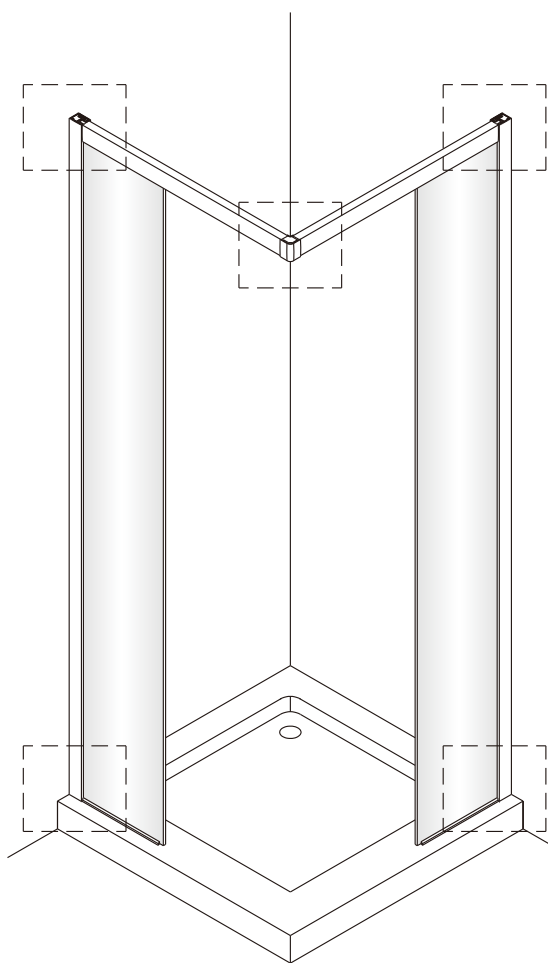









4

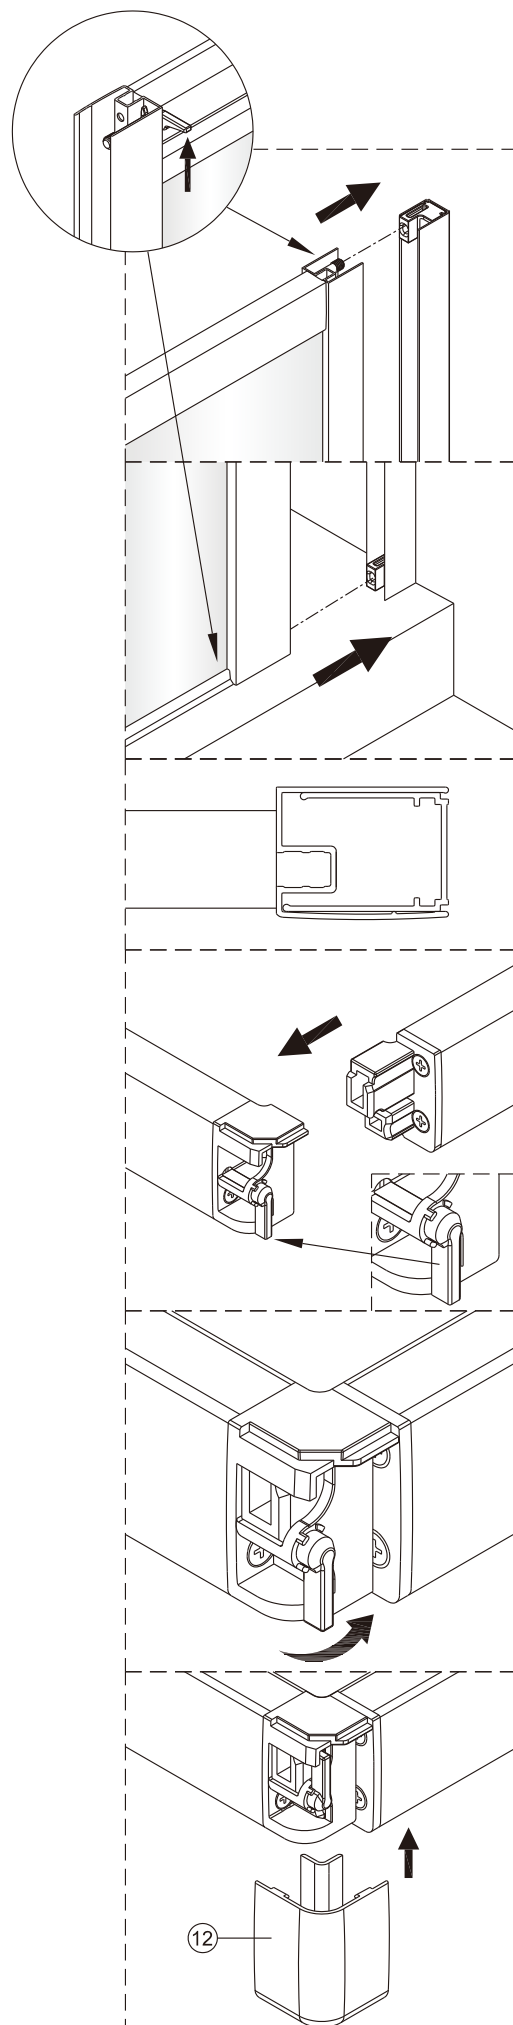

5

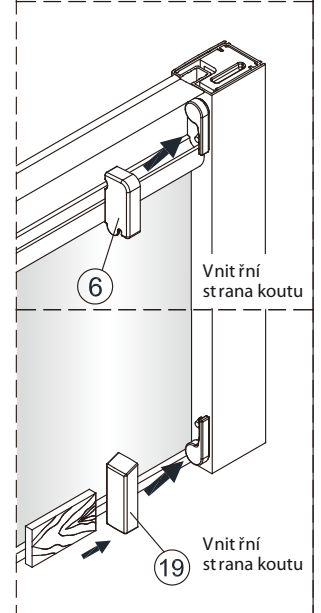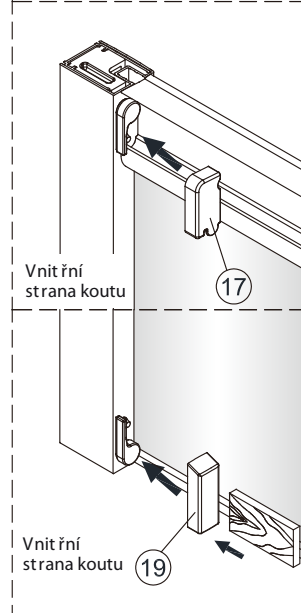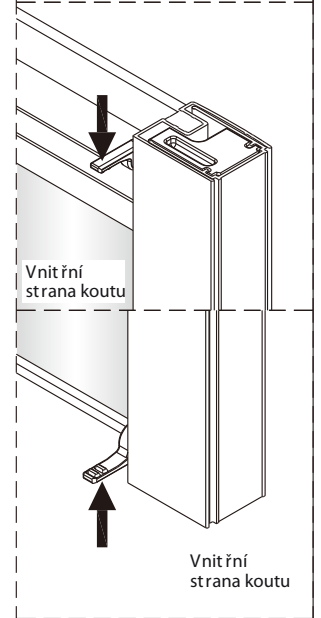
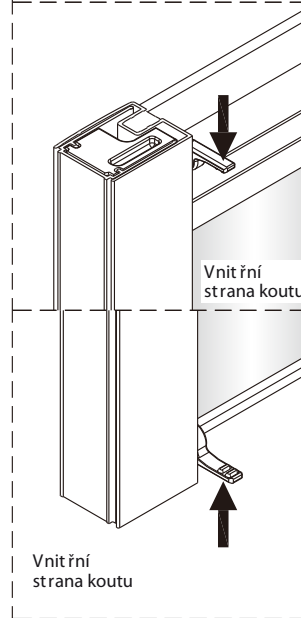
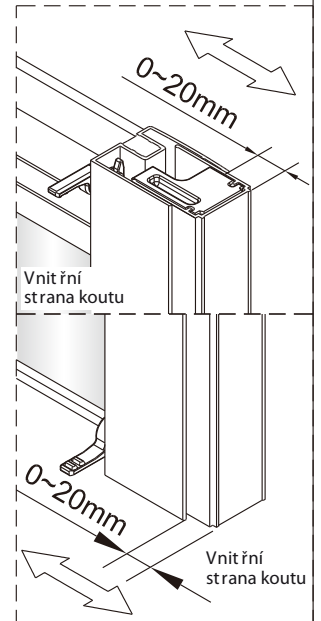
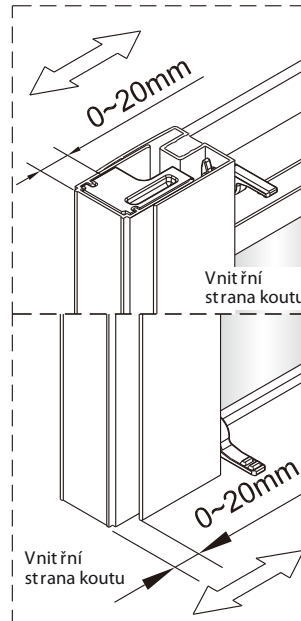
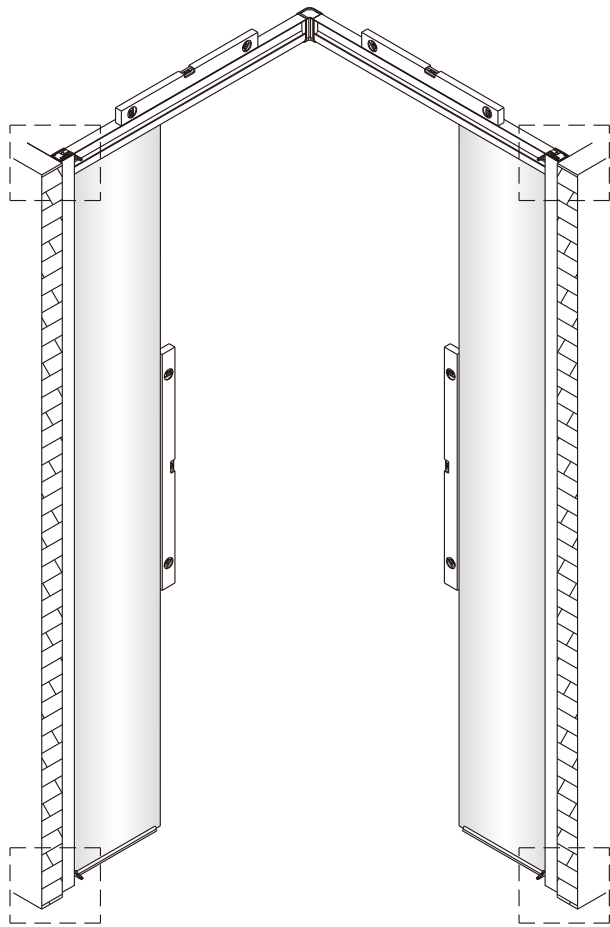


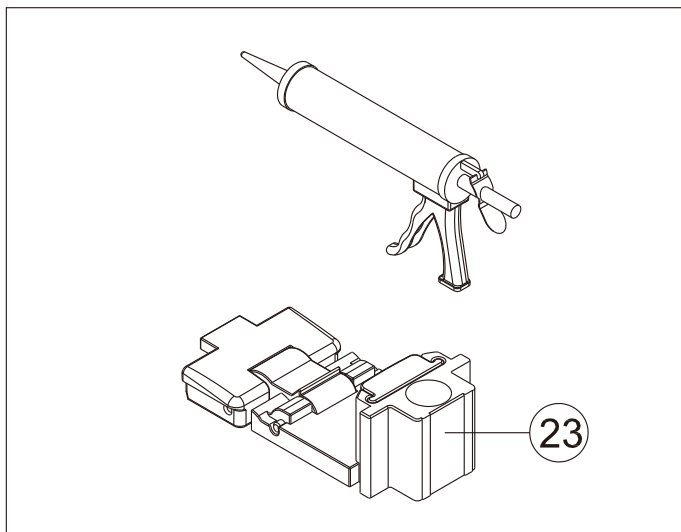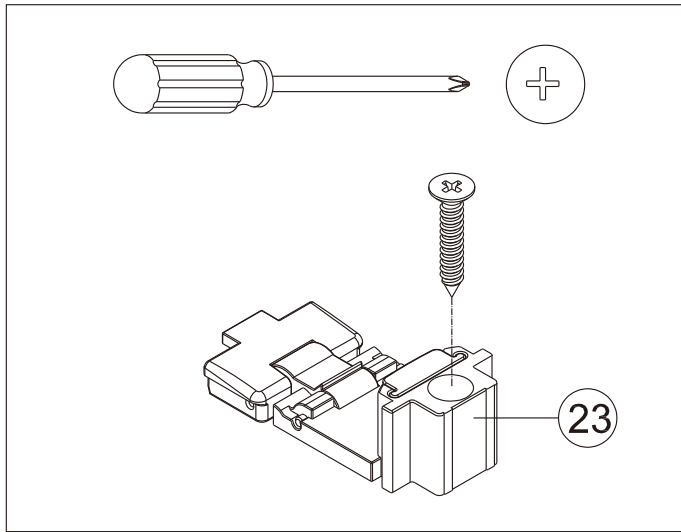

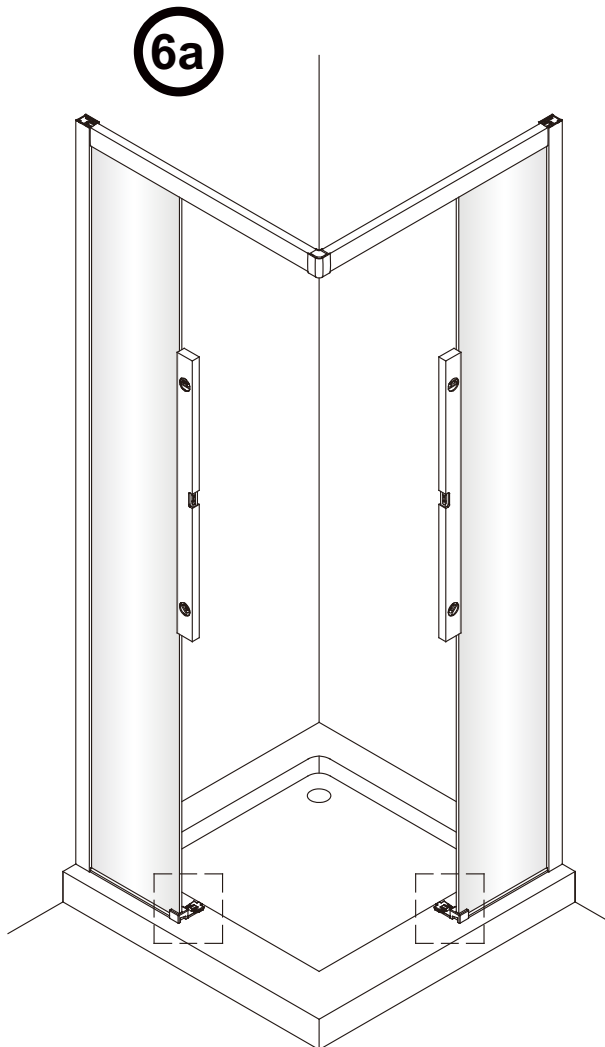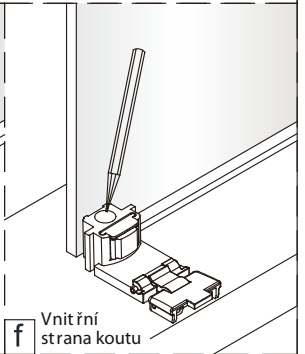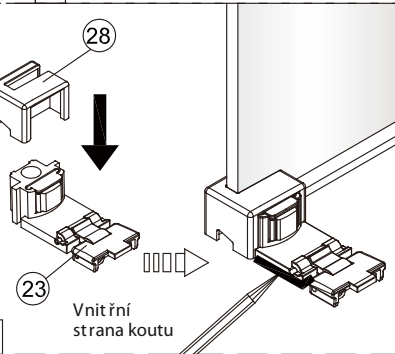
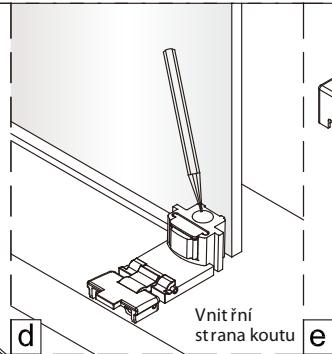
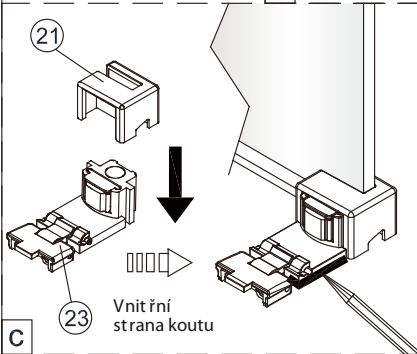
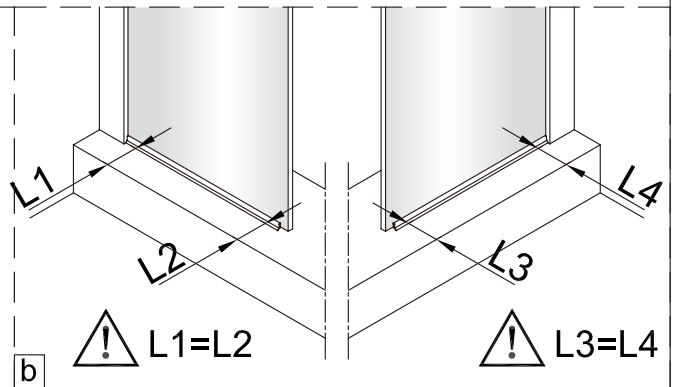
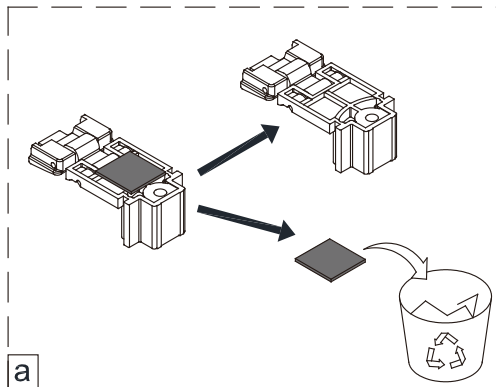


Možnost A: na akrylátovou vaničku / vaničku z litého mramoru


Možnost B: na dlažbu

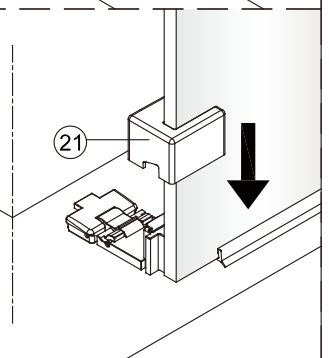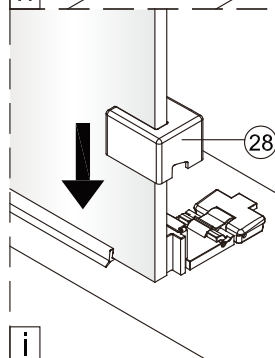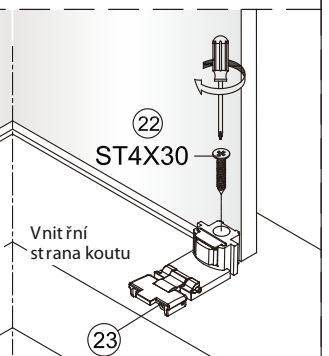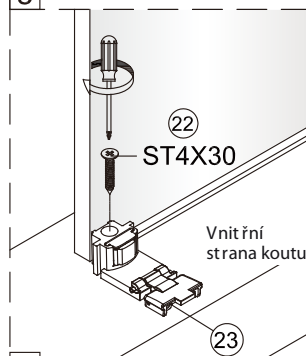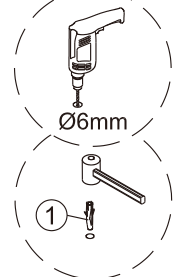


6b

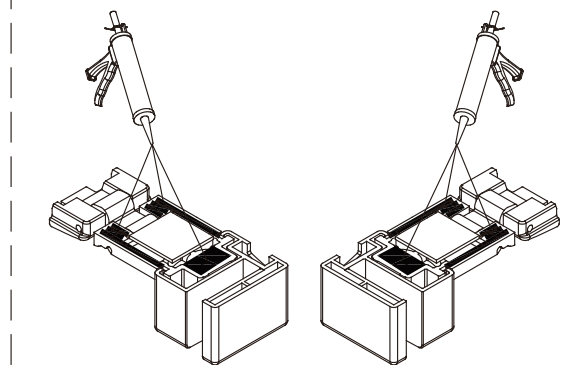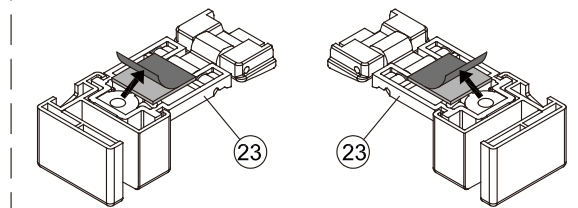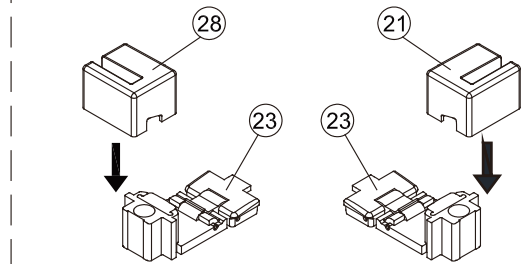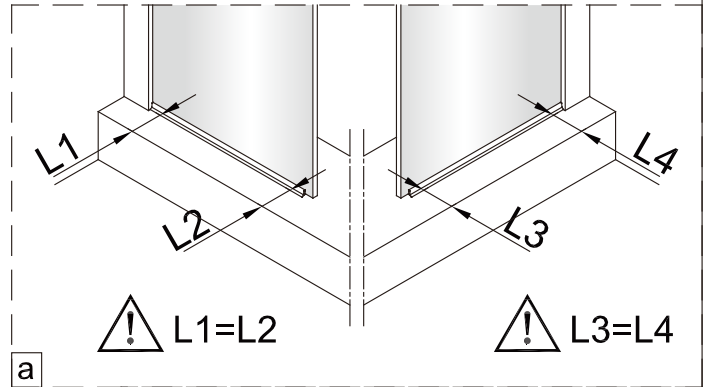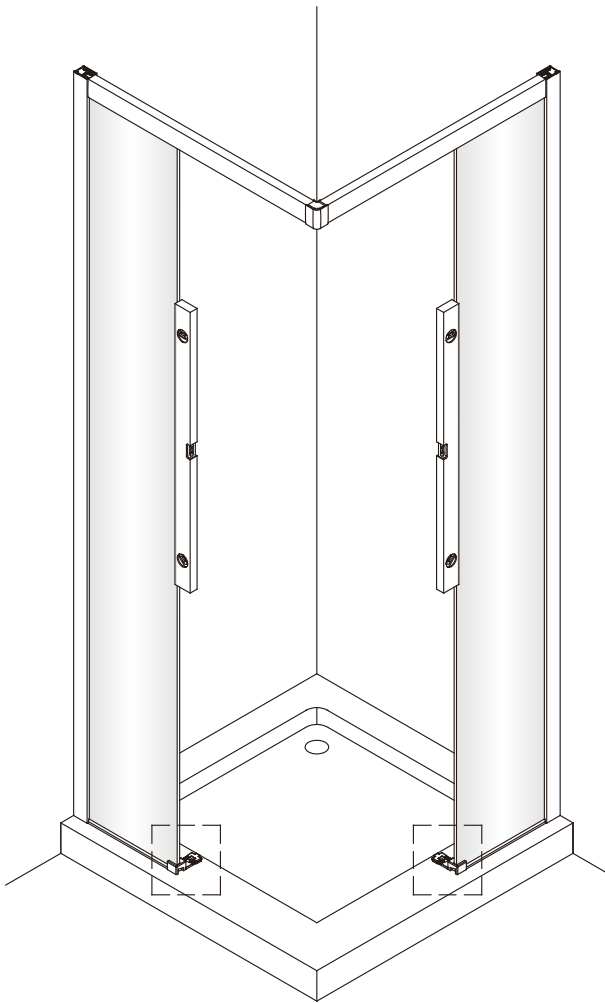

Odmastěte podlahu přiloženým
čisticím ubrouskem.

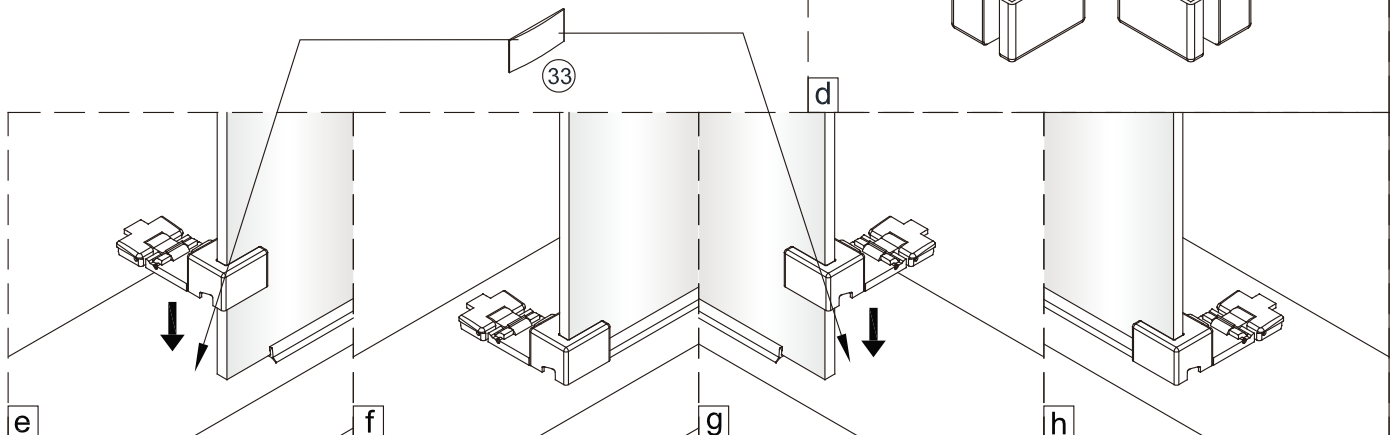


7

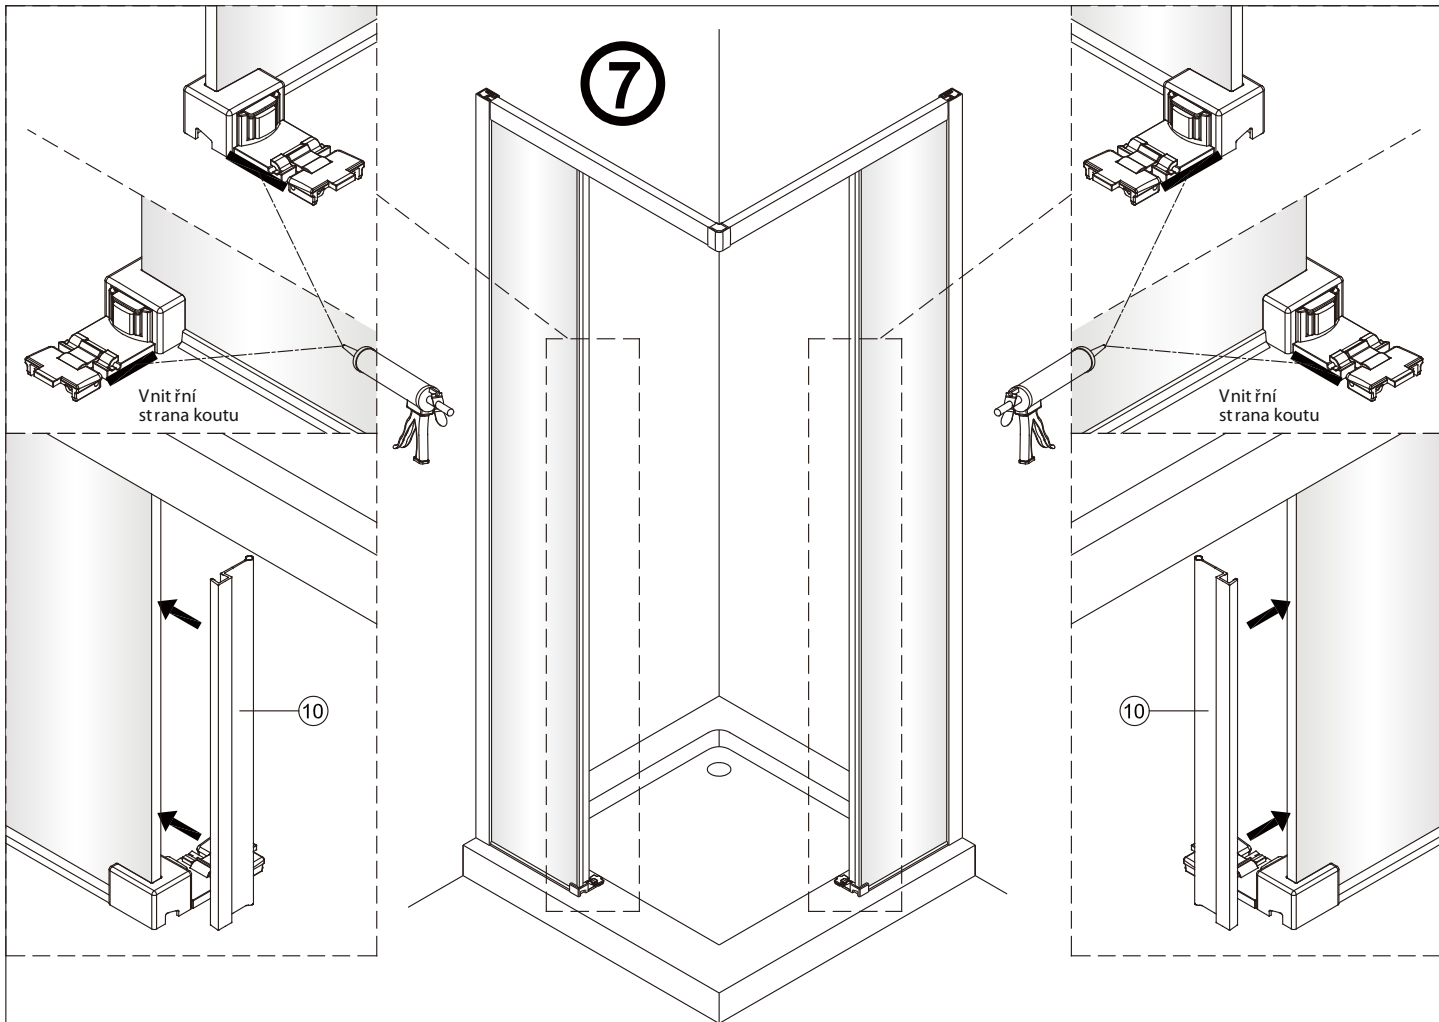





8

Poznámka: Vnitřní strana koutu
- Easy Clean



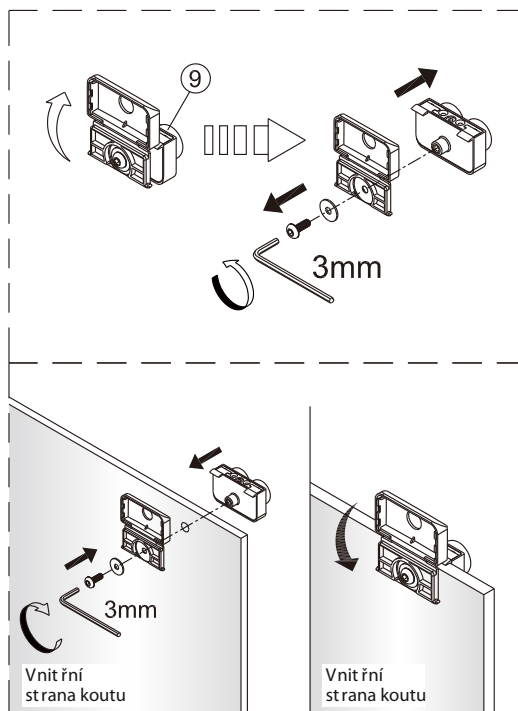


Poznámka: Vnitřní strana koutu
- Easy Clean


9

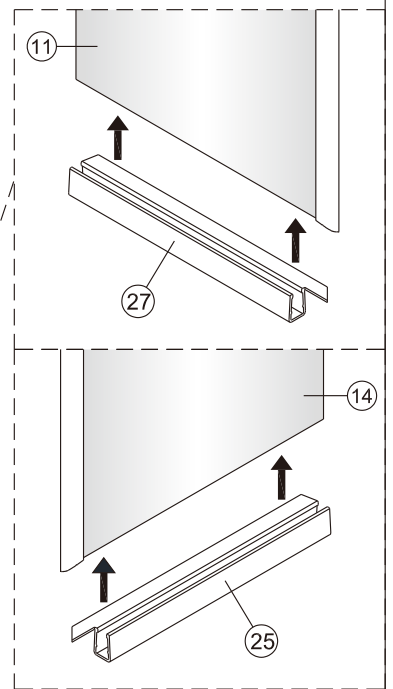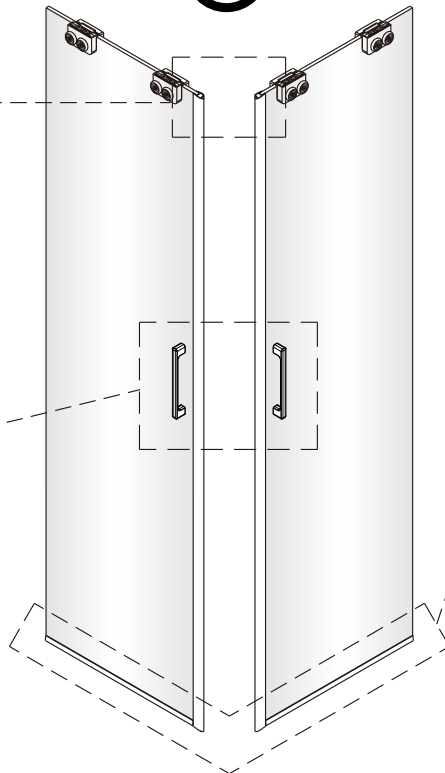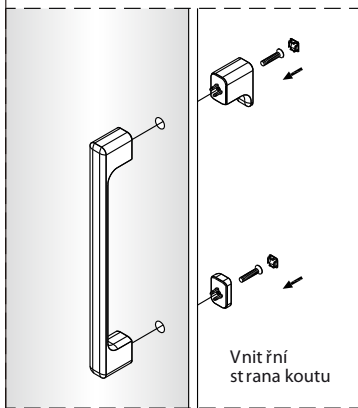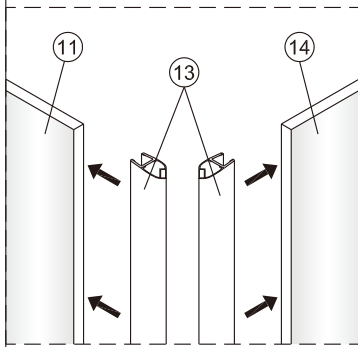


10

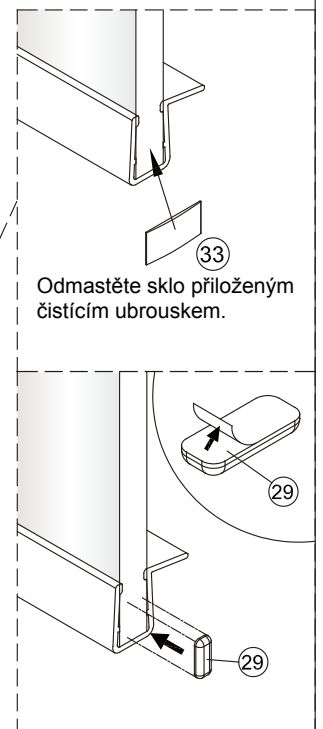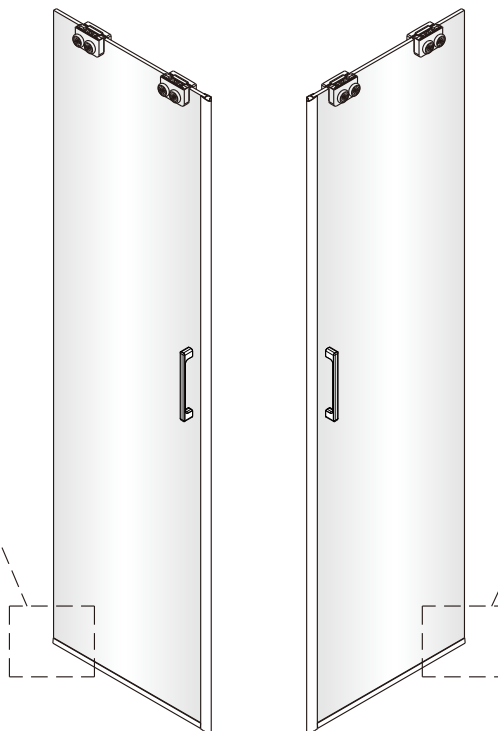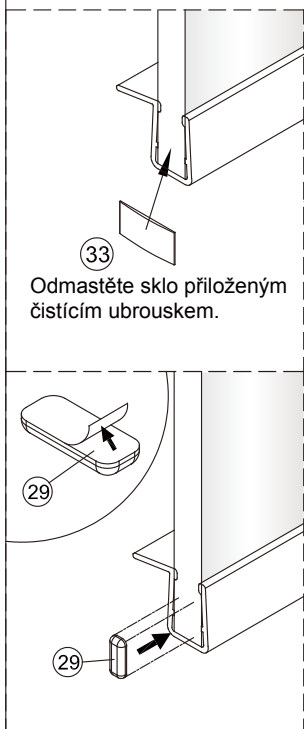


11

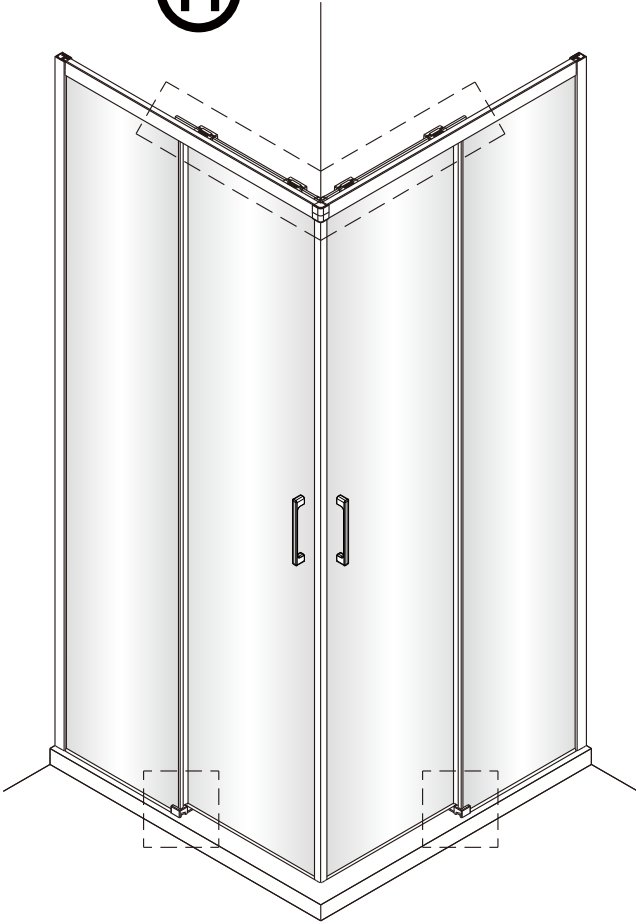


Poznámka: Vnitřní strana koutu
- Easy Clean


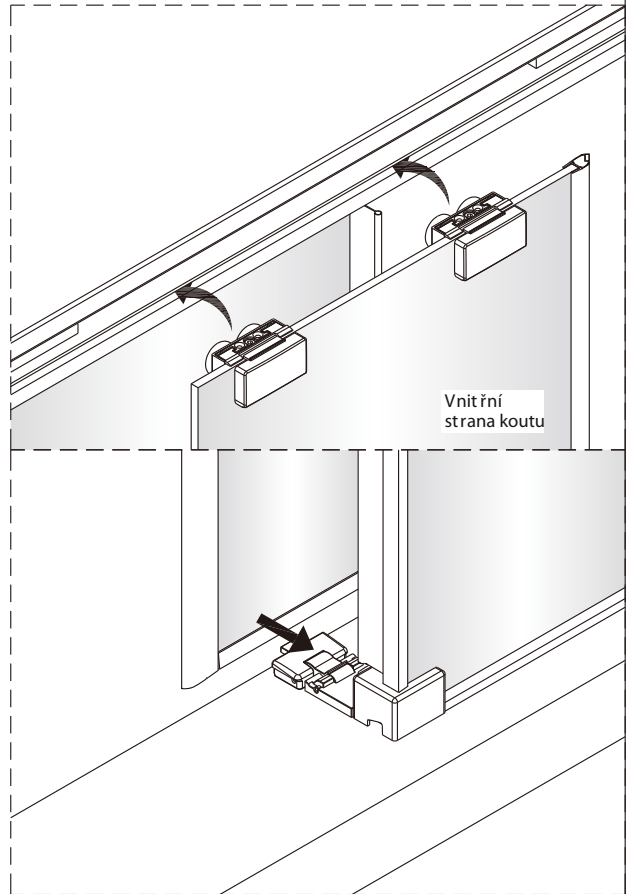


12

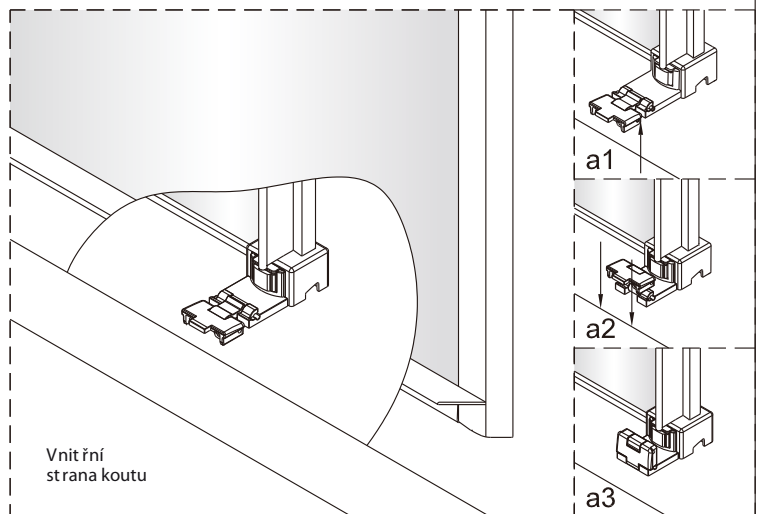


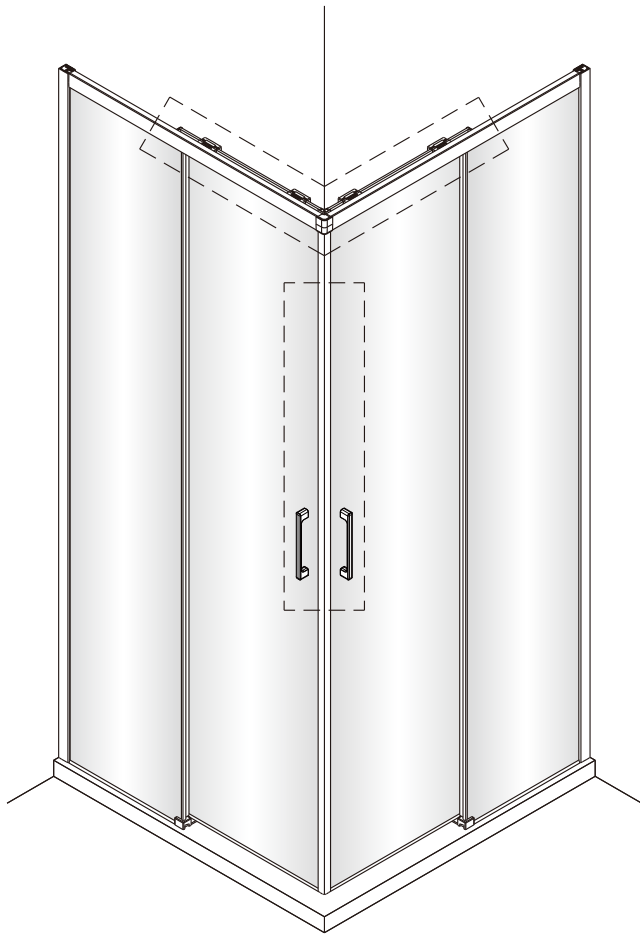


13

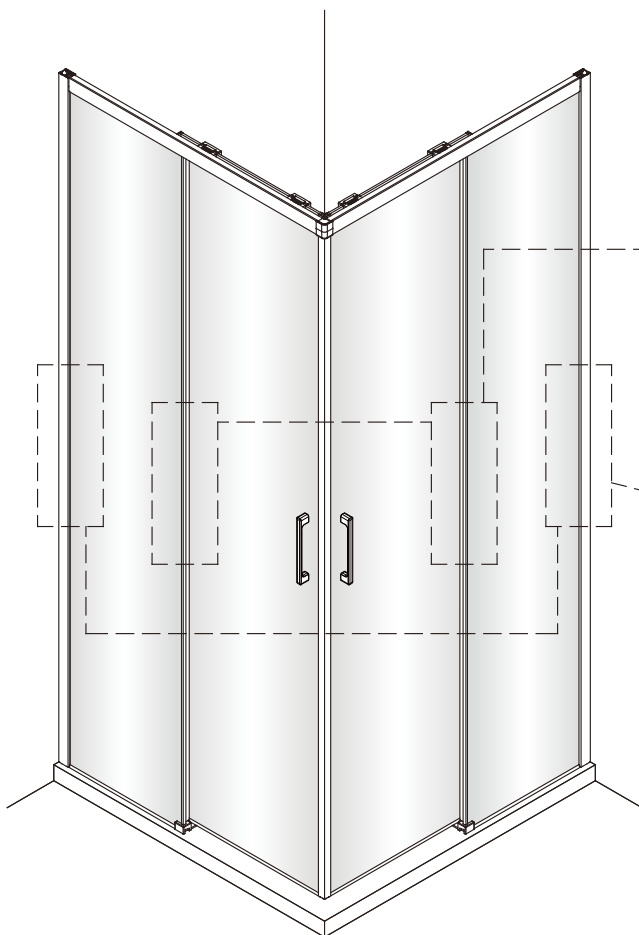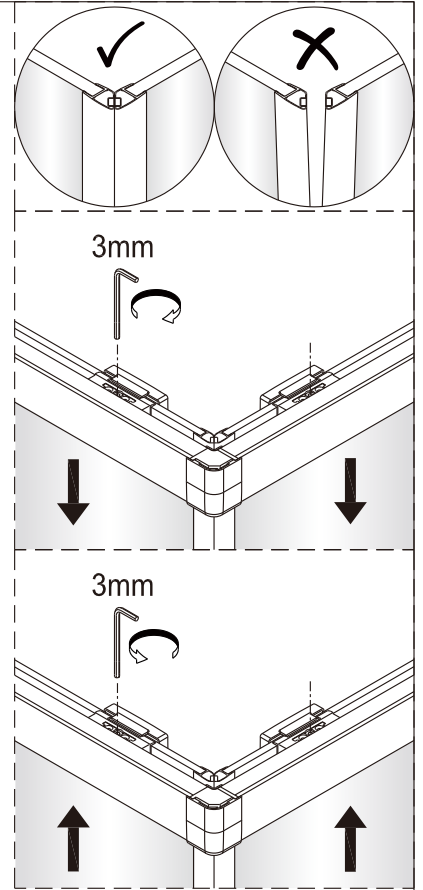



14

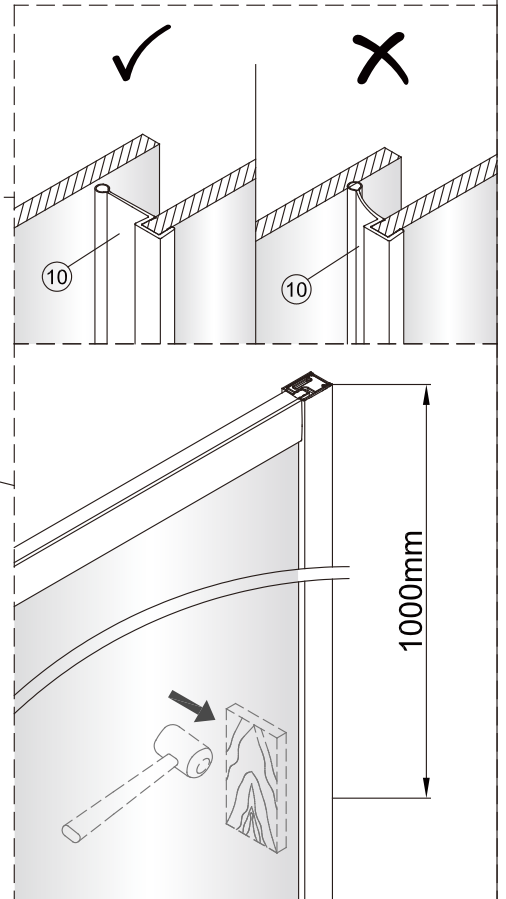






15

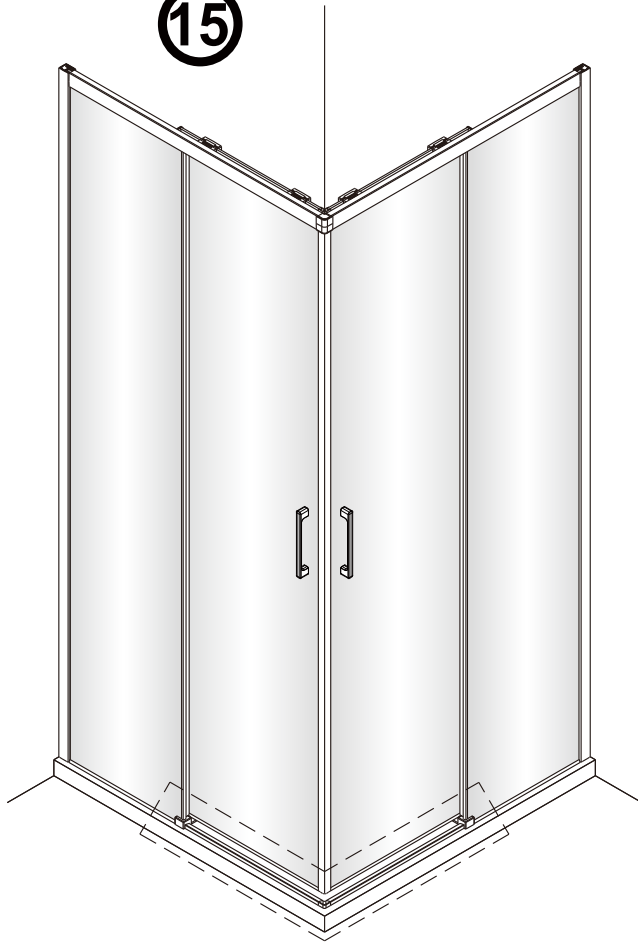

Odmastěte profil a podlahu přiloženým čistícím ubrouskem.

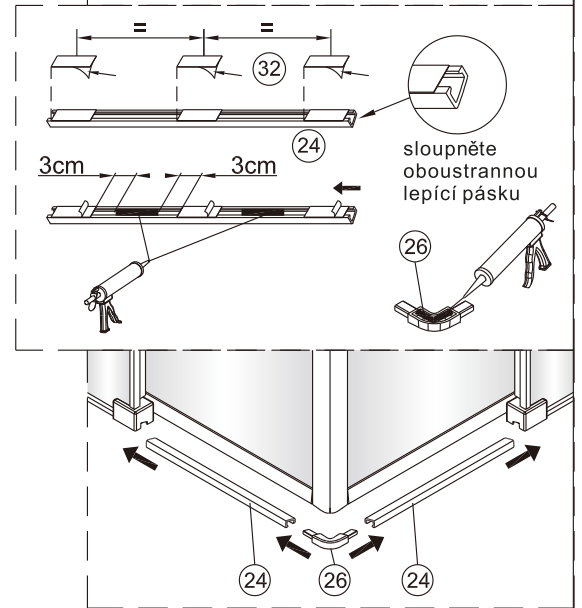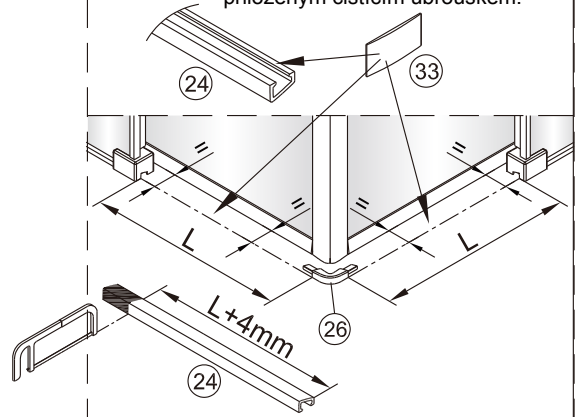

16

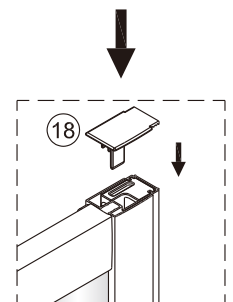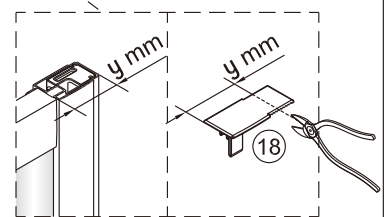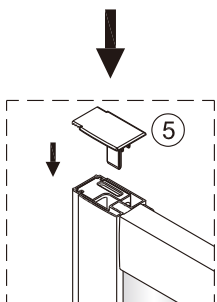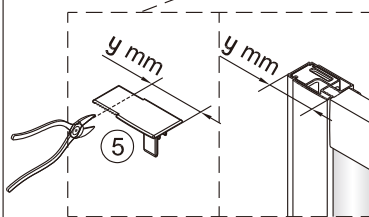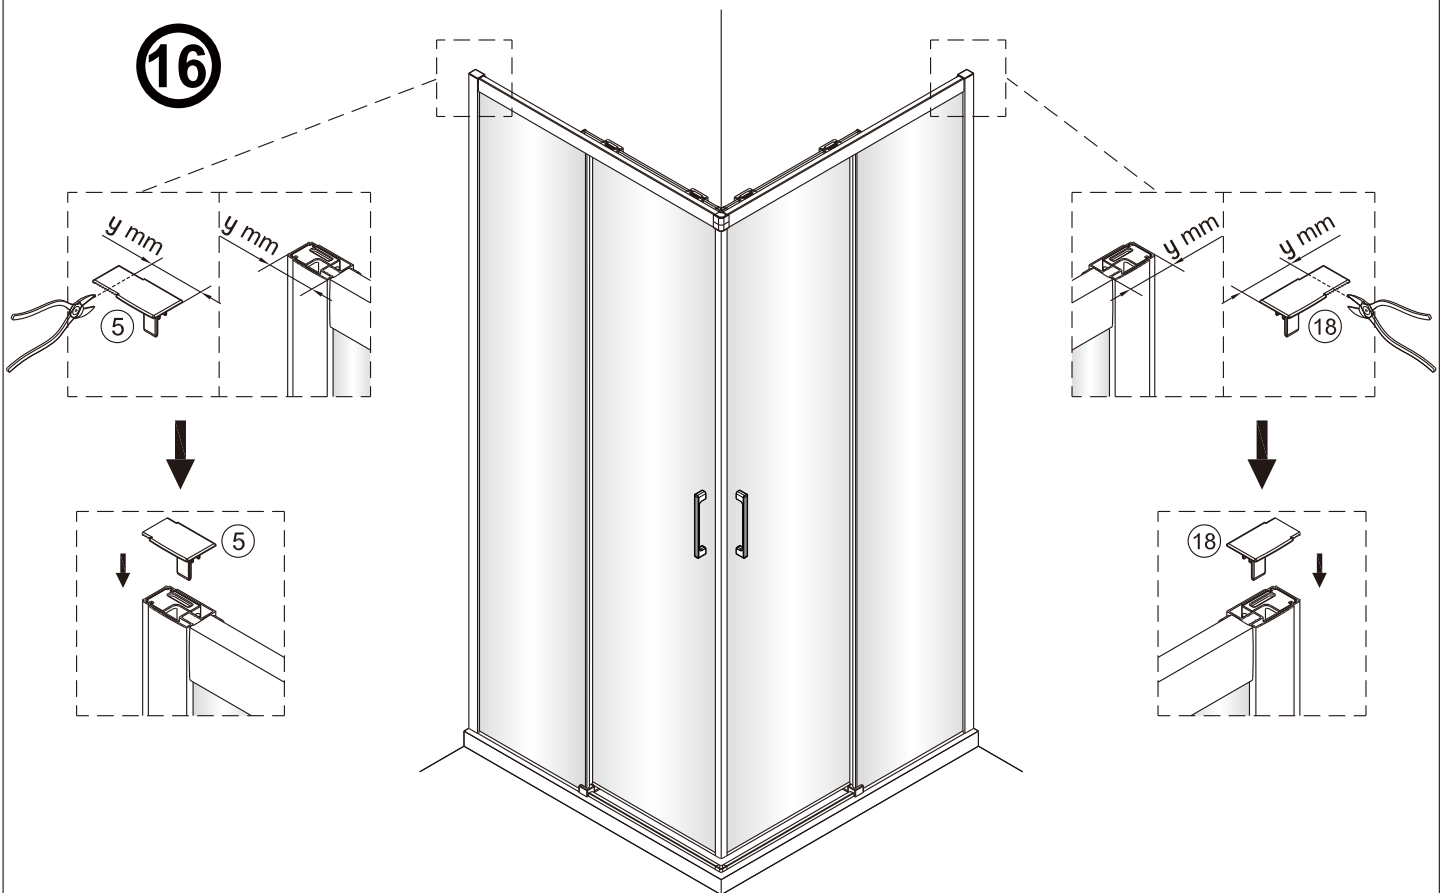

17

